




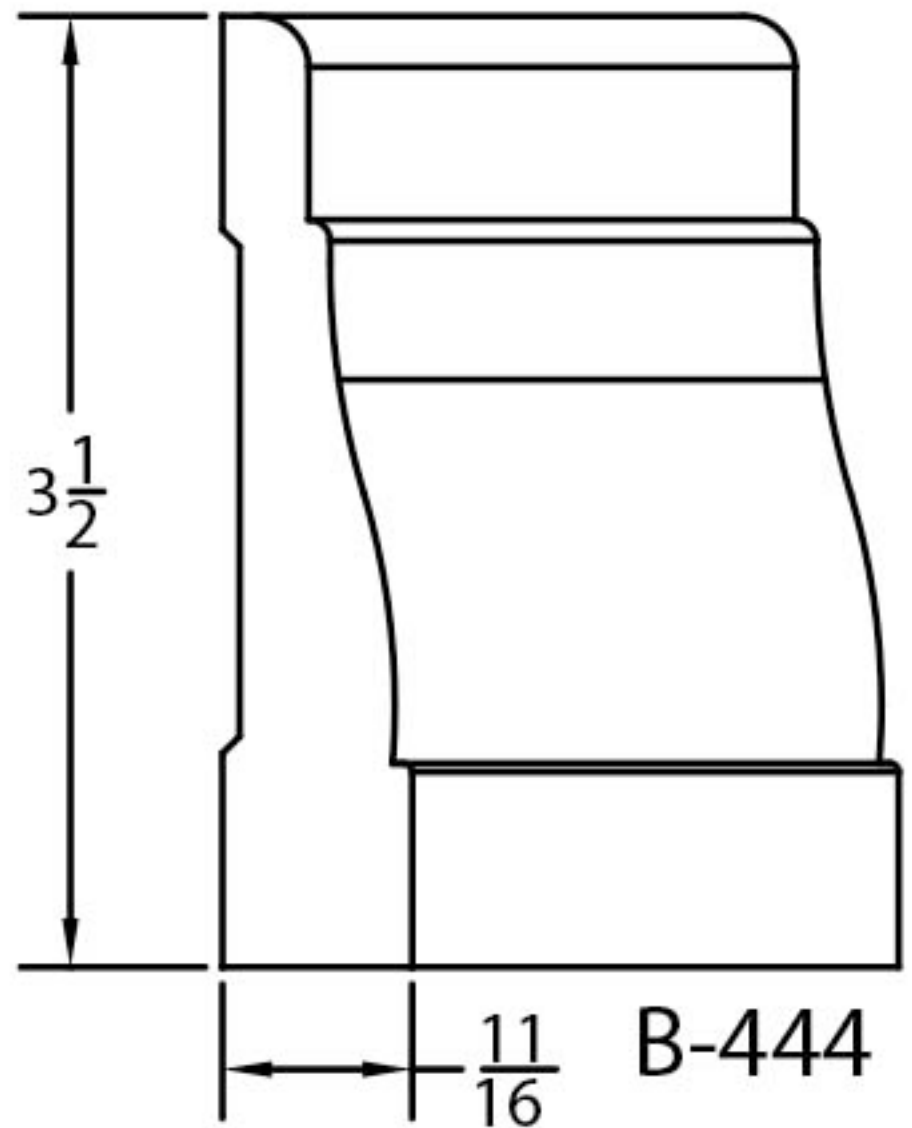



---

# BASE MOULDINGS


For a complete set of Moulding profiles, please visit our website  
[www.alpinewoodproducts.com](http://www.alpinewoodproducts.com)

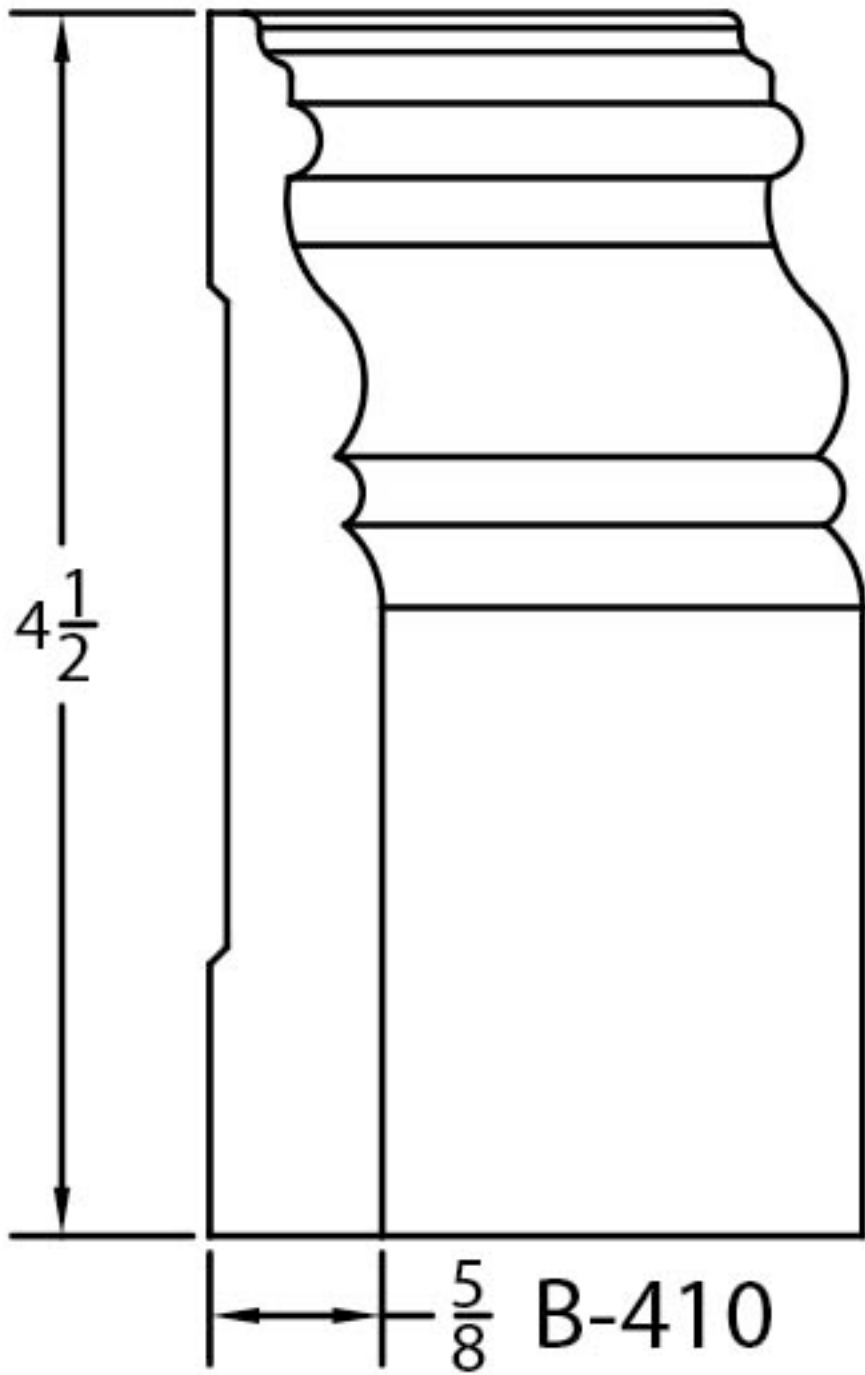

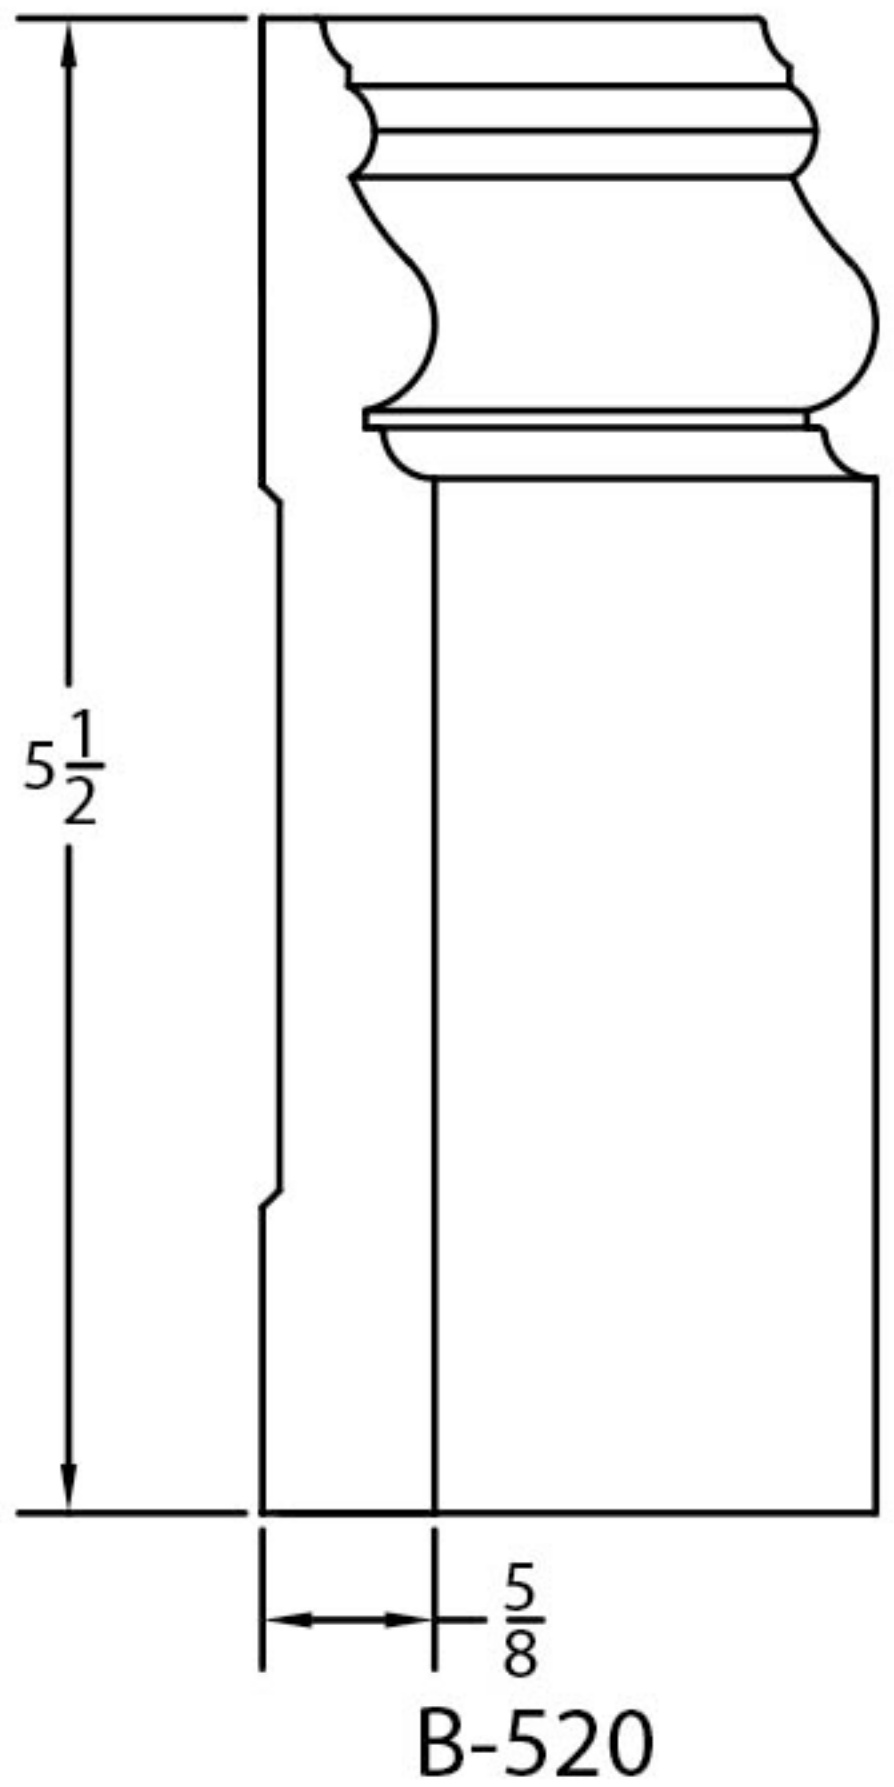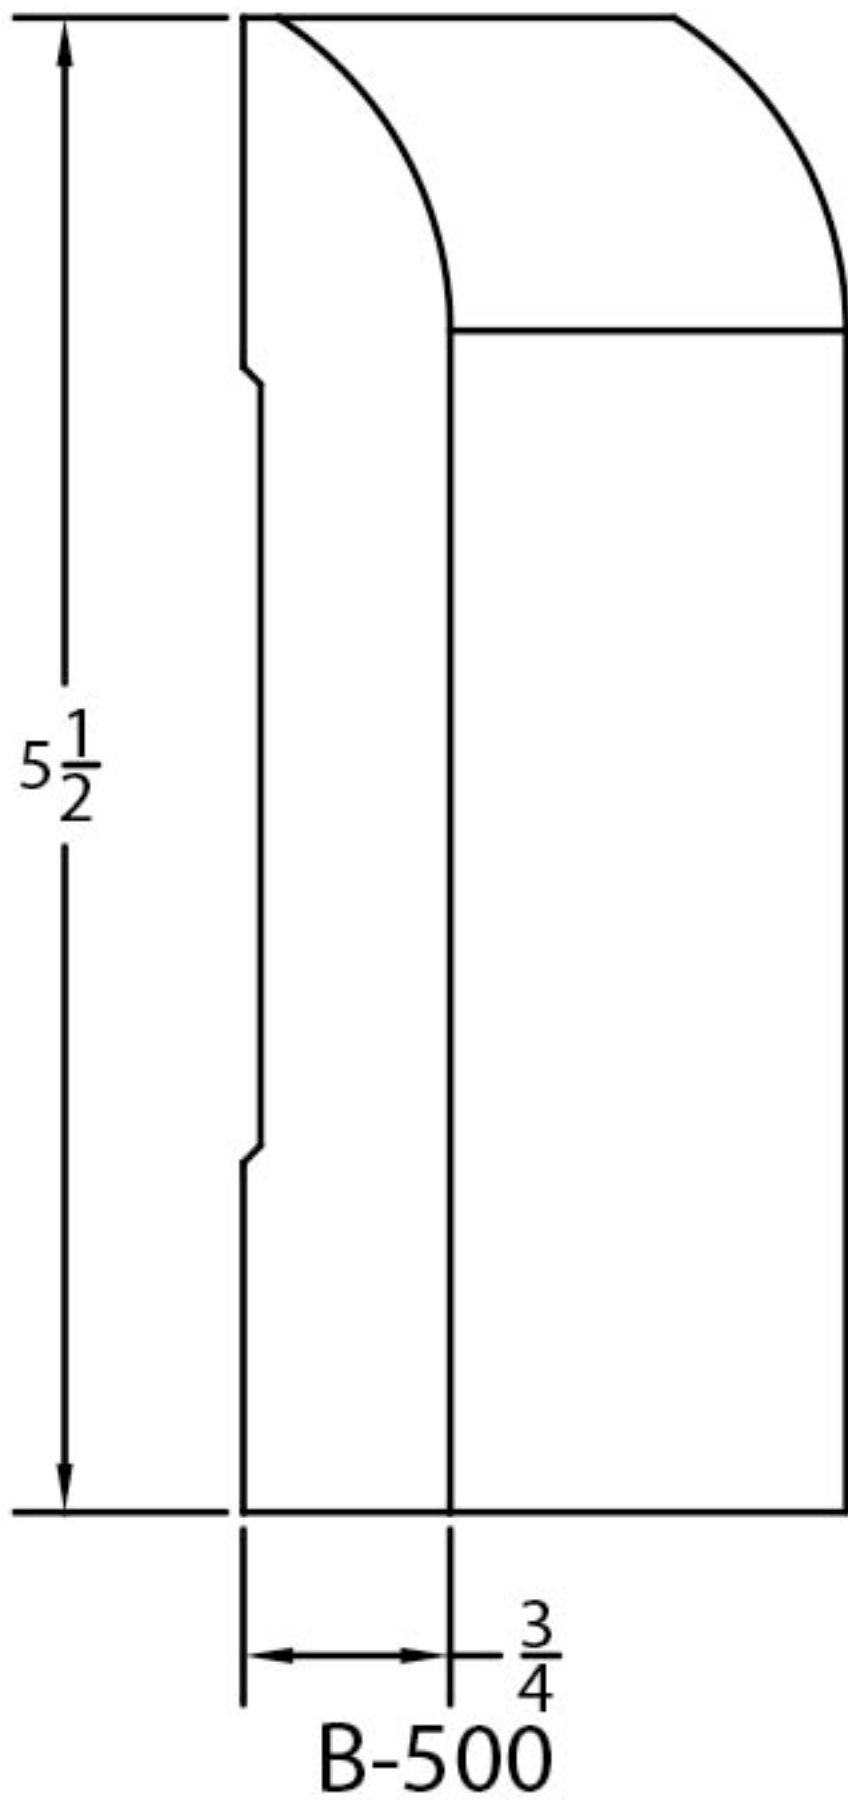


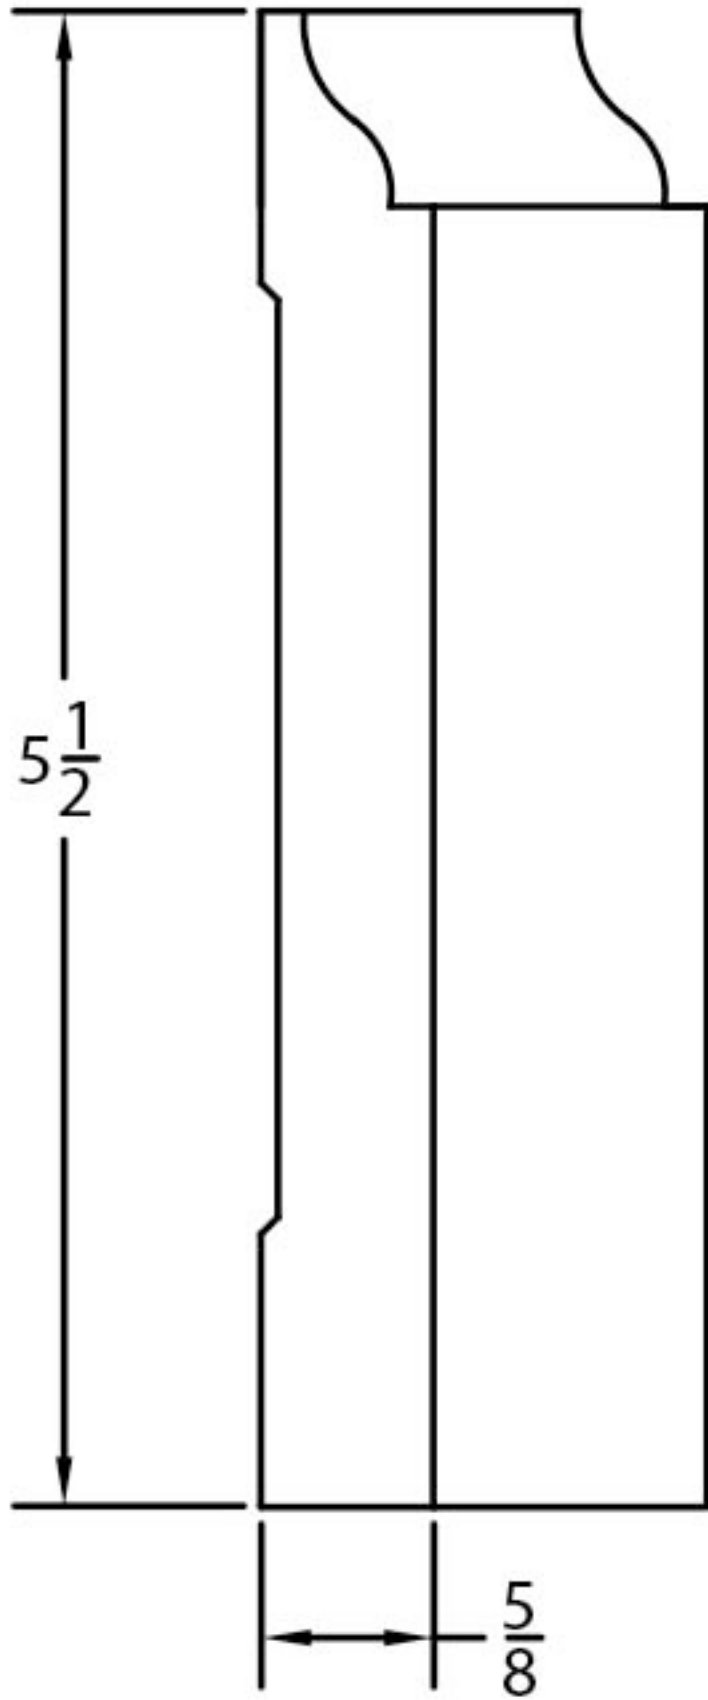


B-530

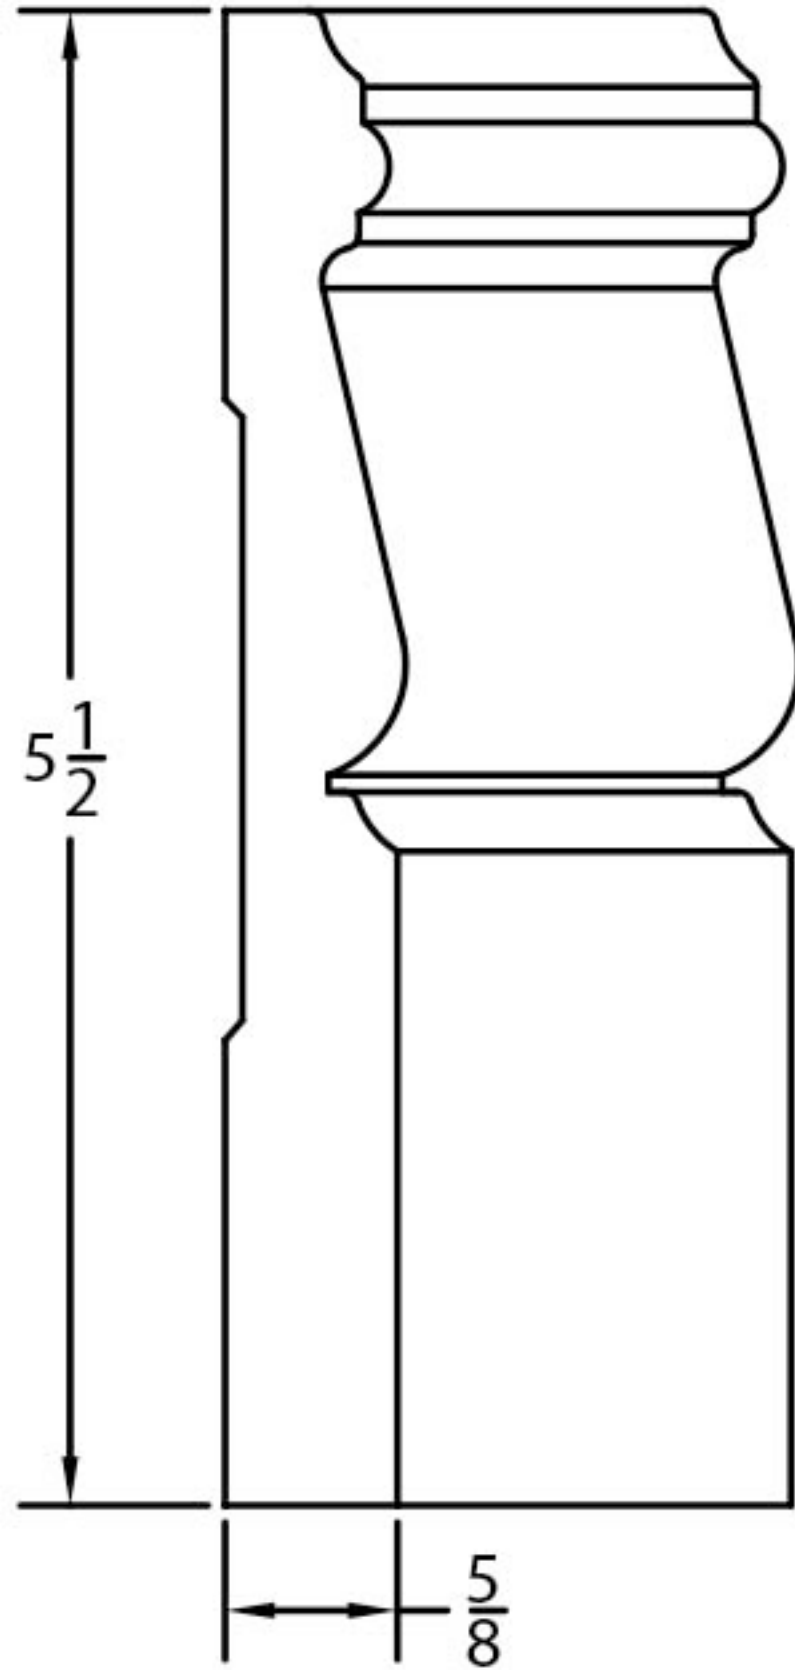


B-540

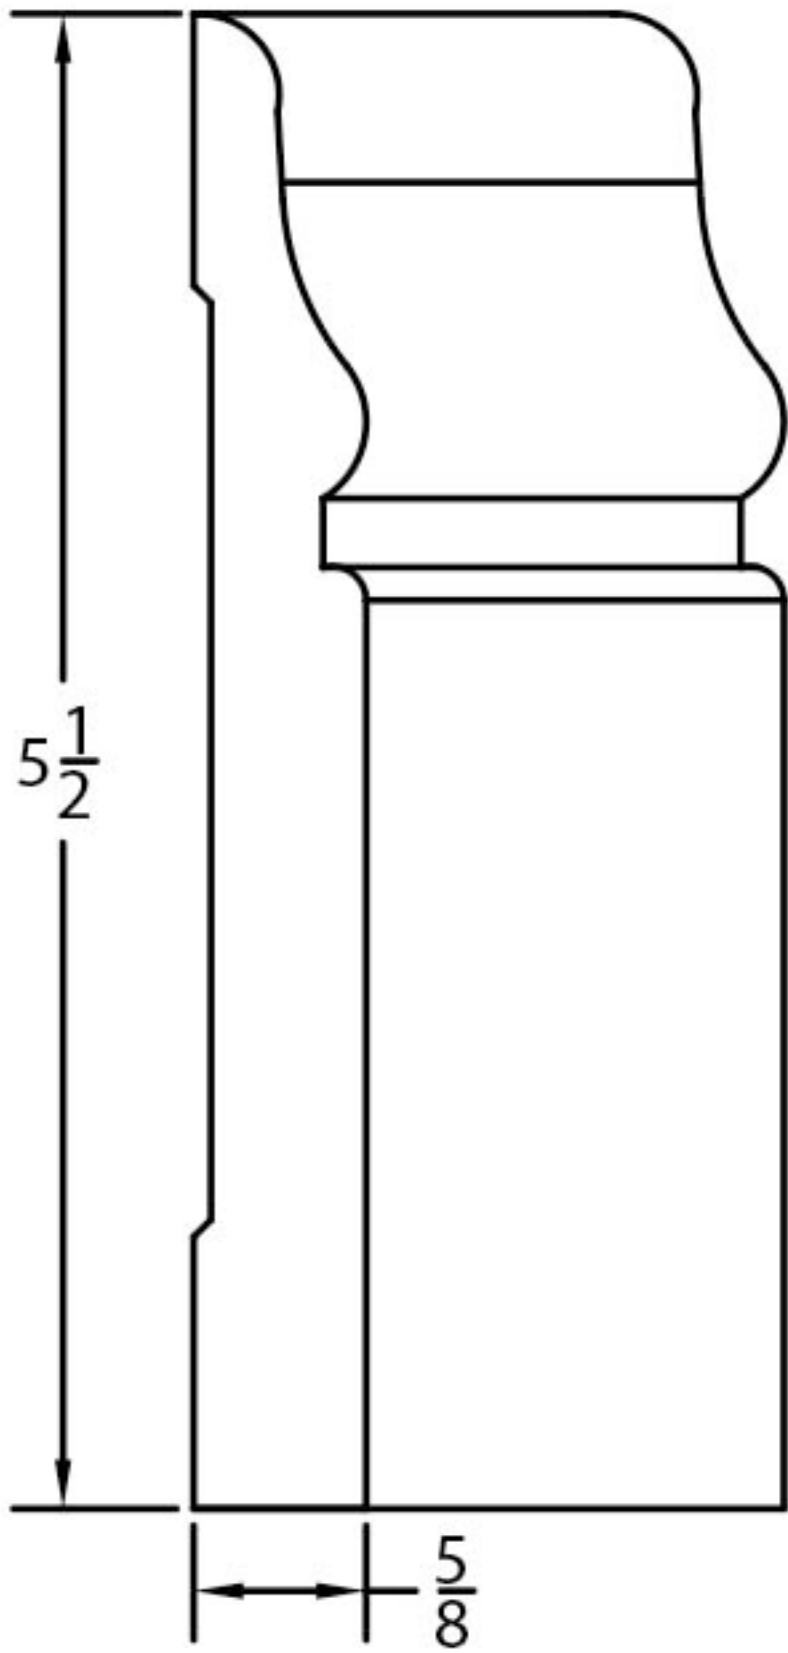







B-550





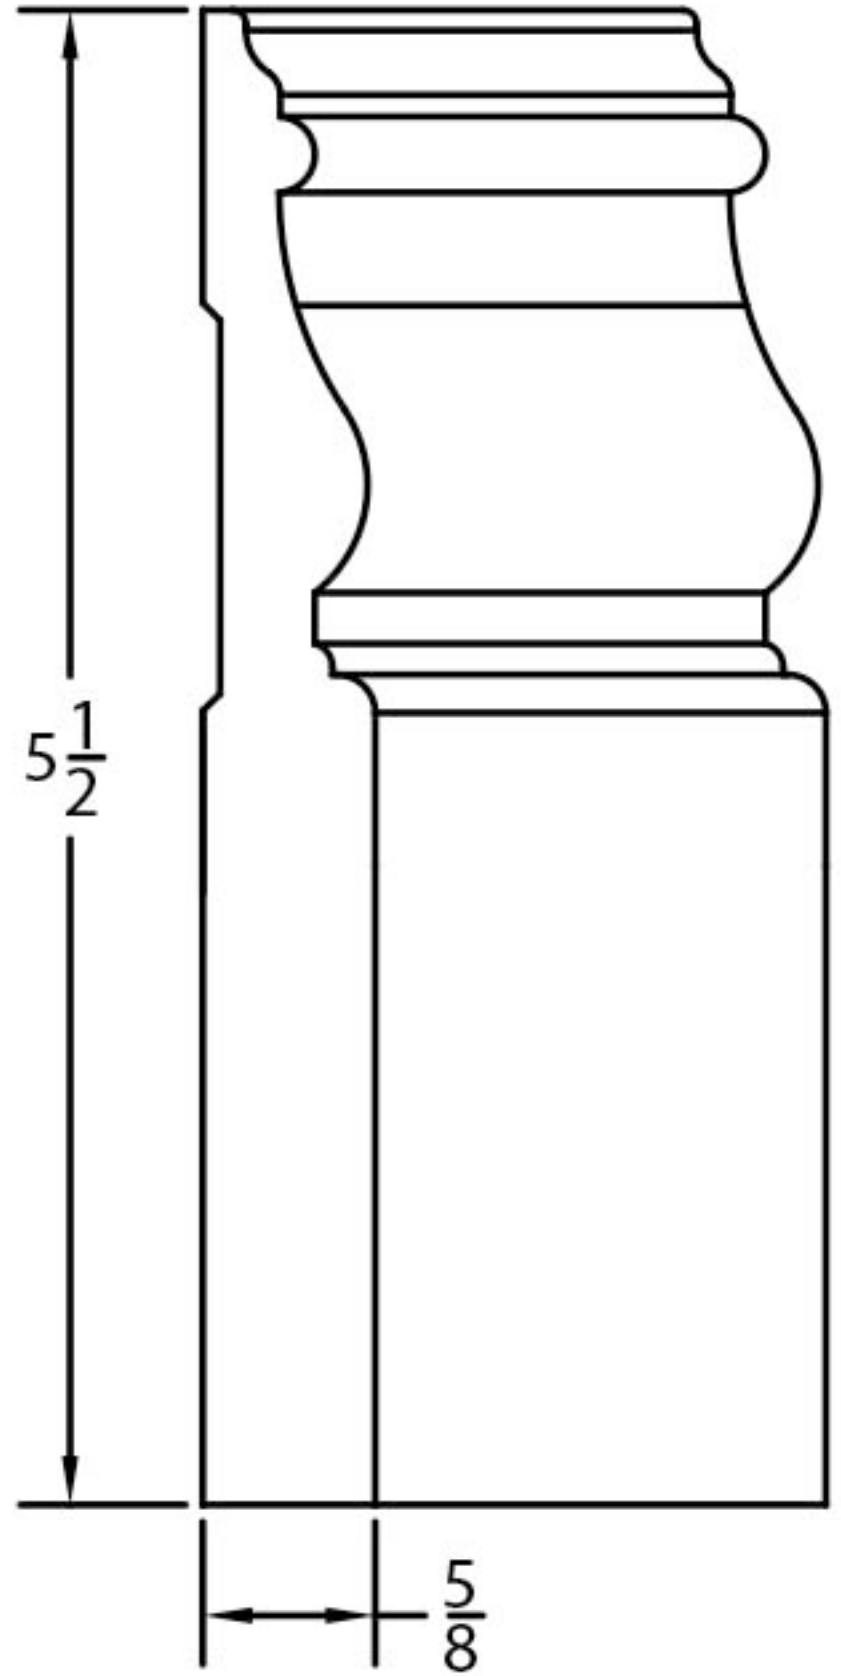


B-620

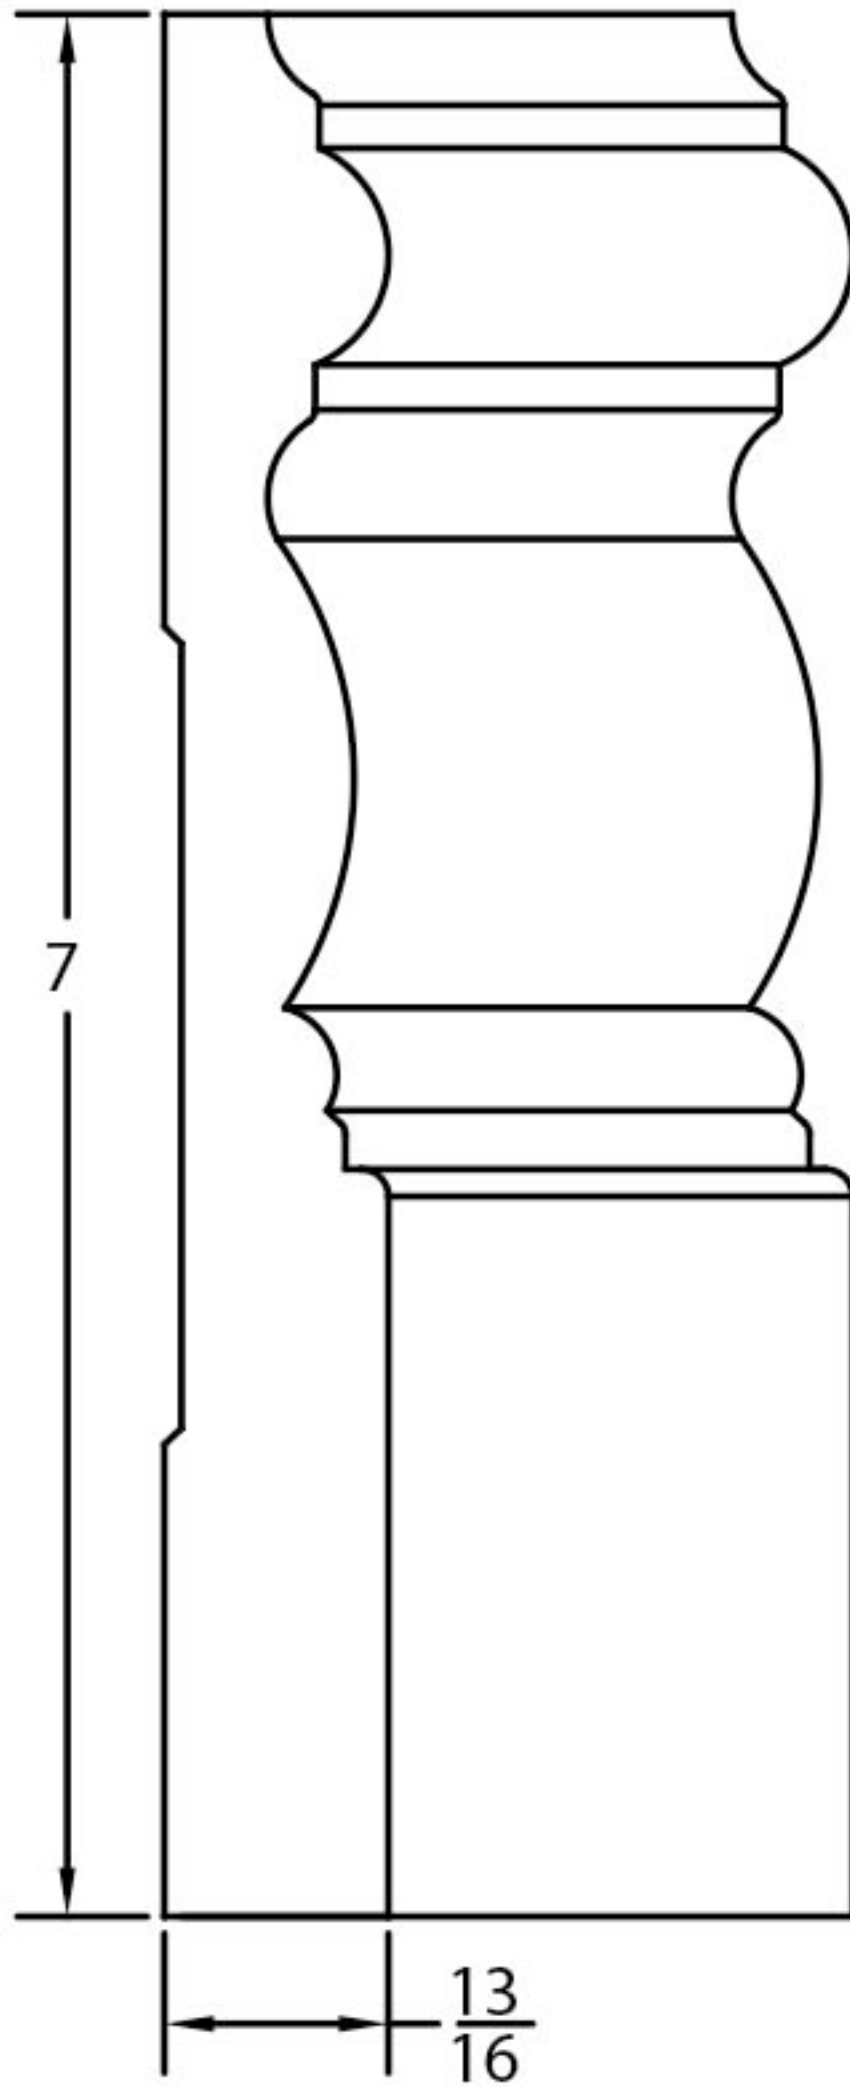







B-760

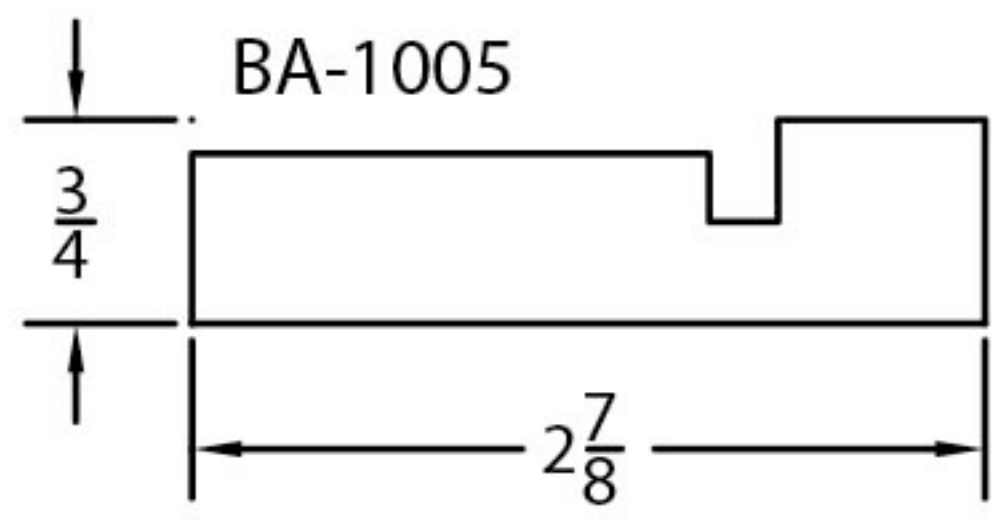
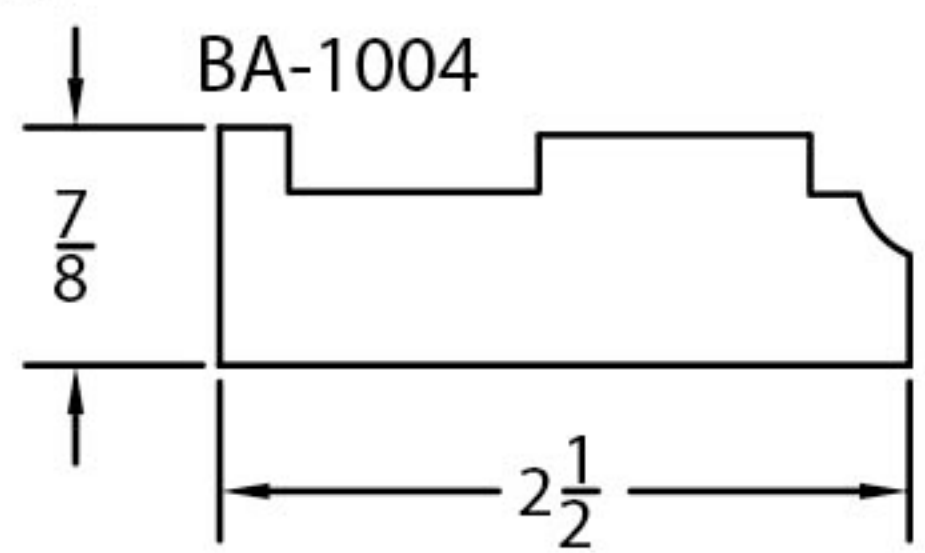
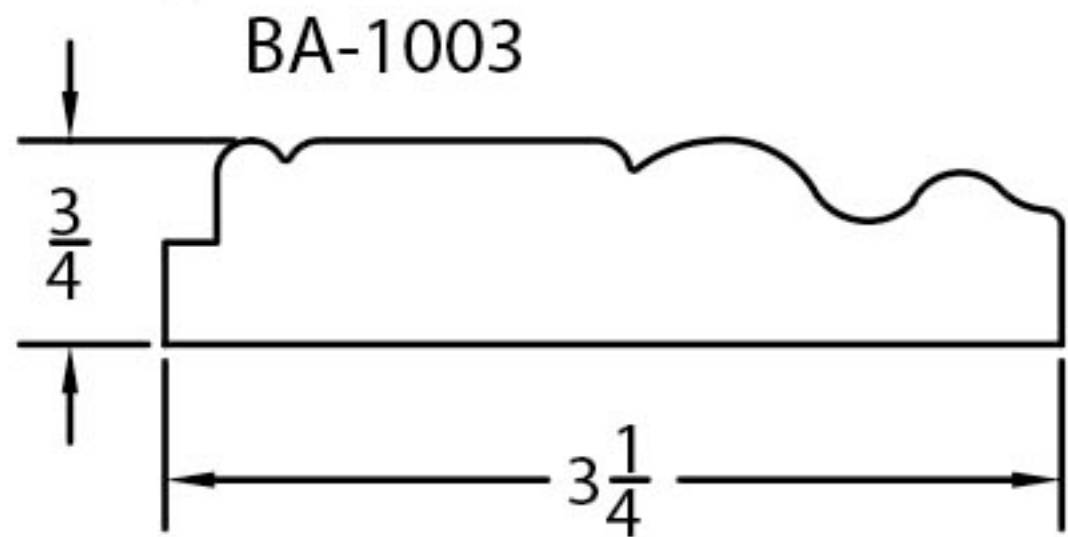
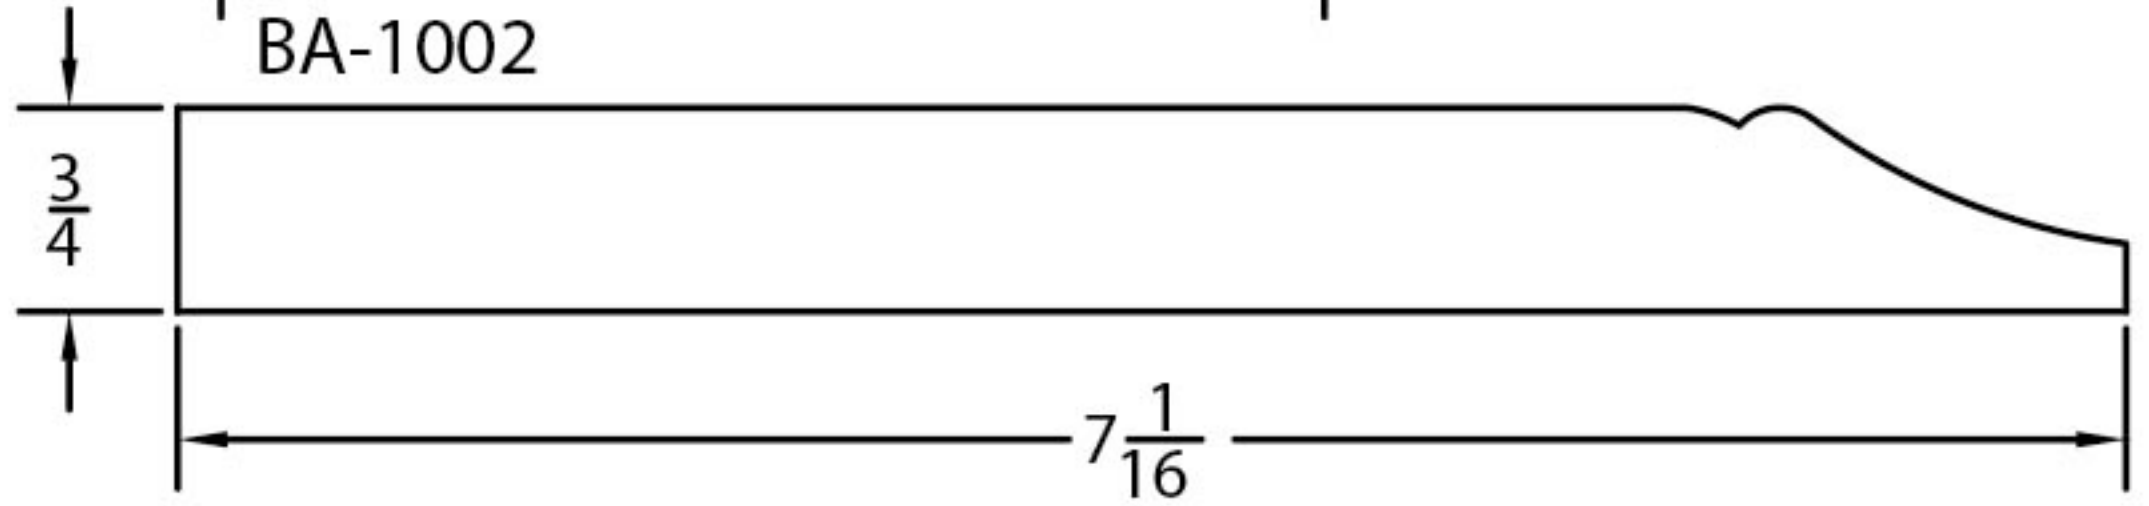
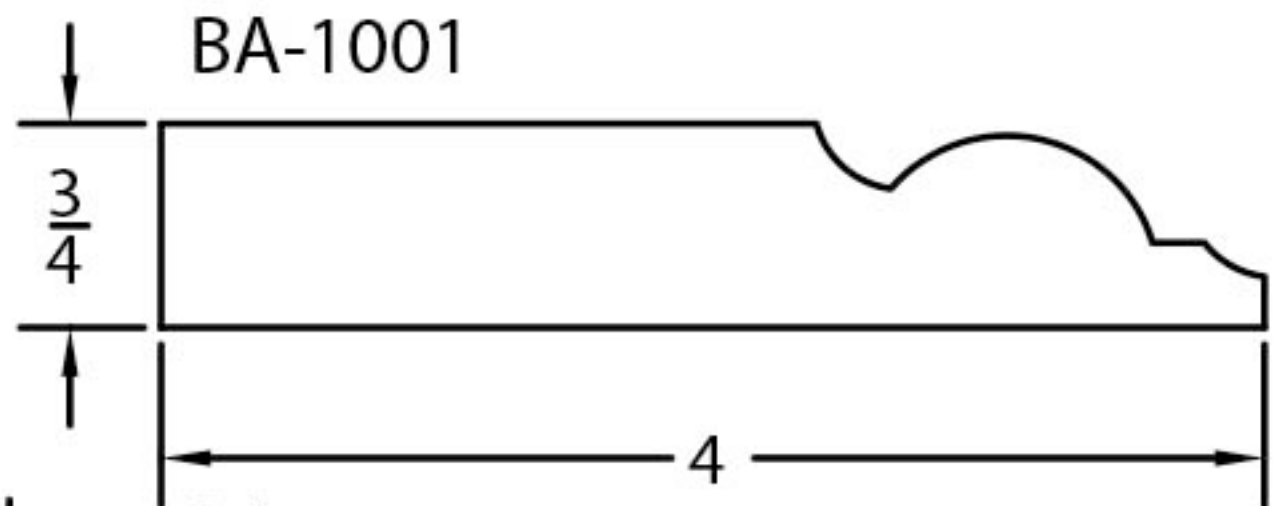
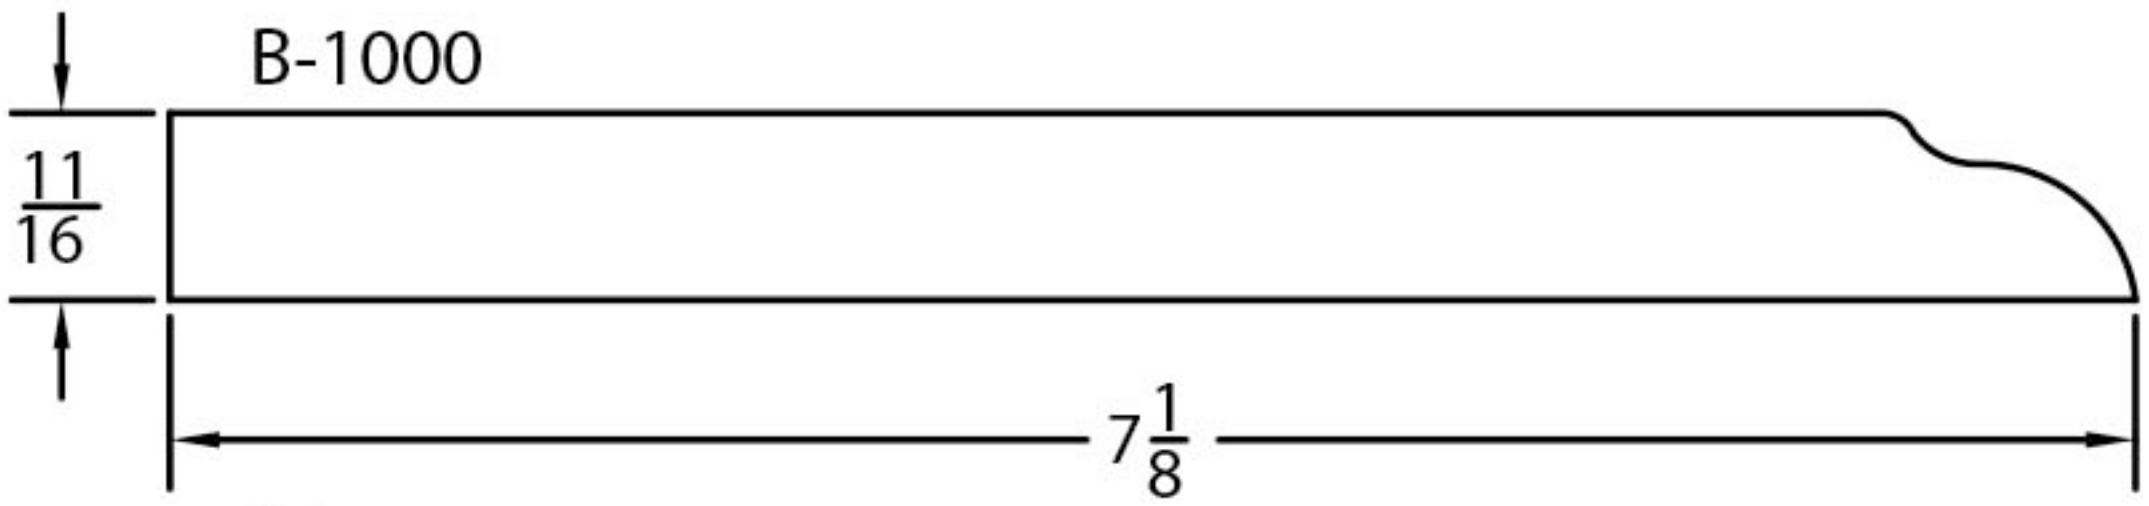


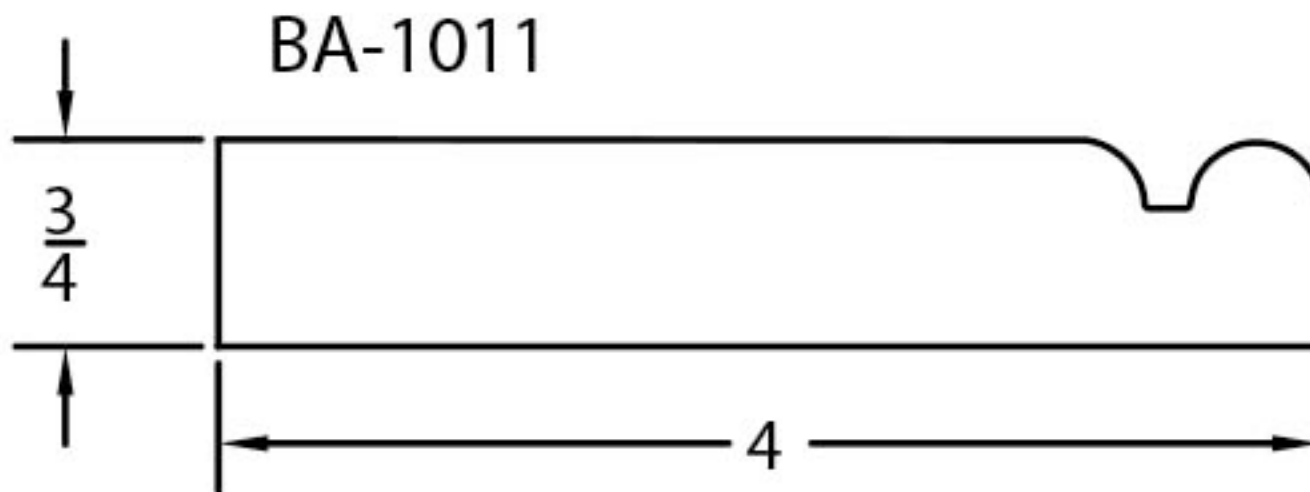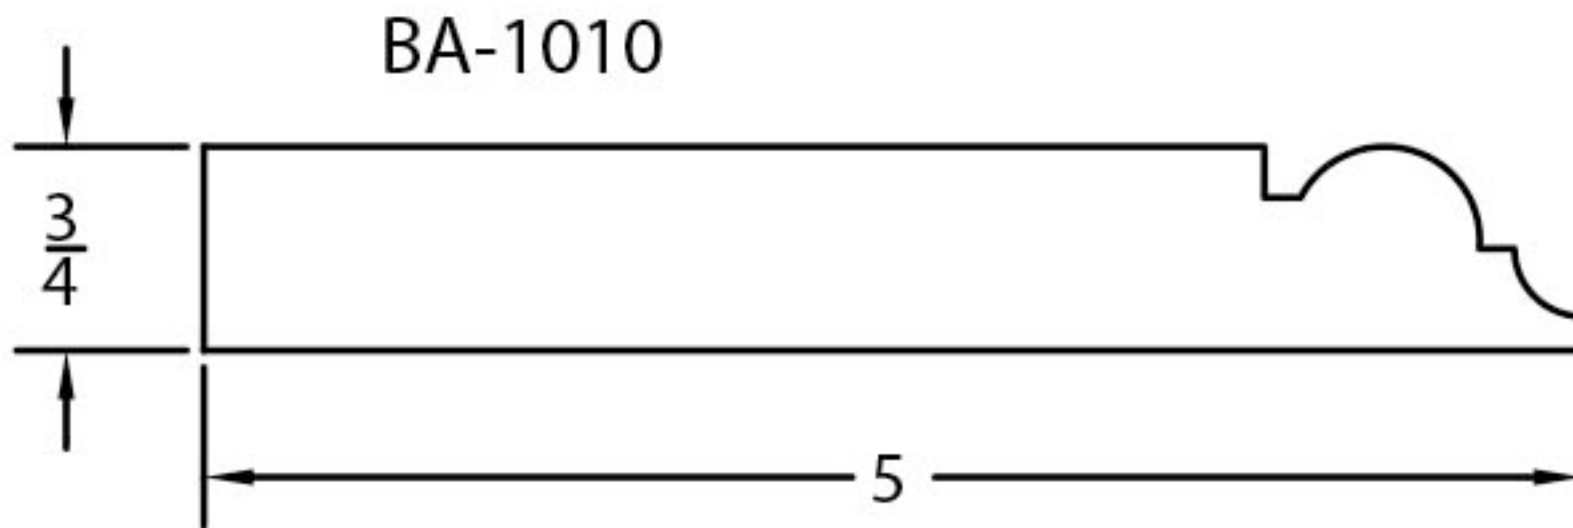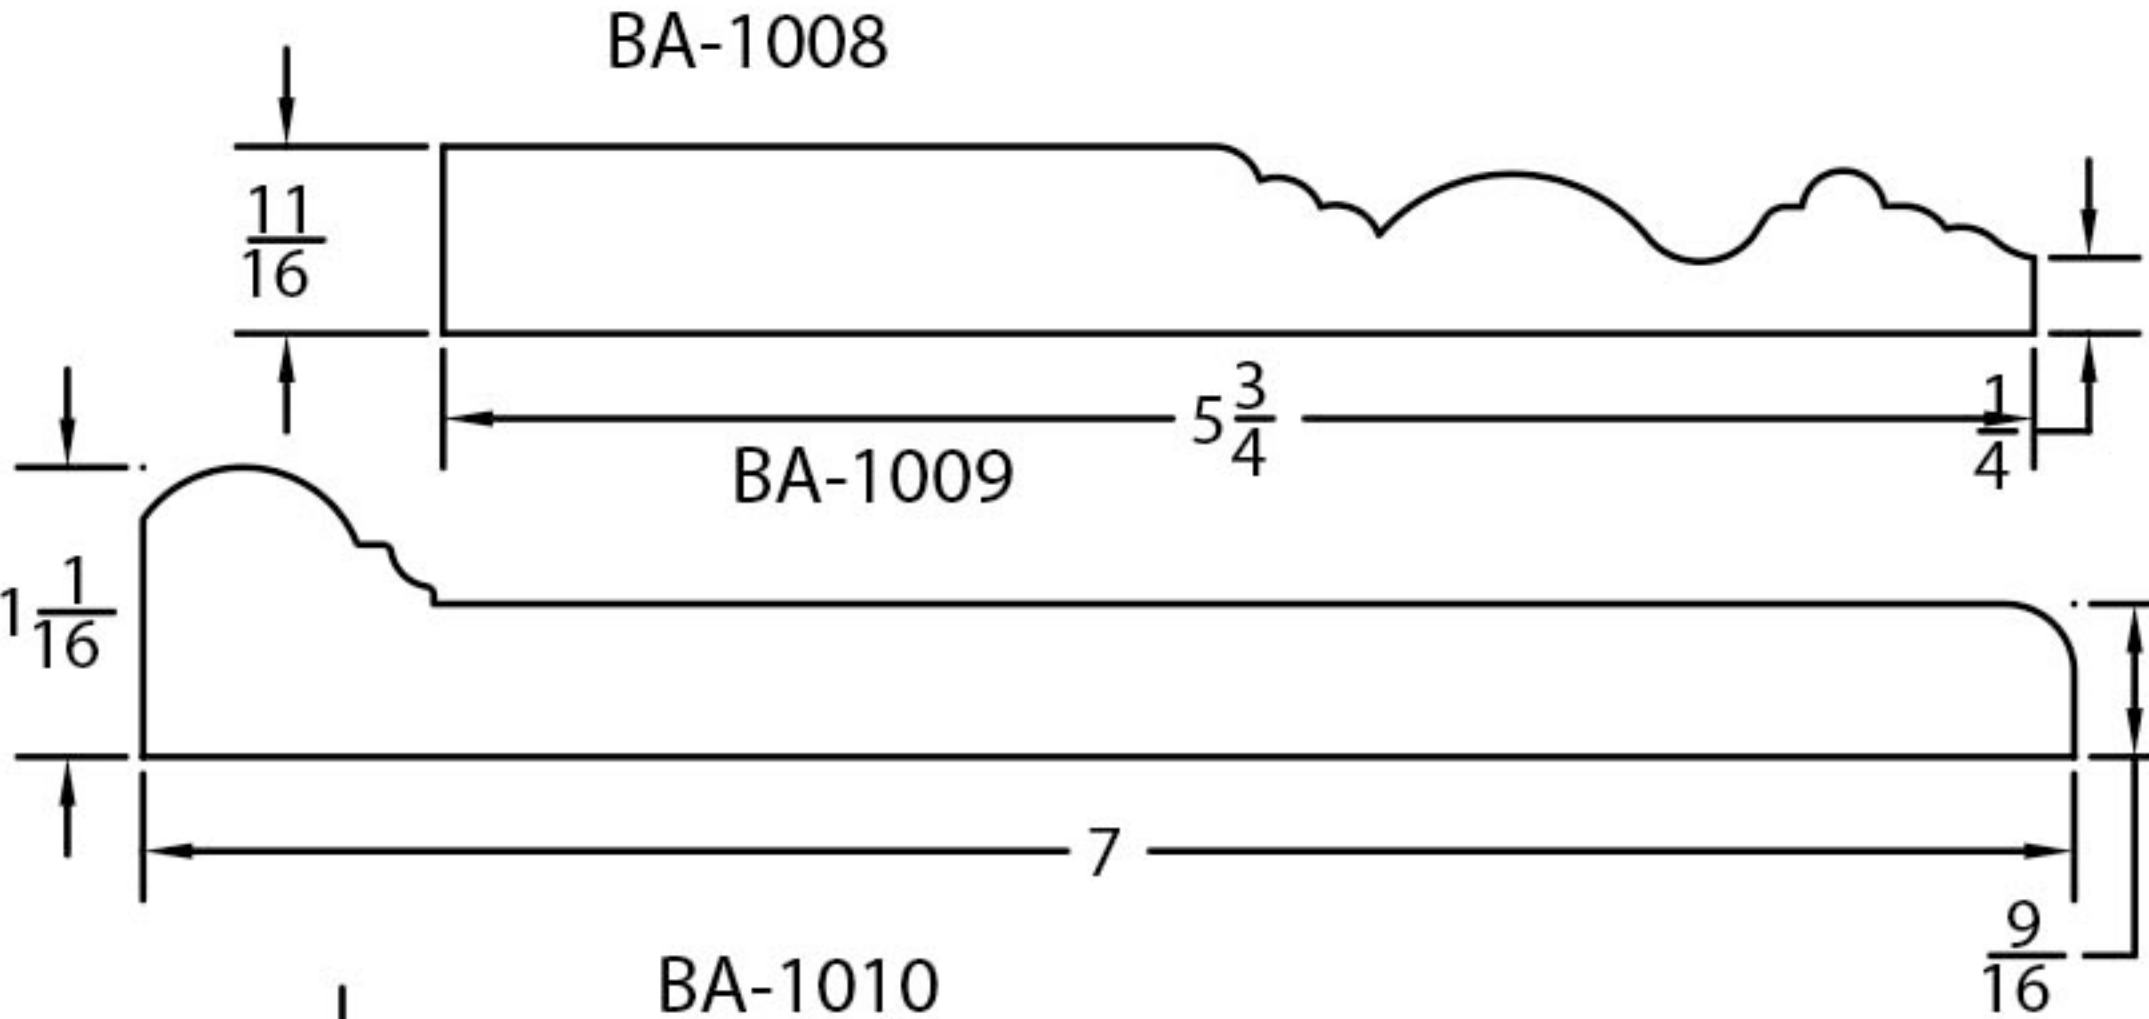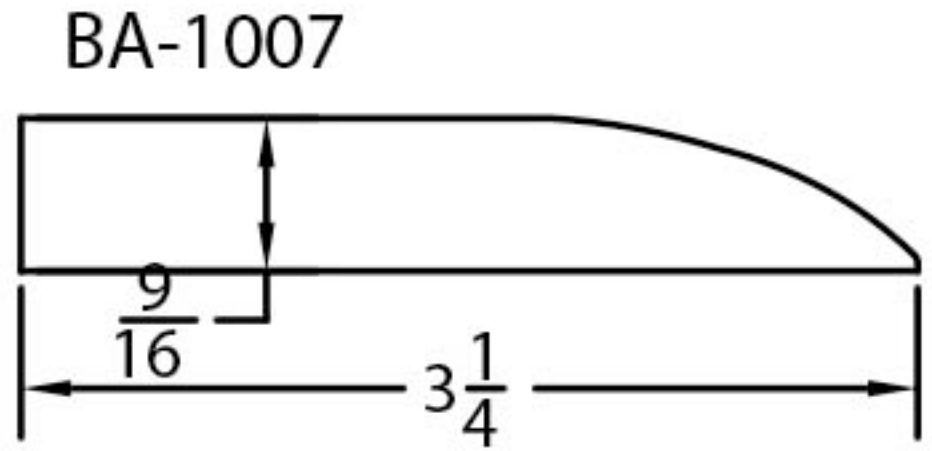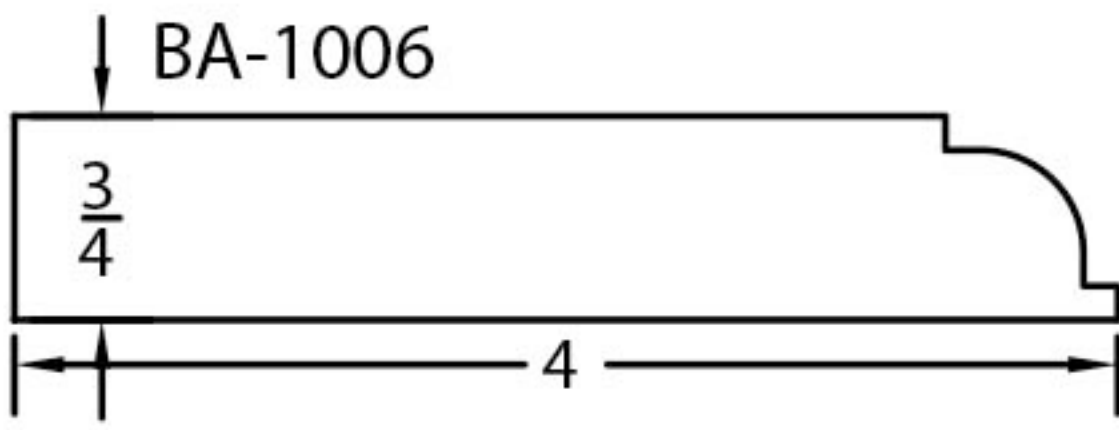




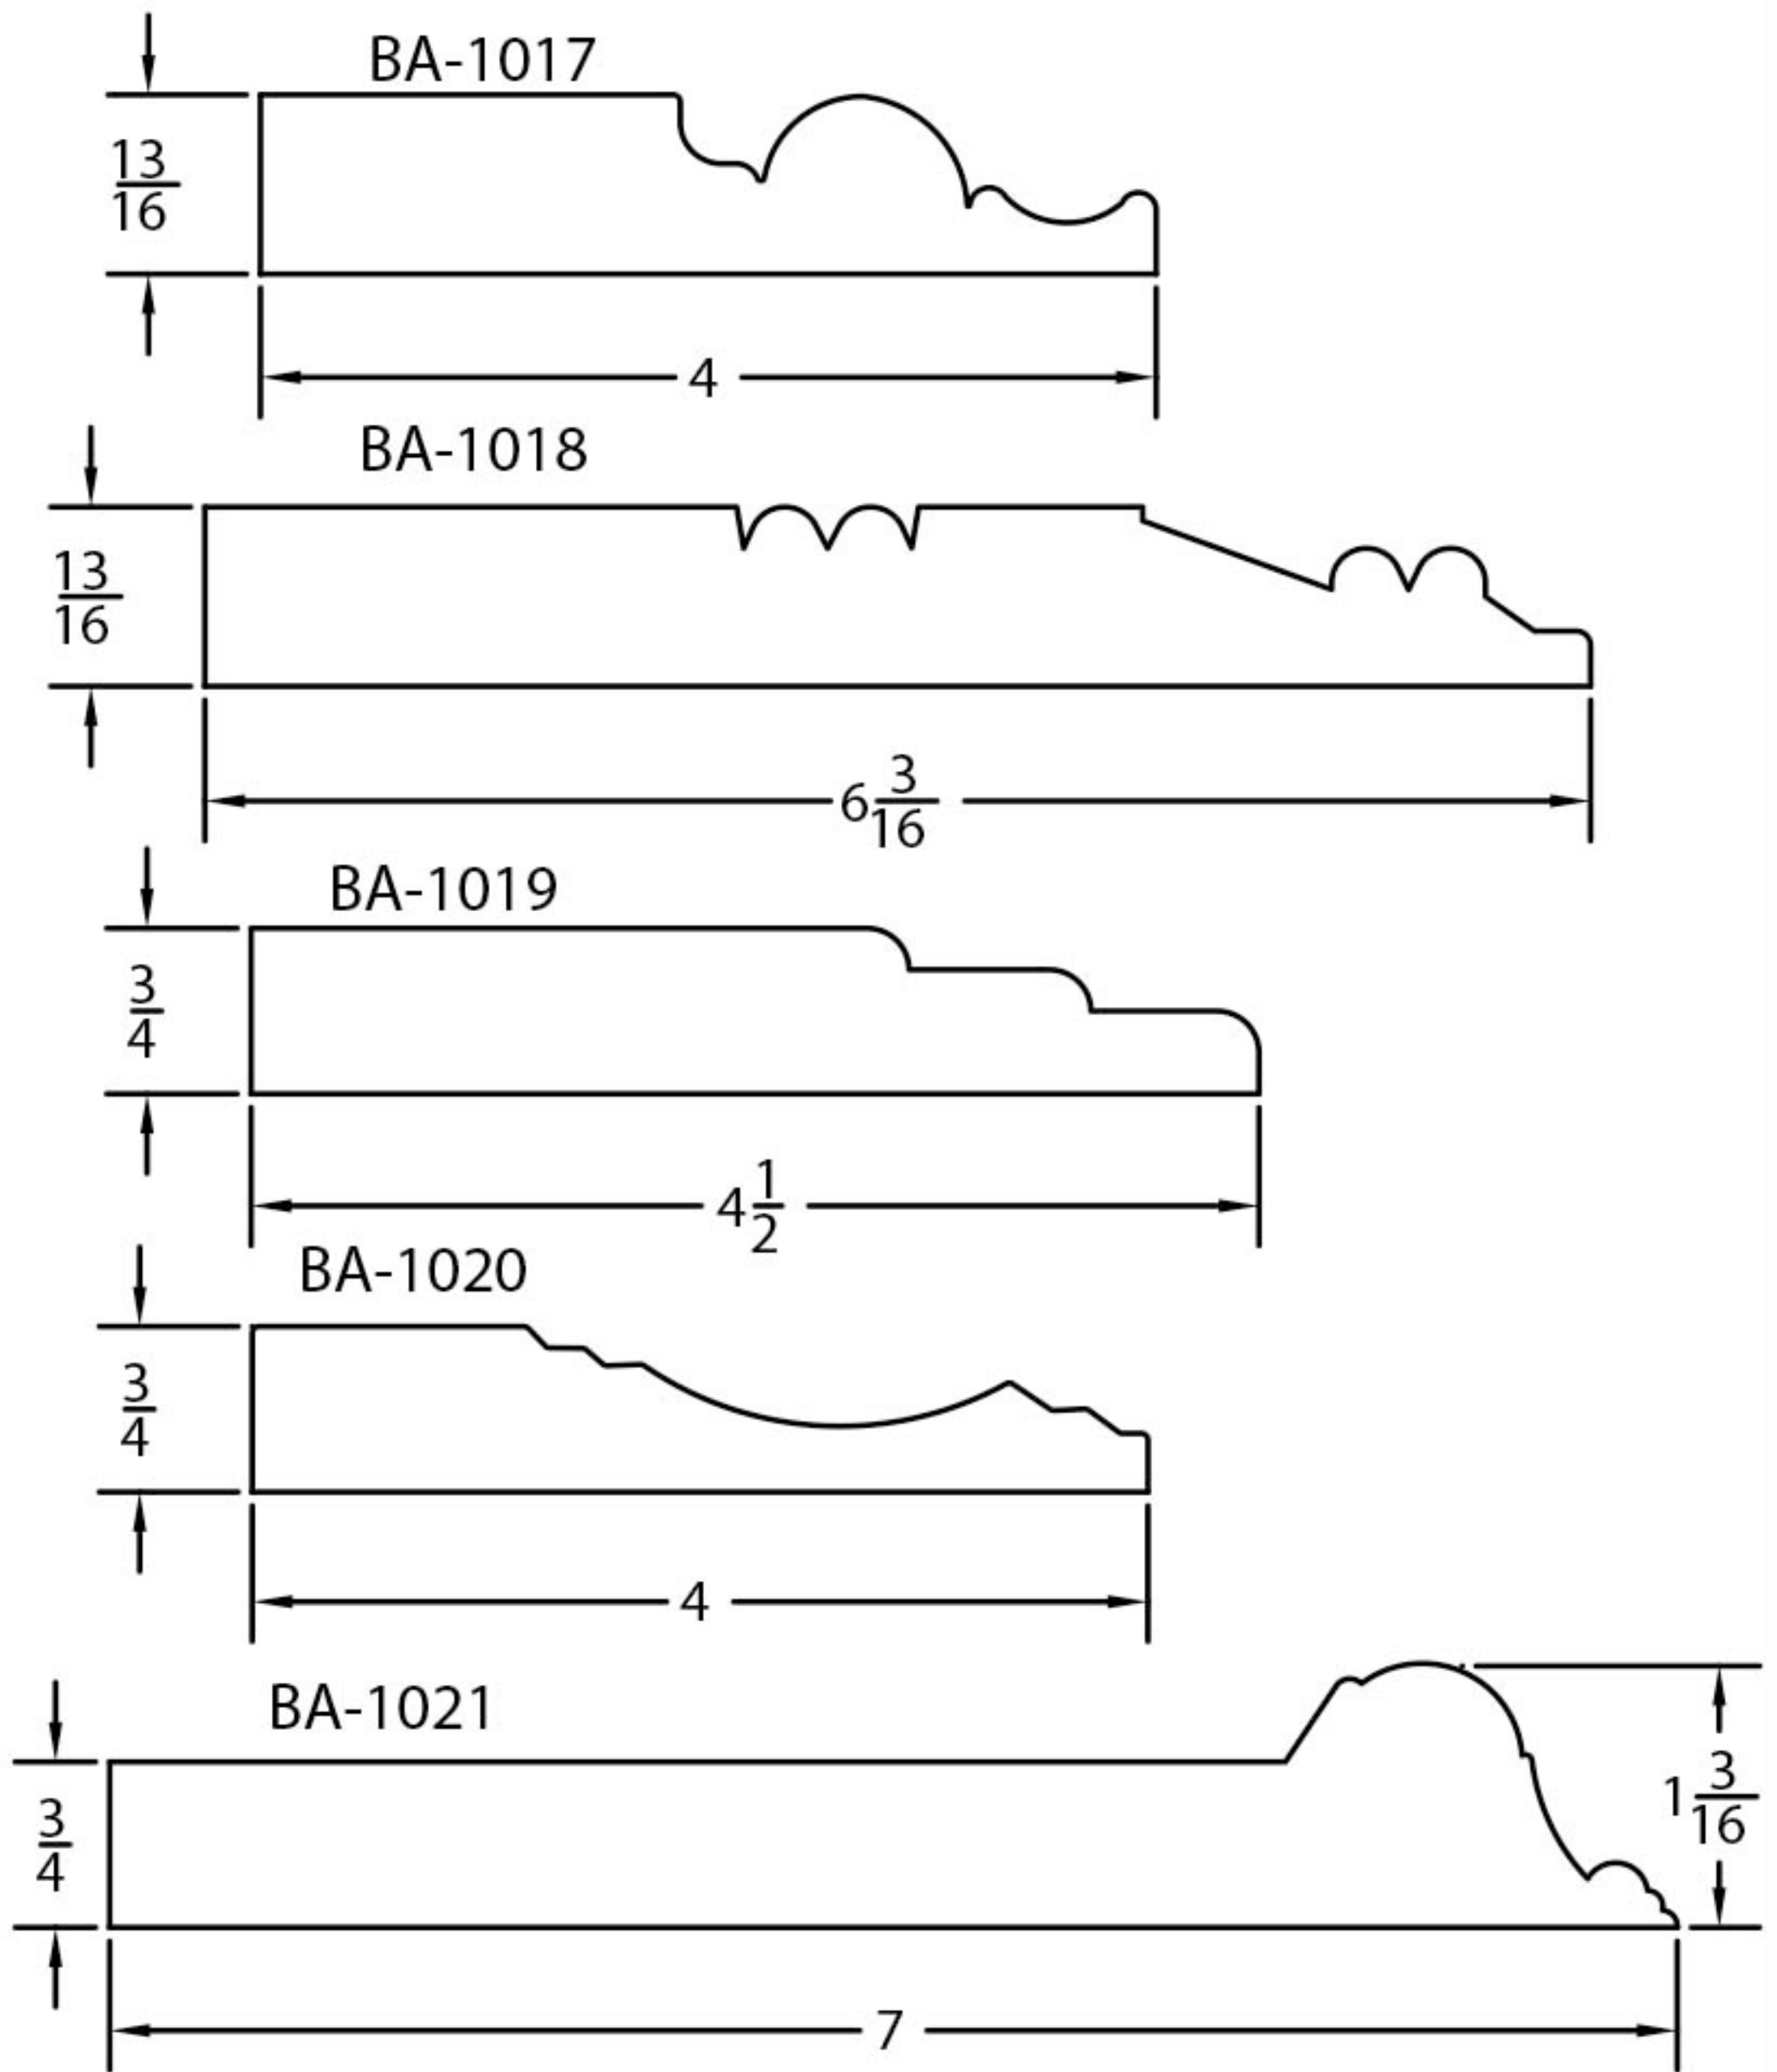

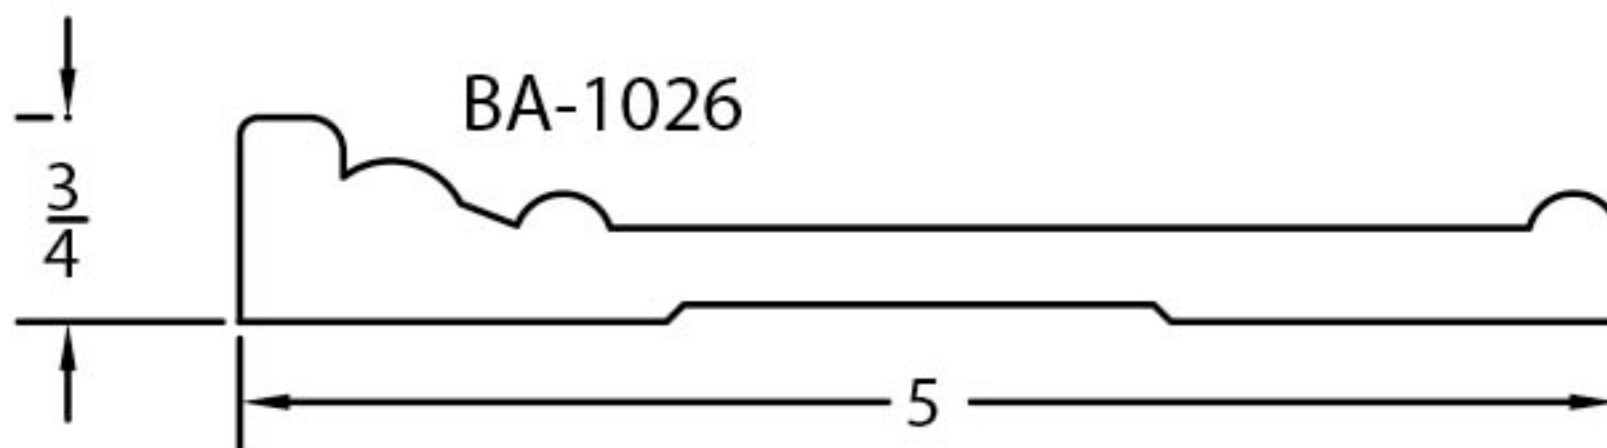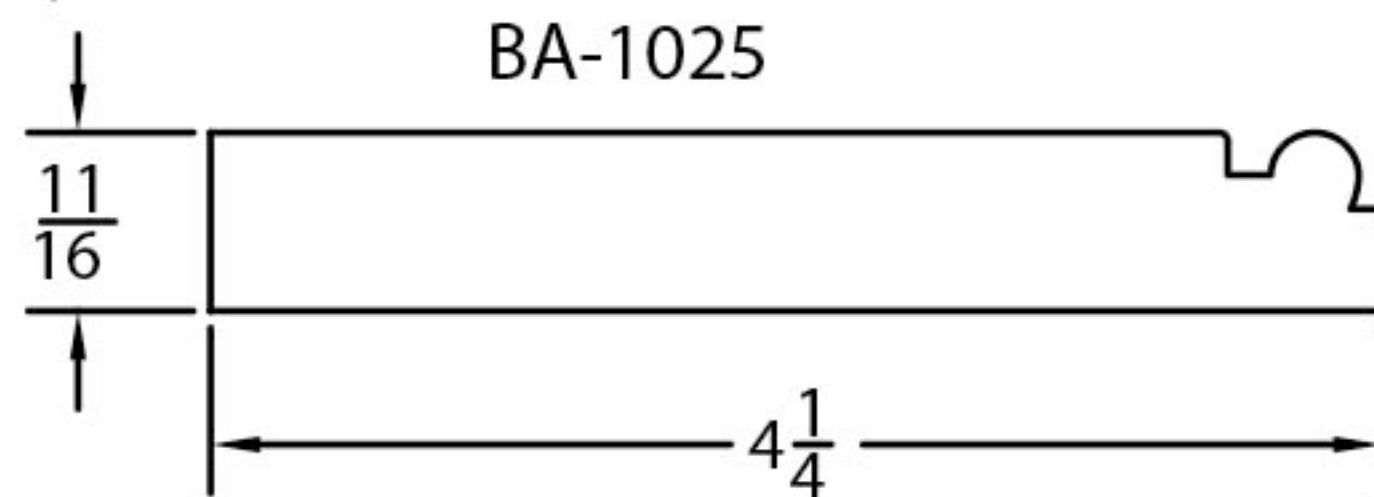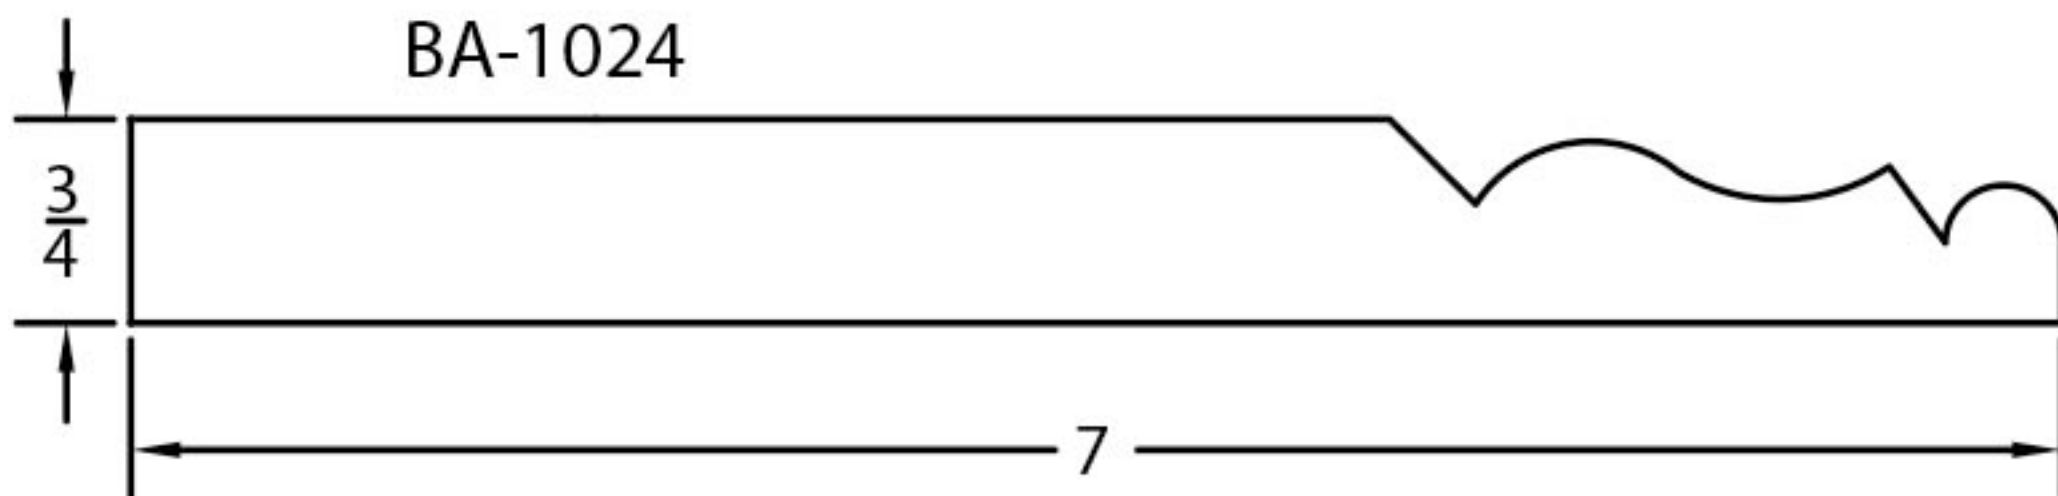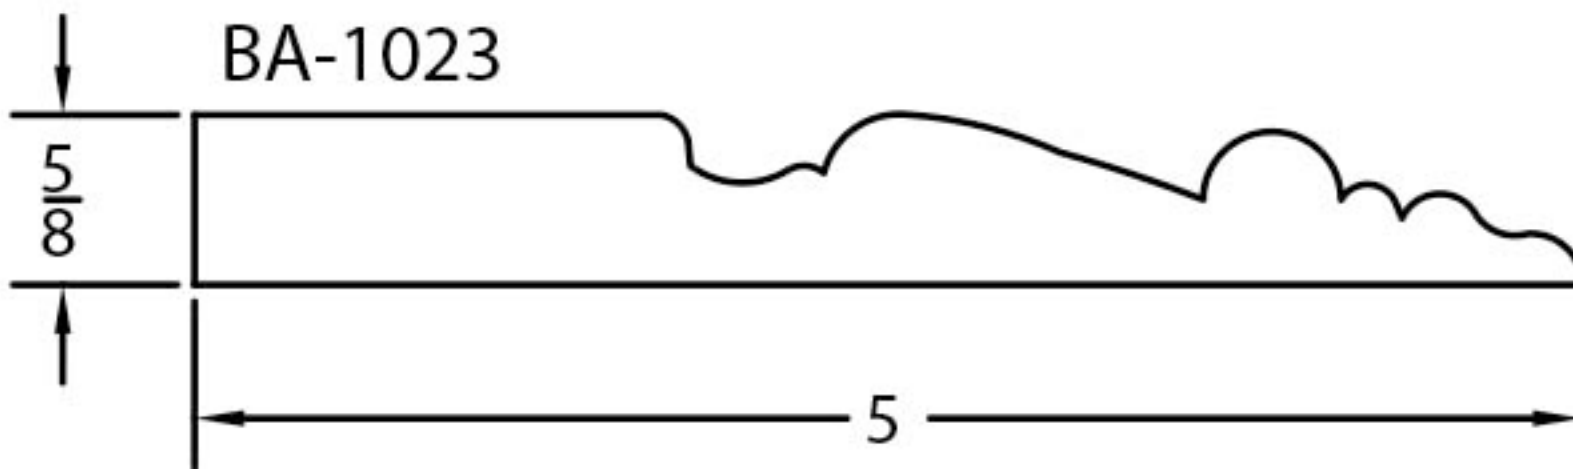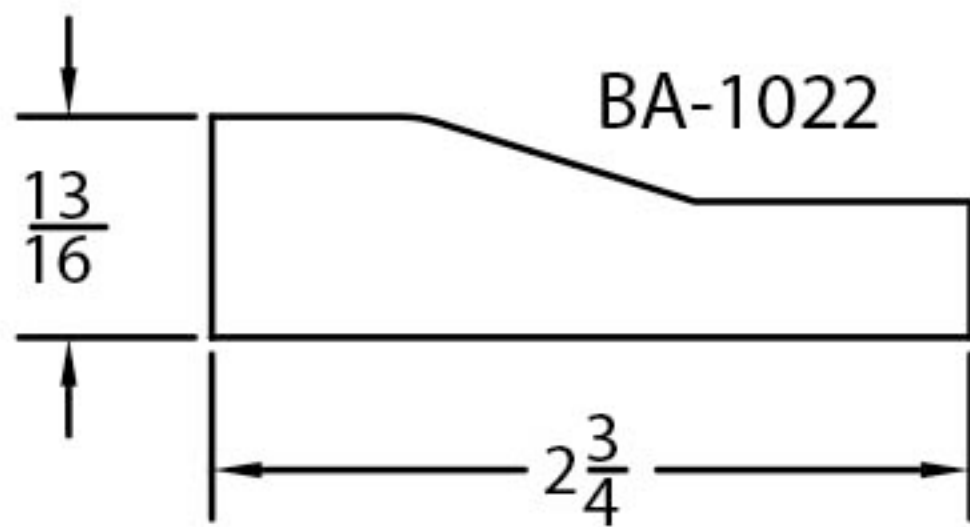


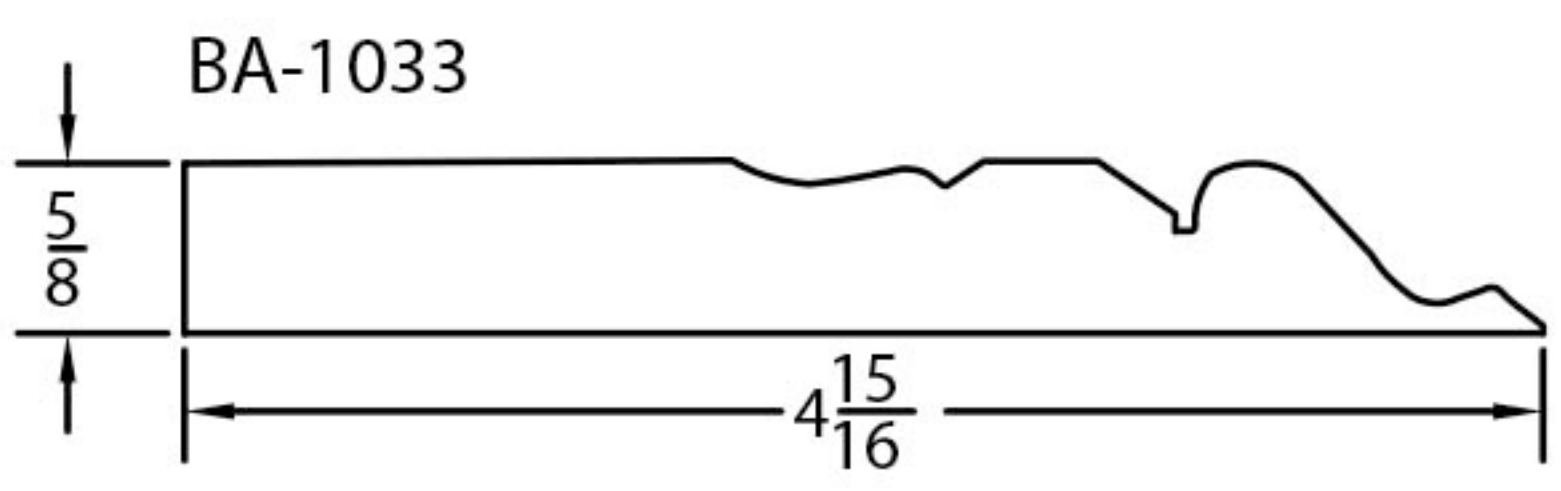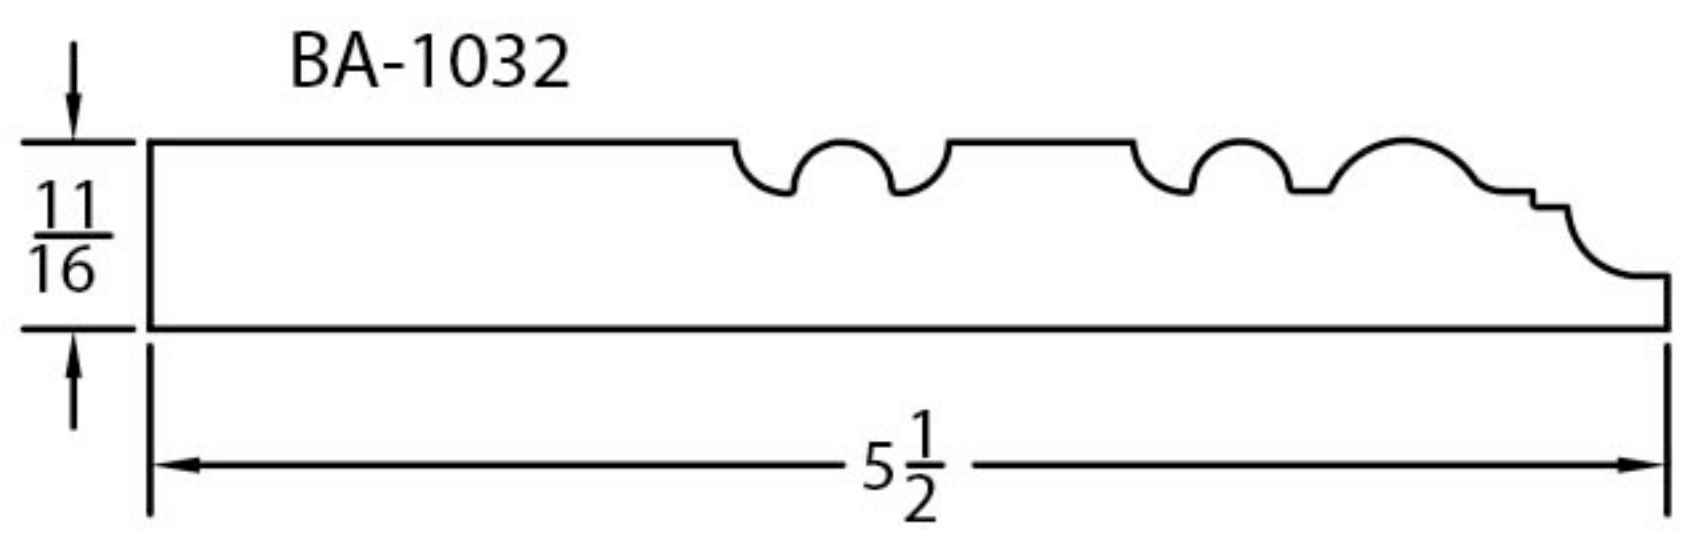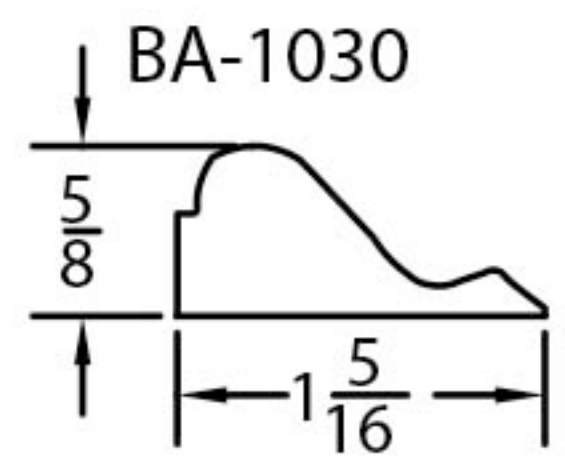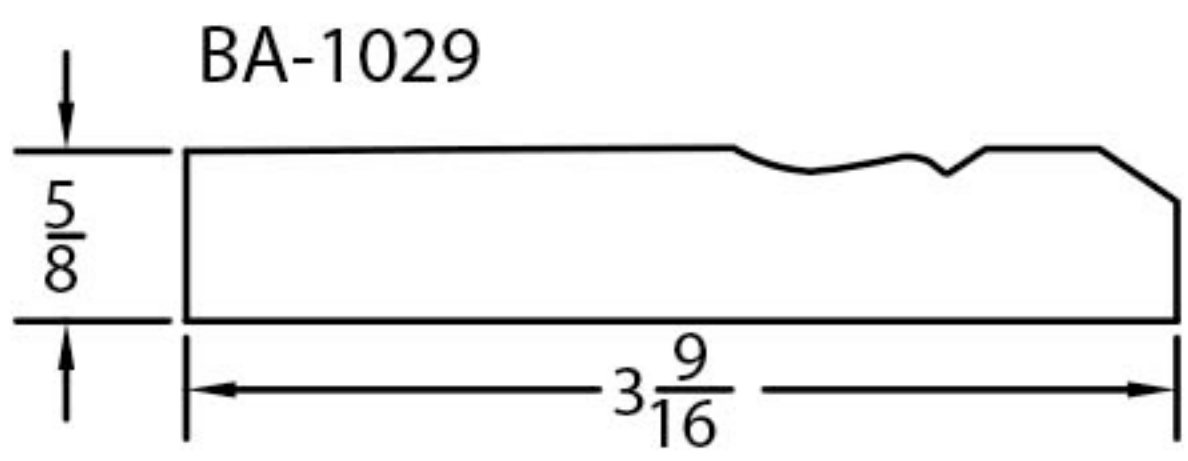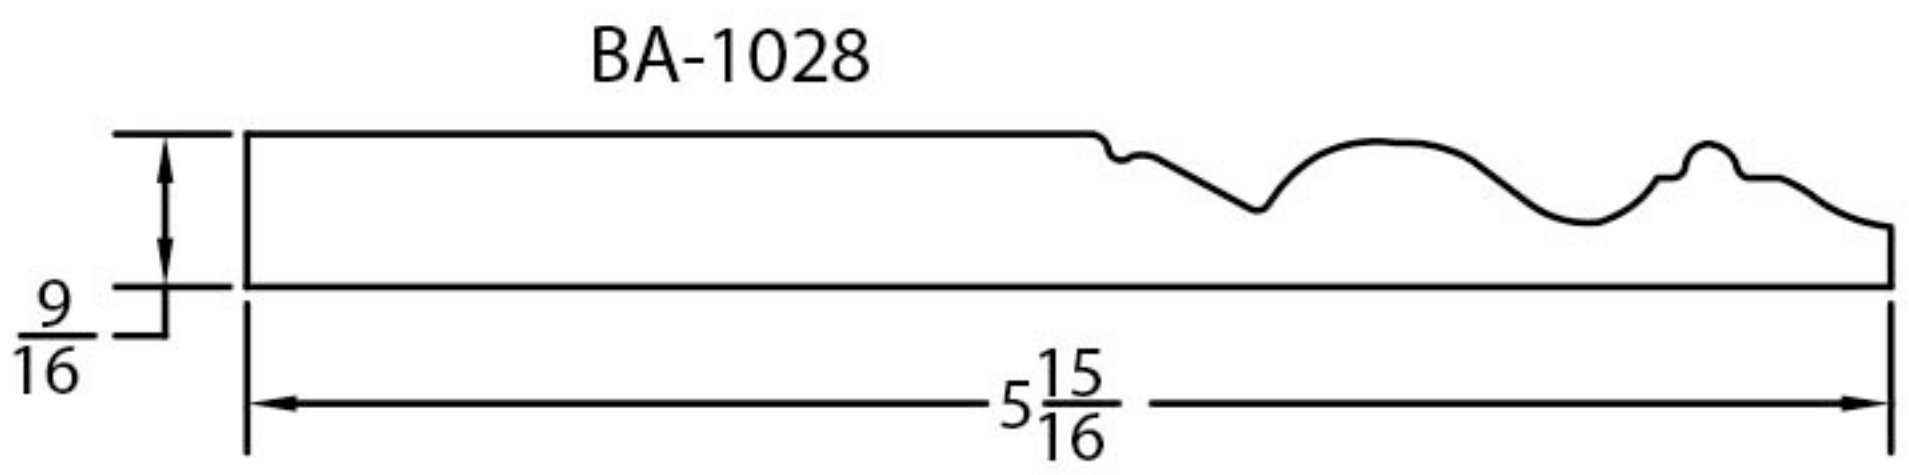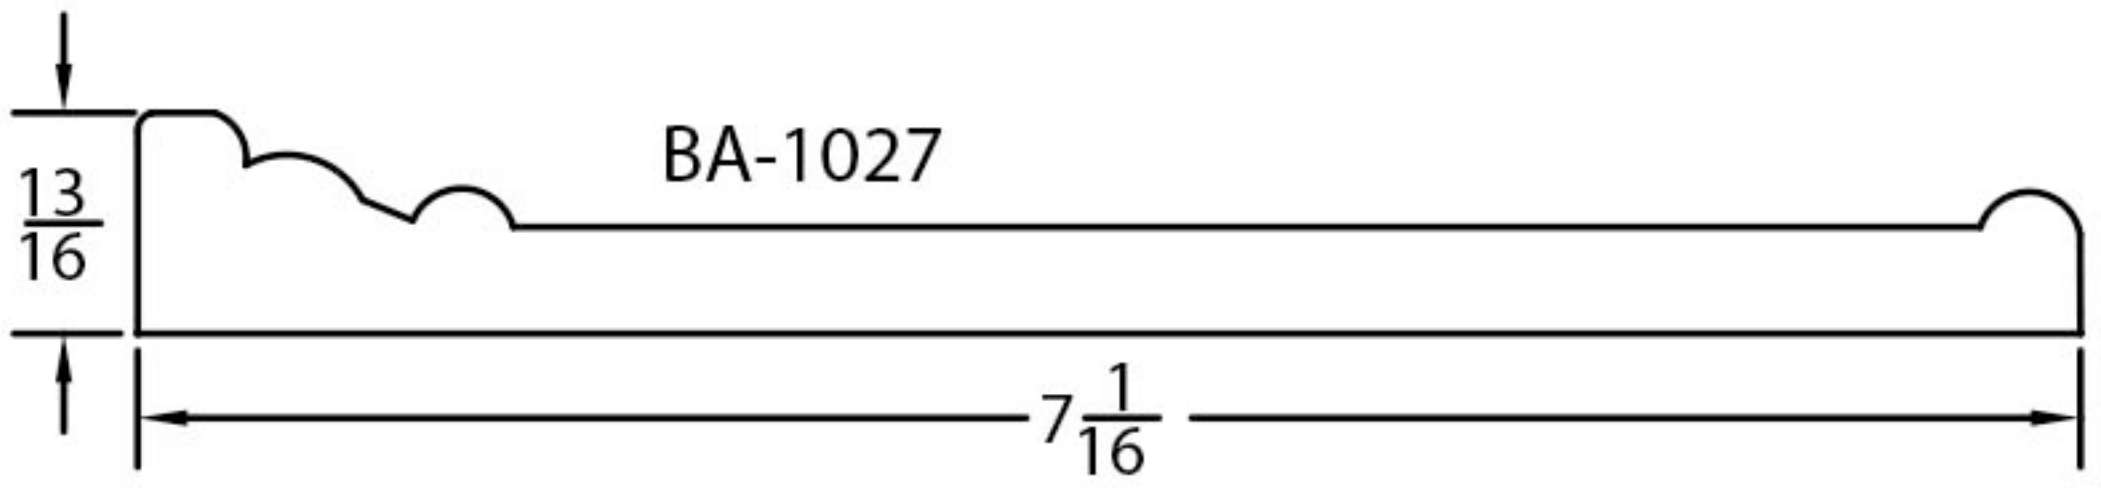


BA-1034

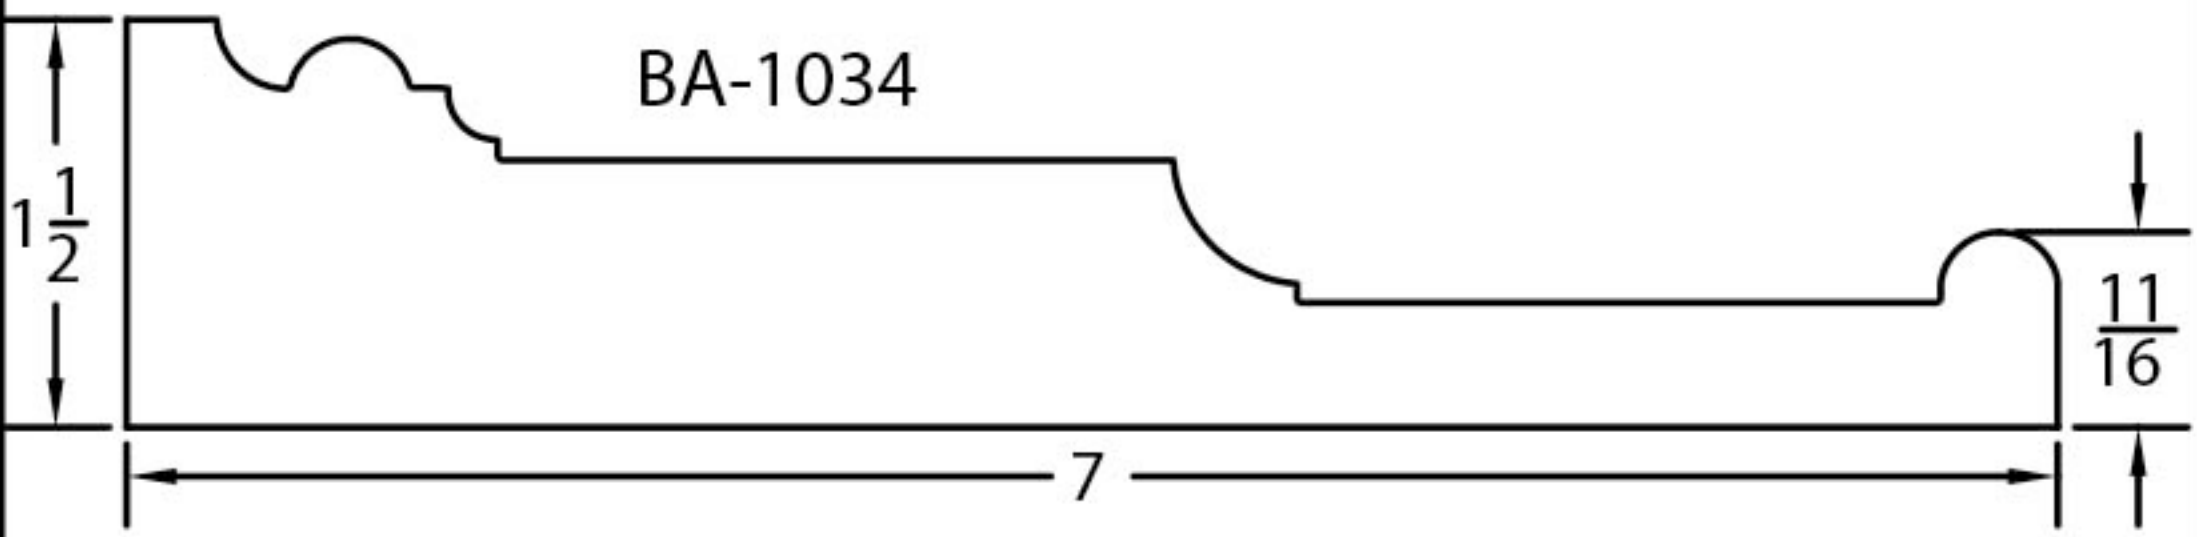


BA-1035

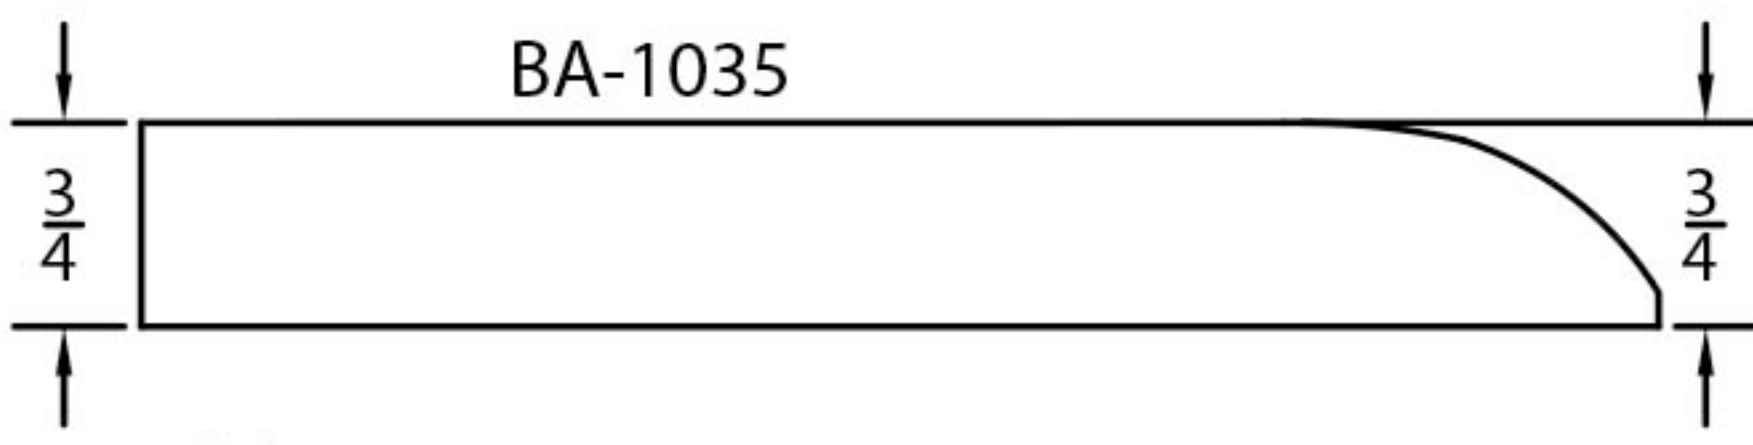


BA-1036




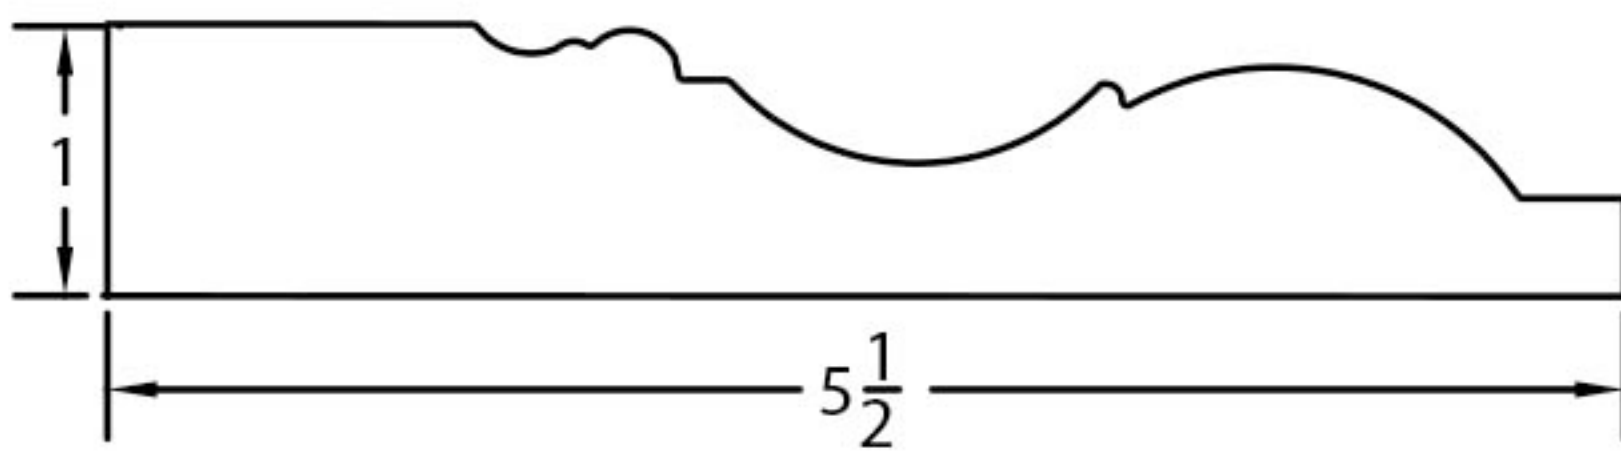





BA-1037

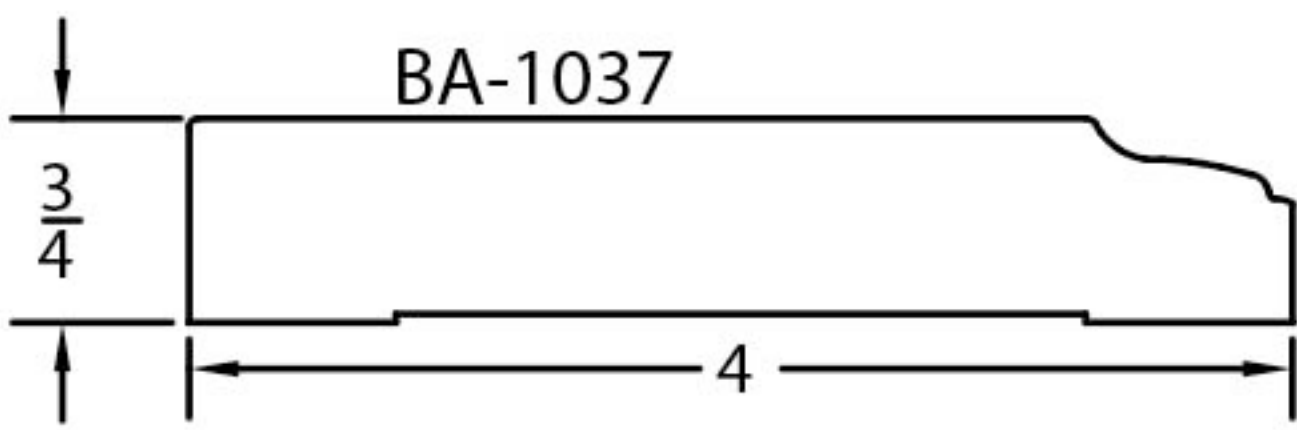


BA-1038

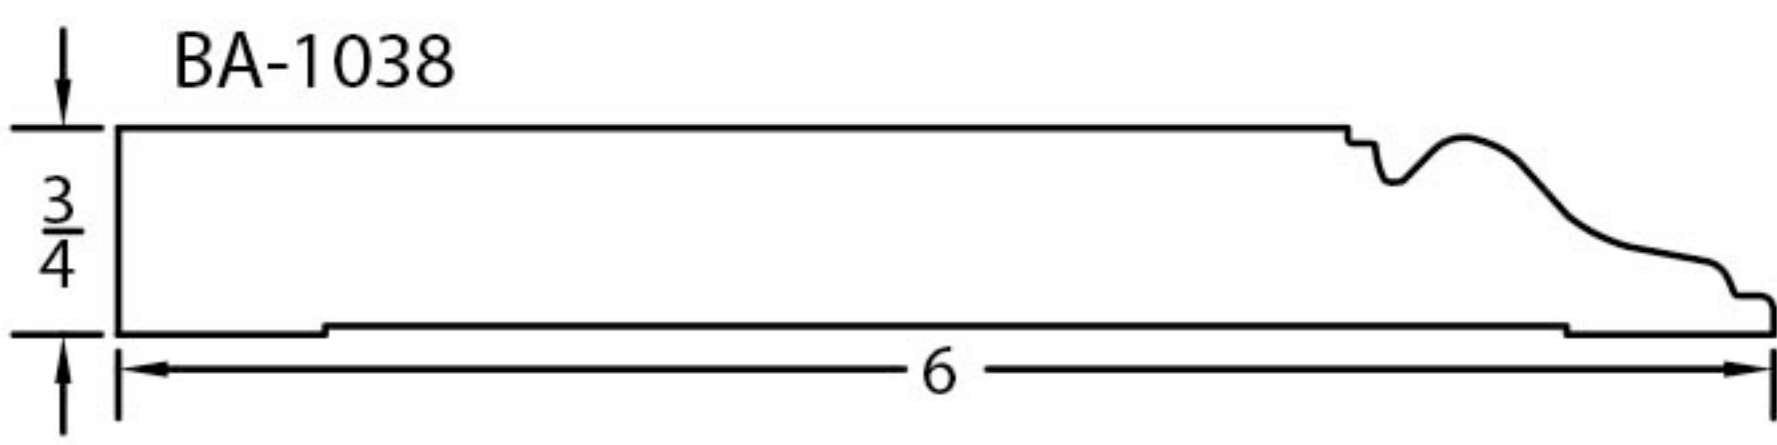

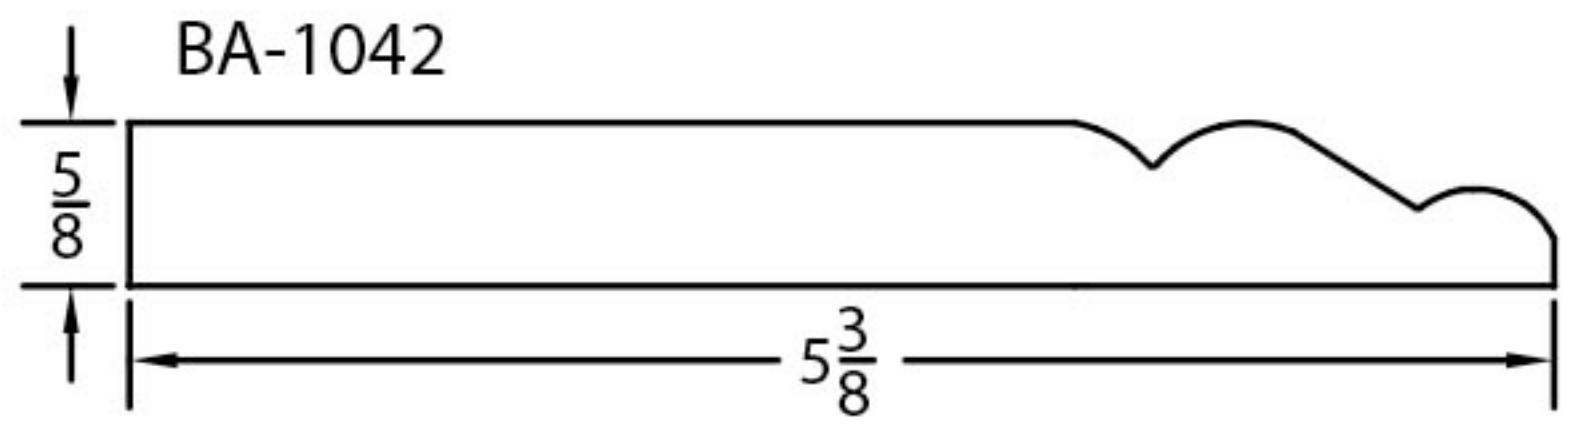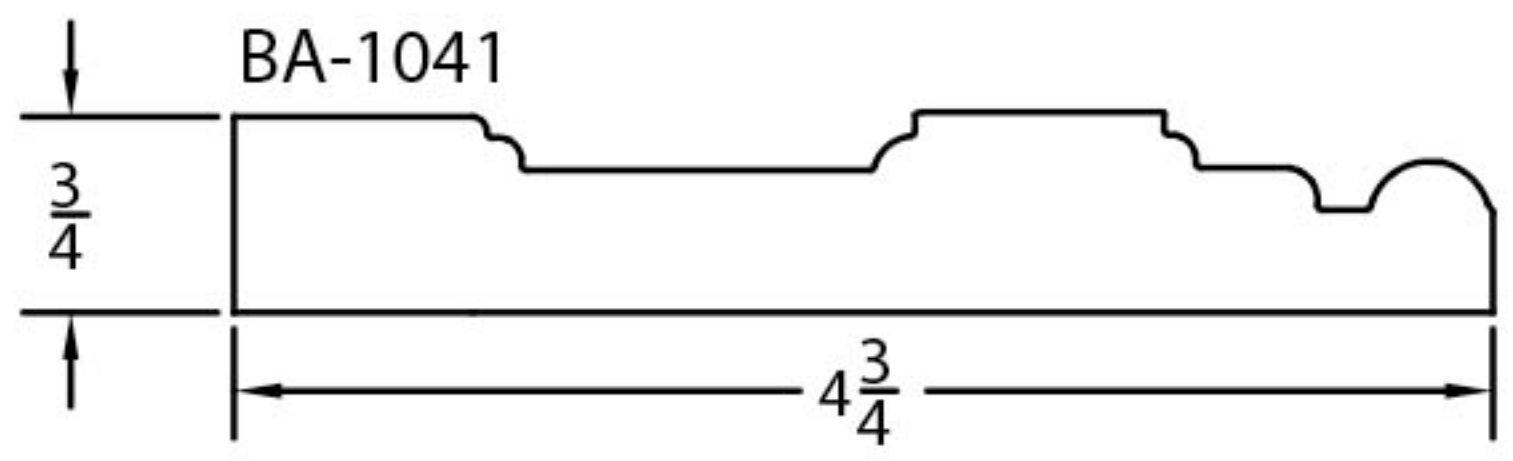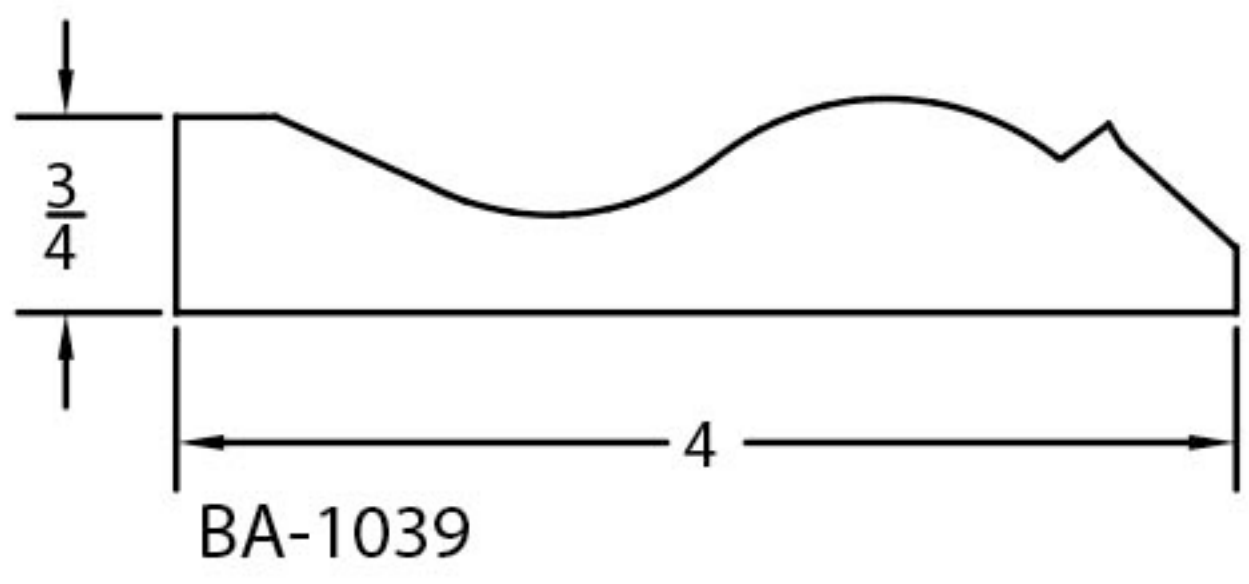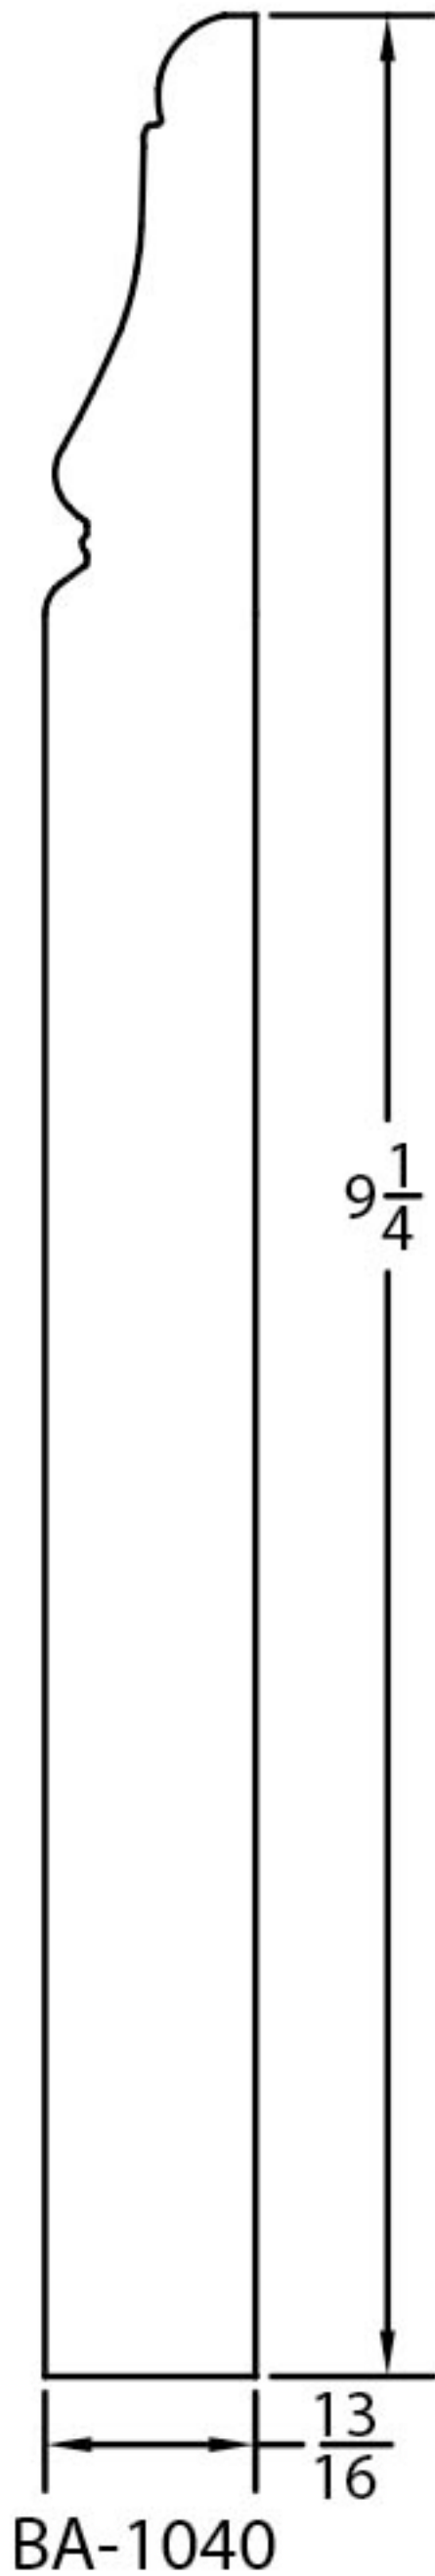


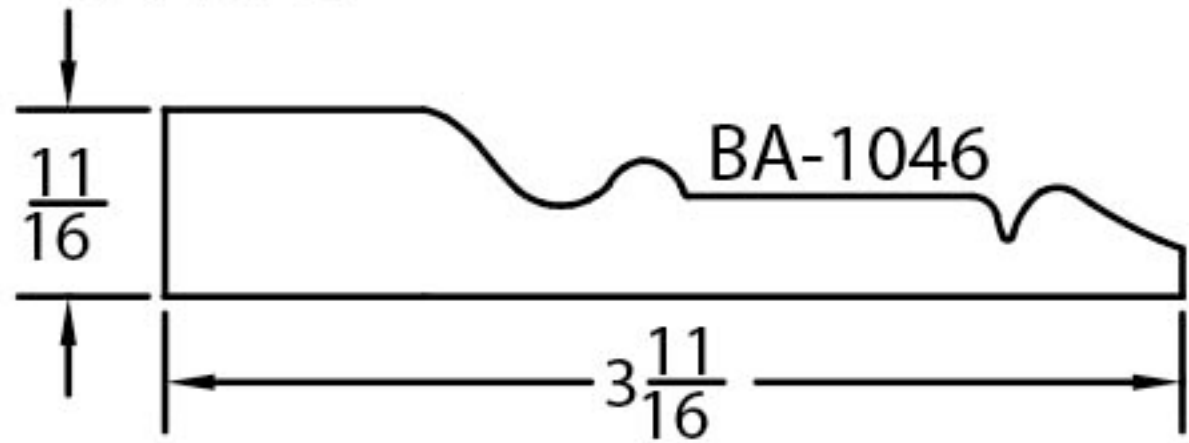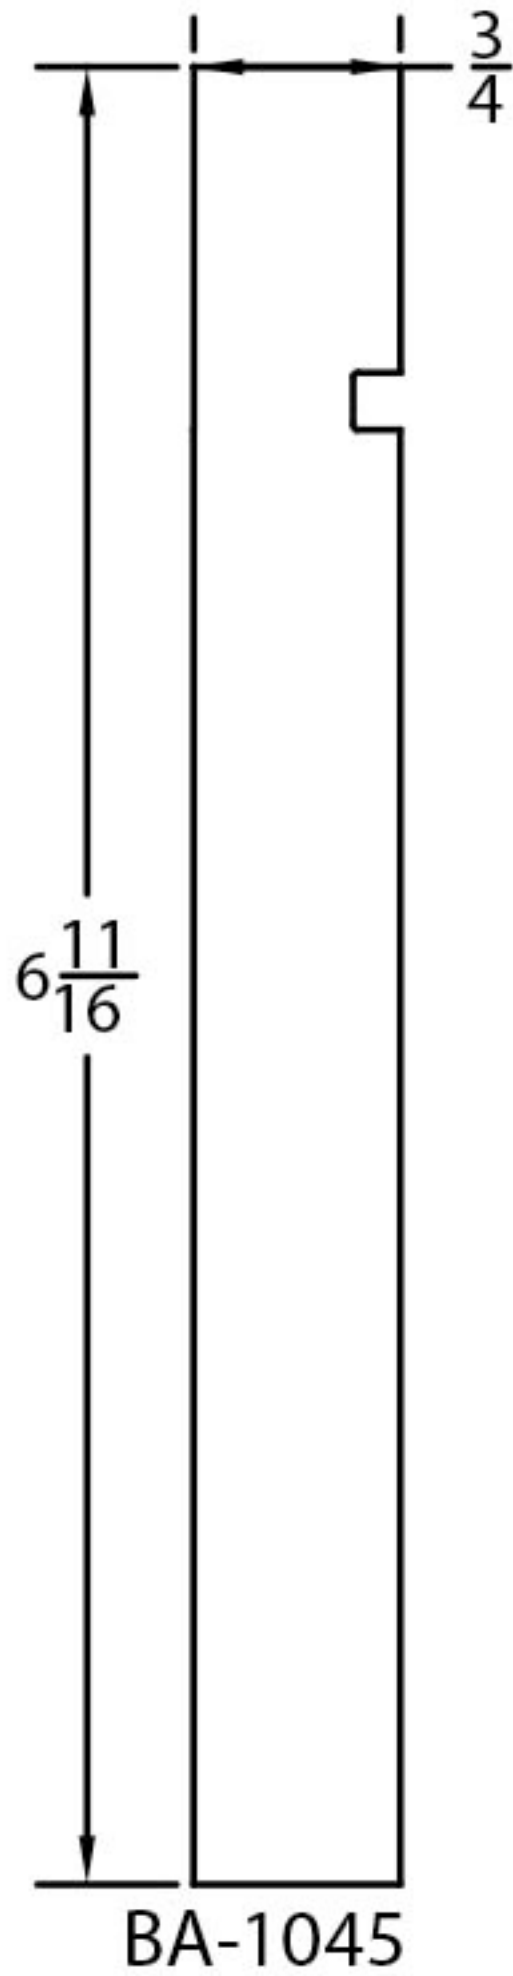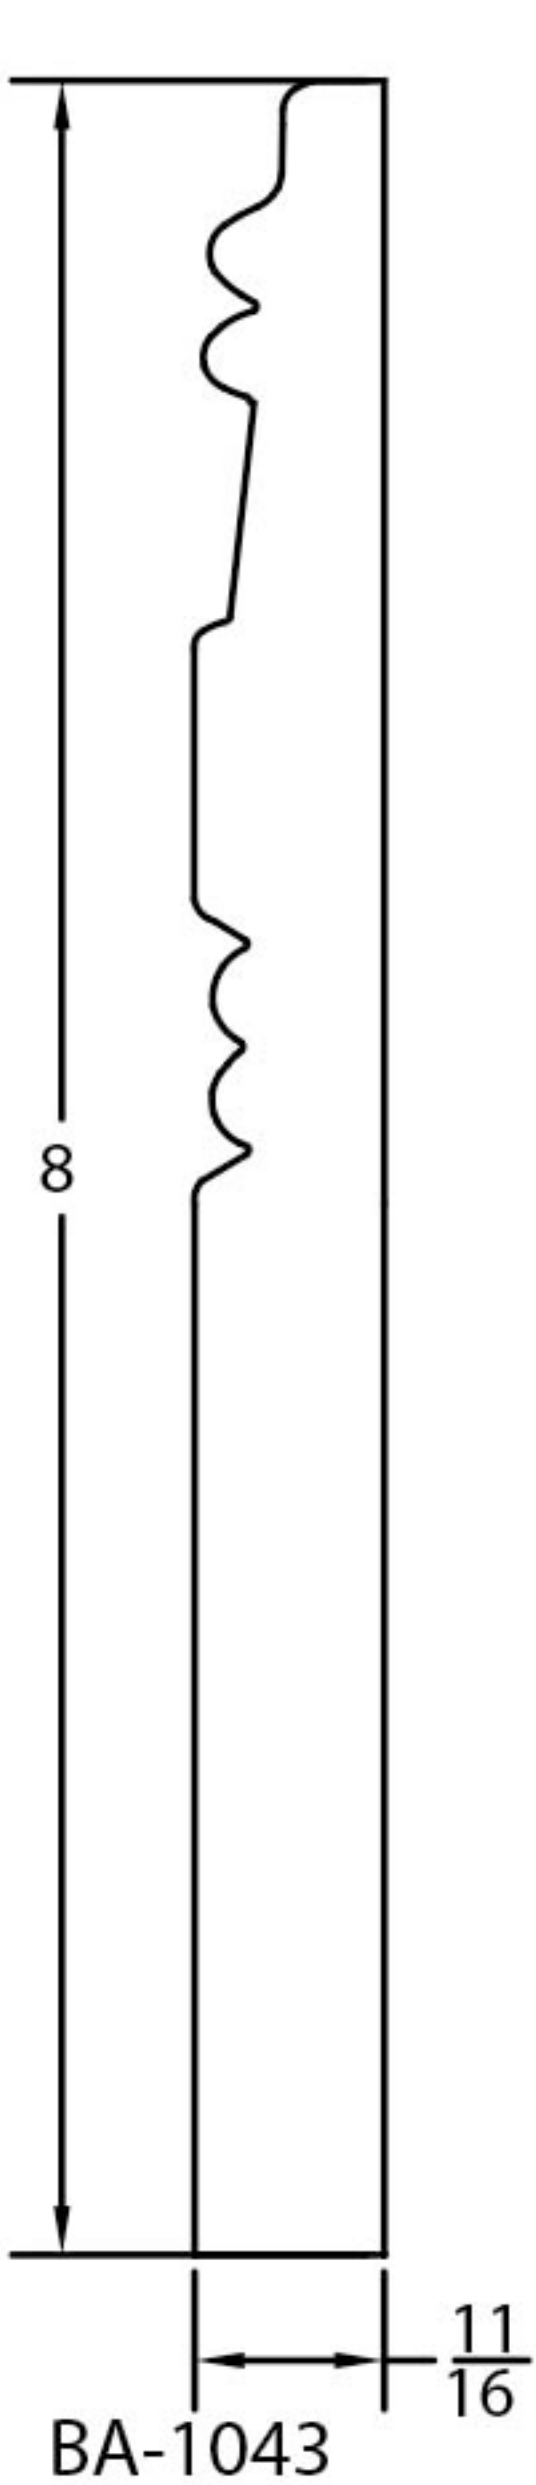


BA-1047

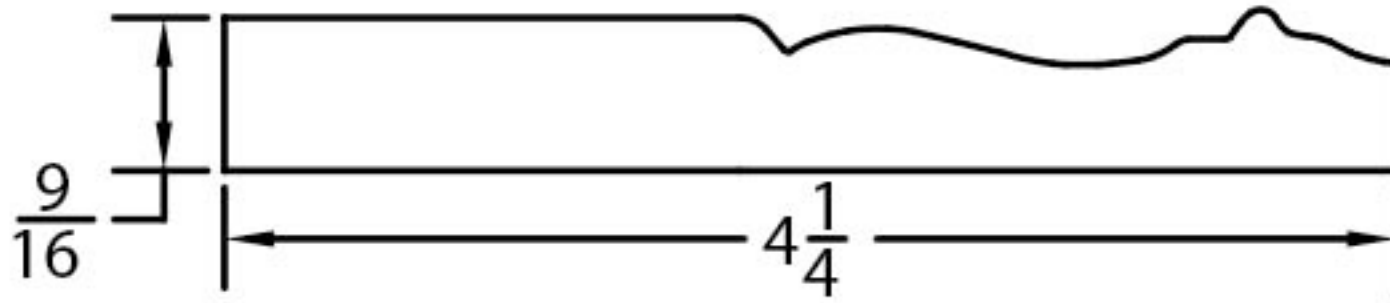


BA-1048



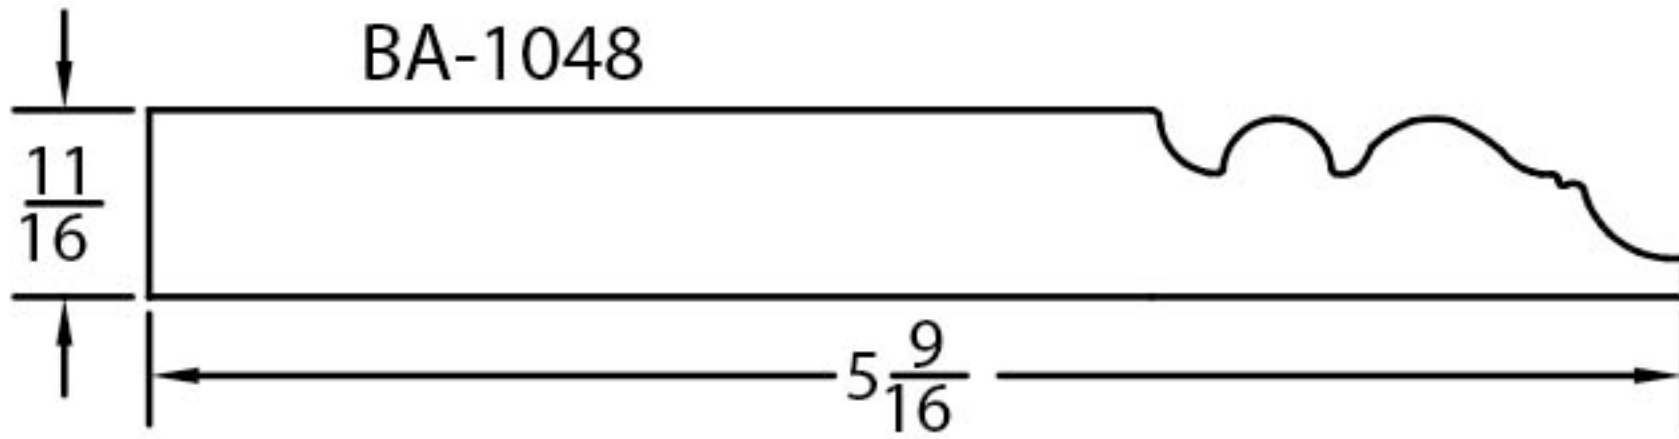


BA-1049

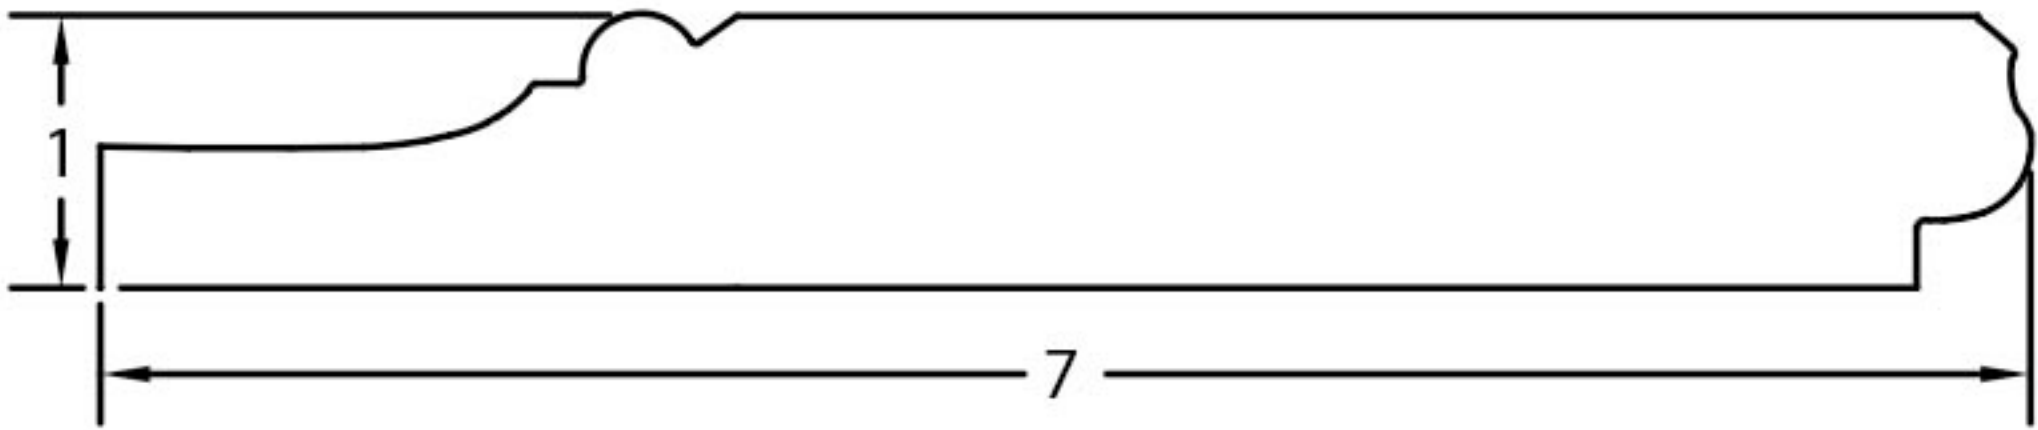


BA-1050

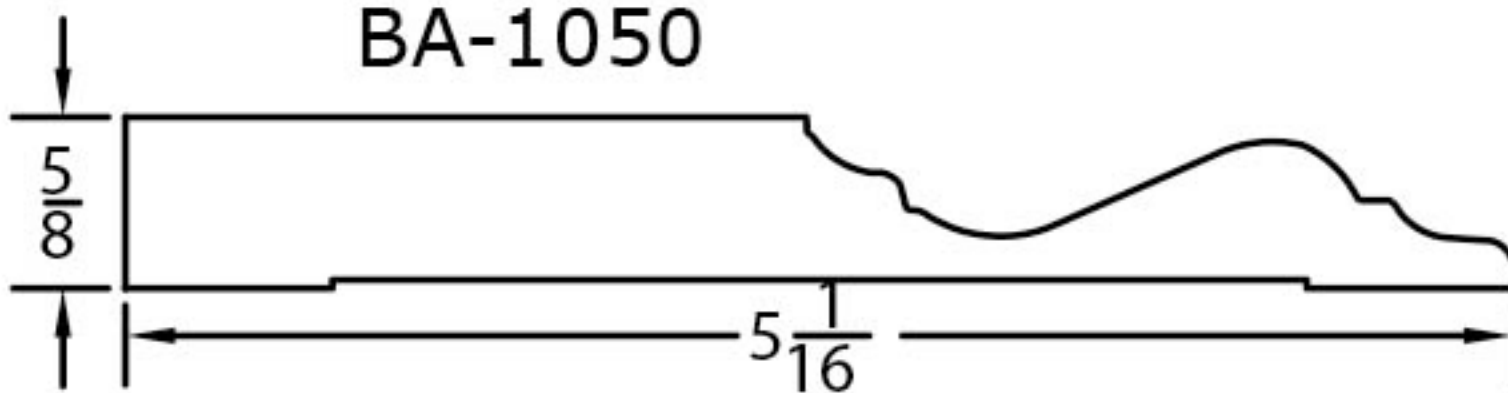

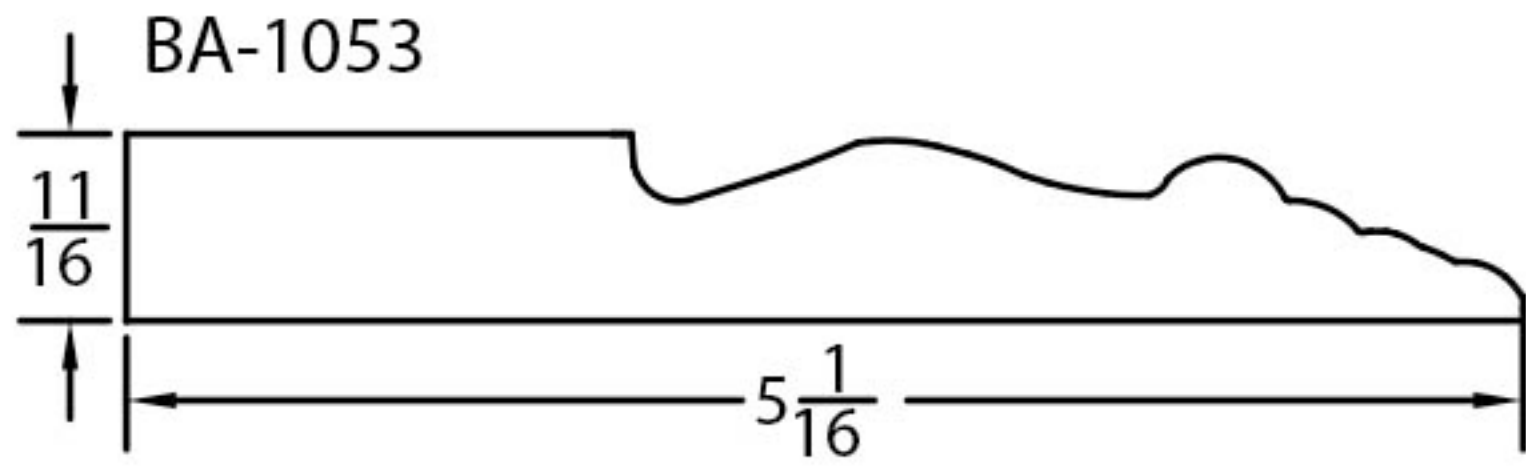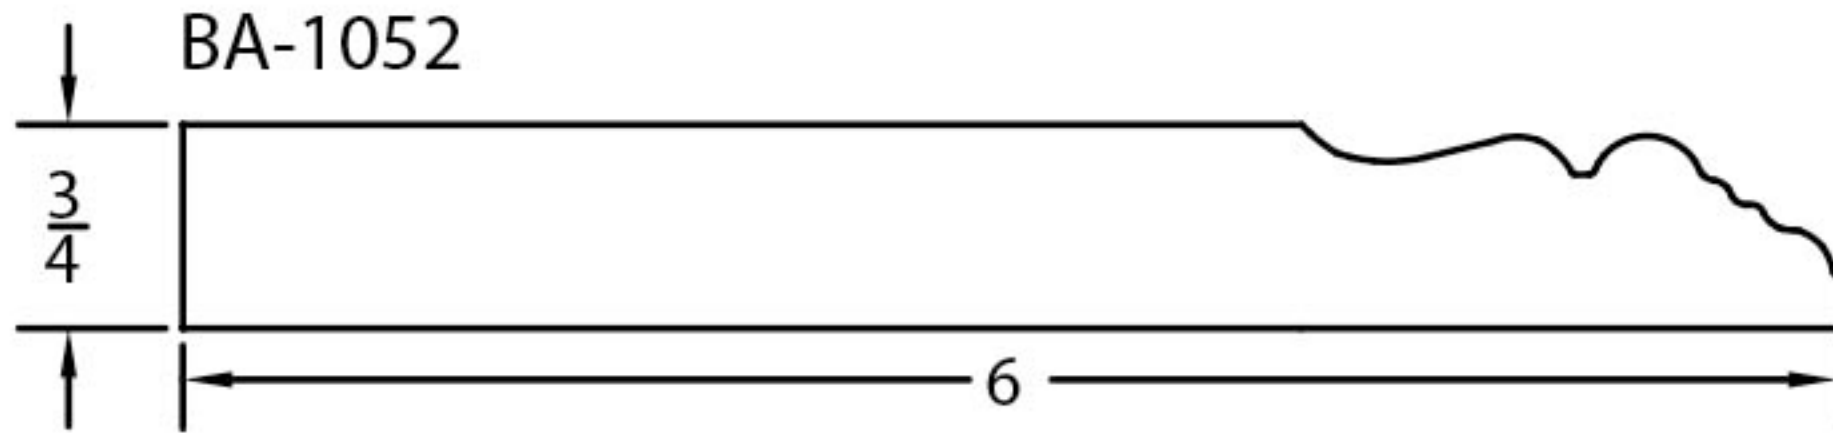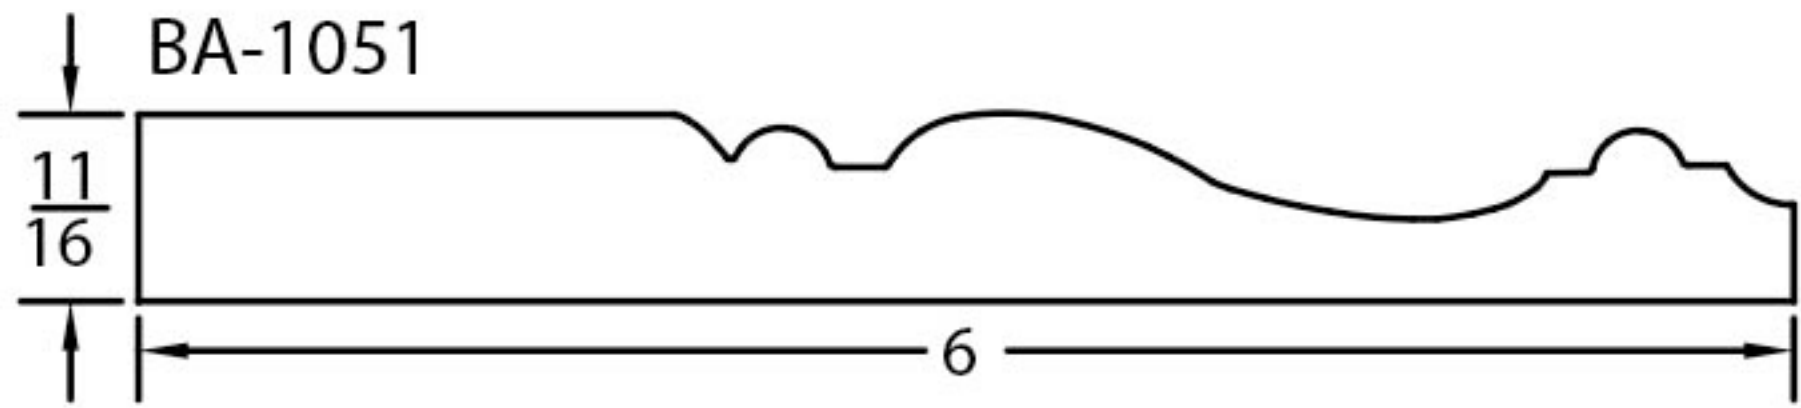





BA-1054

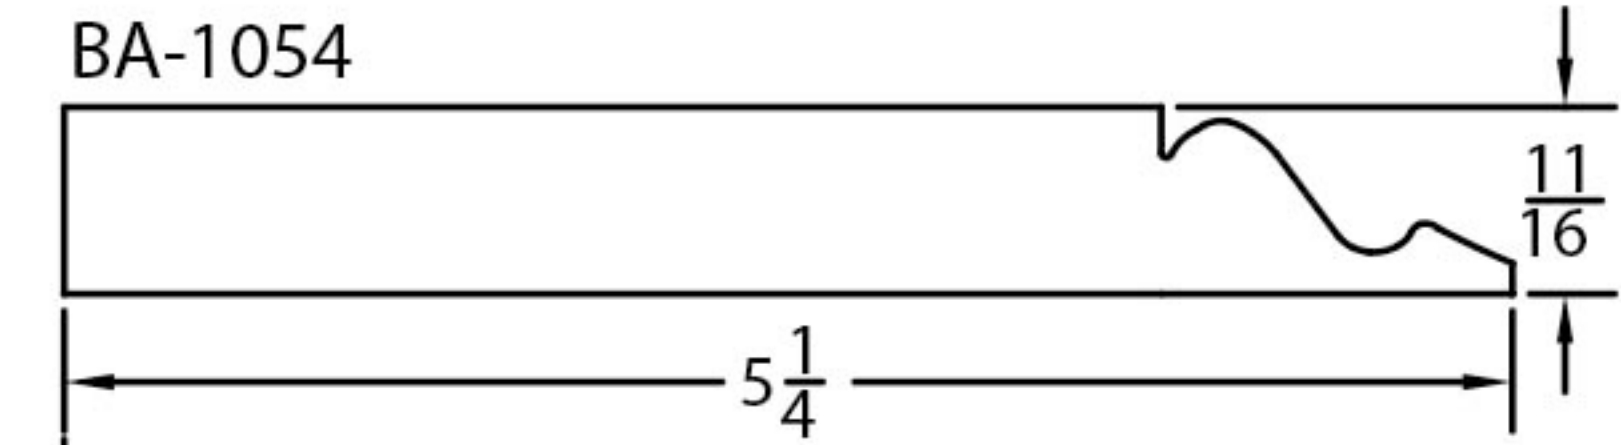


BA-1055

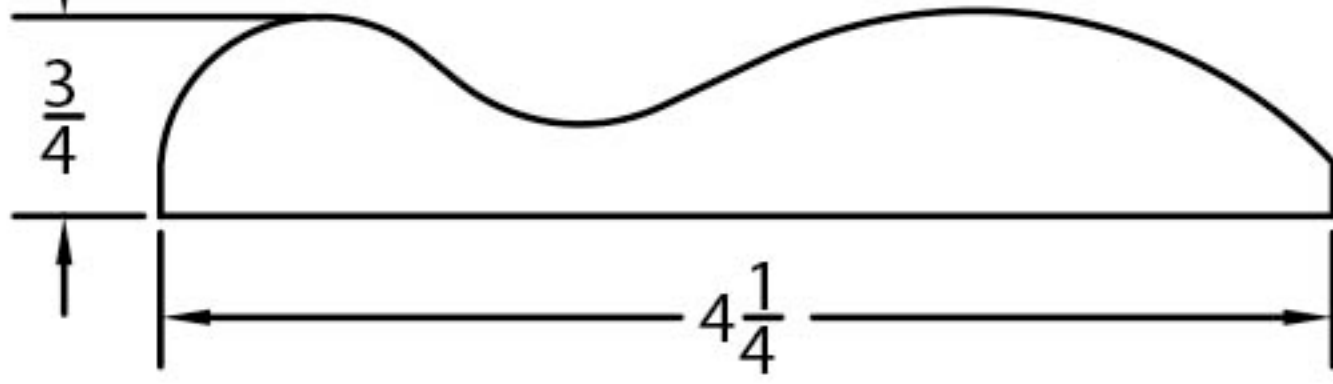


BA-1056





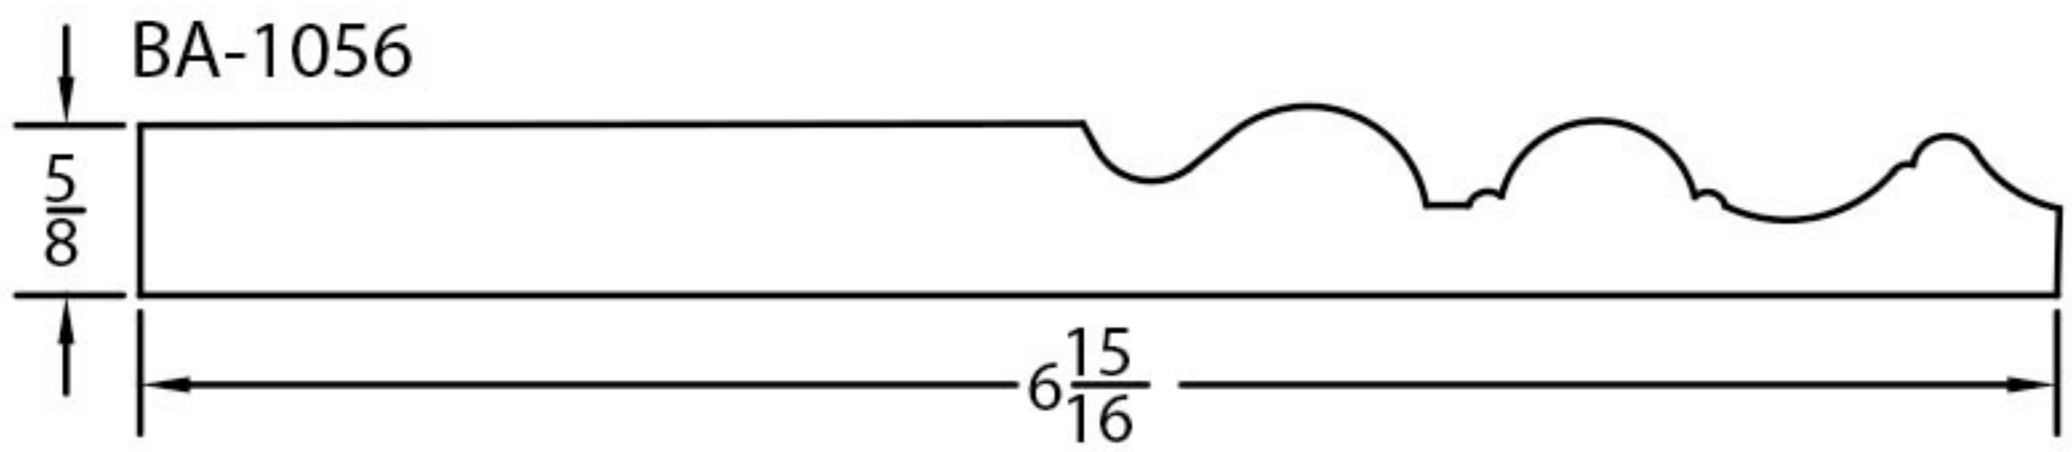







BA-1057




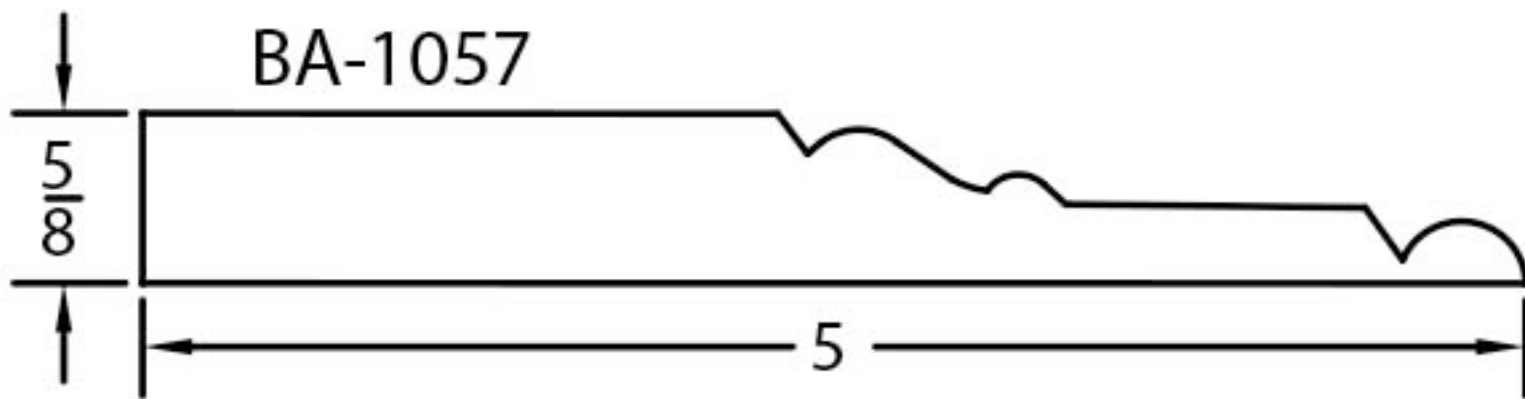


BA-1058

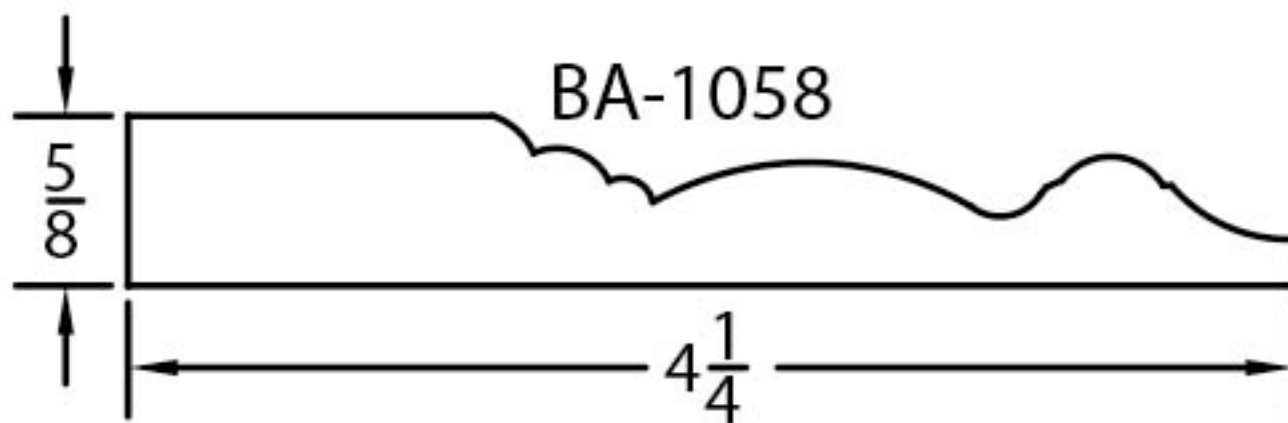


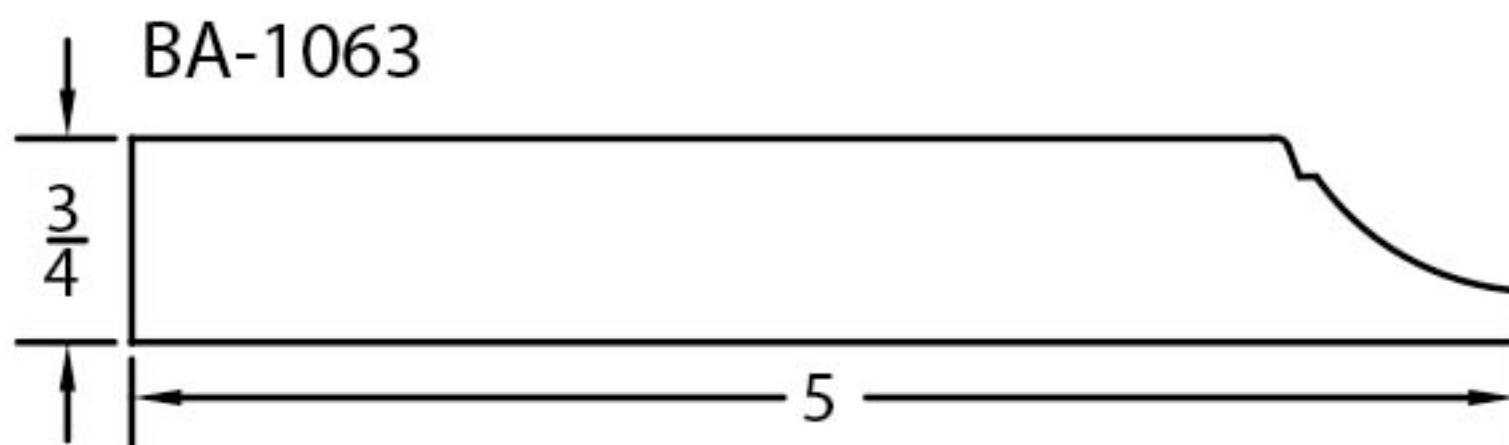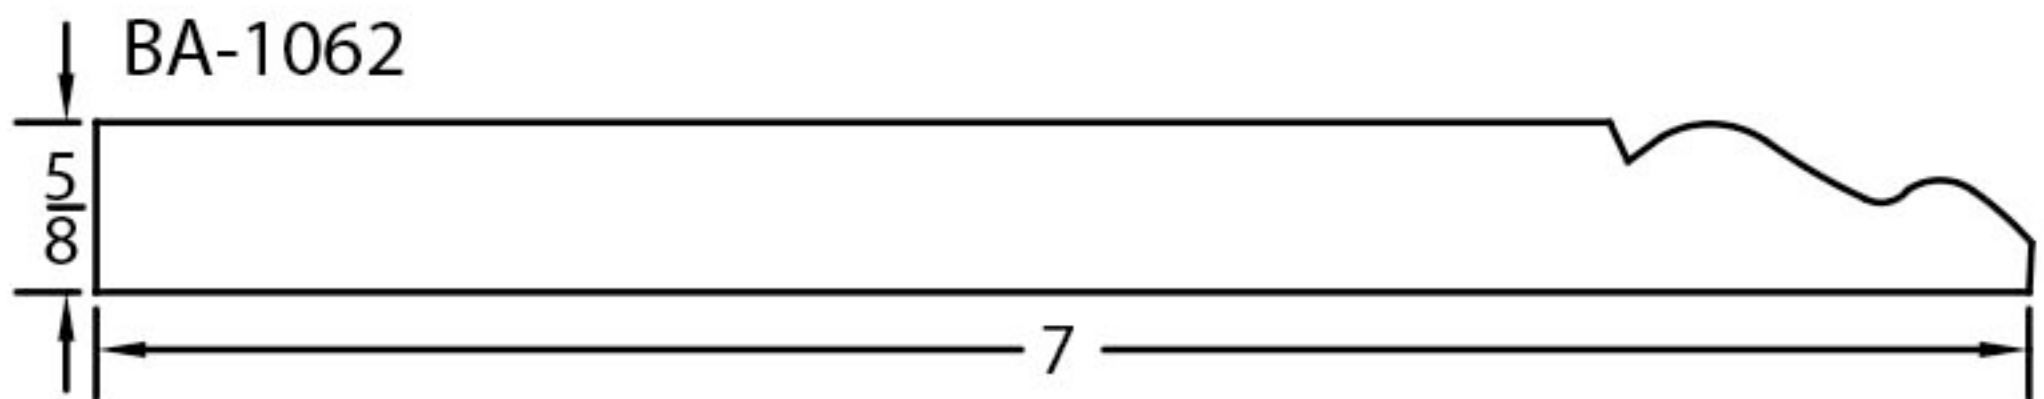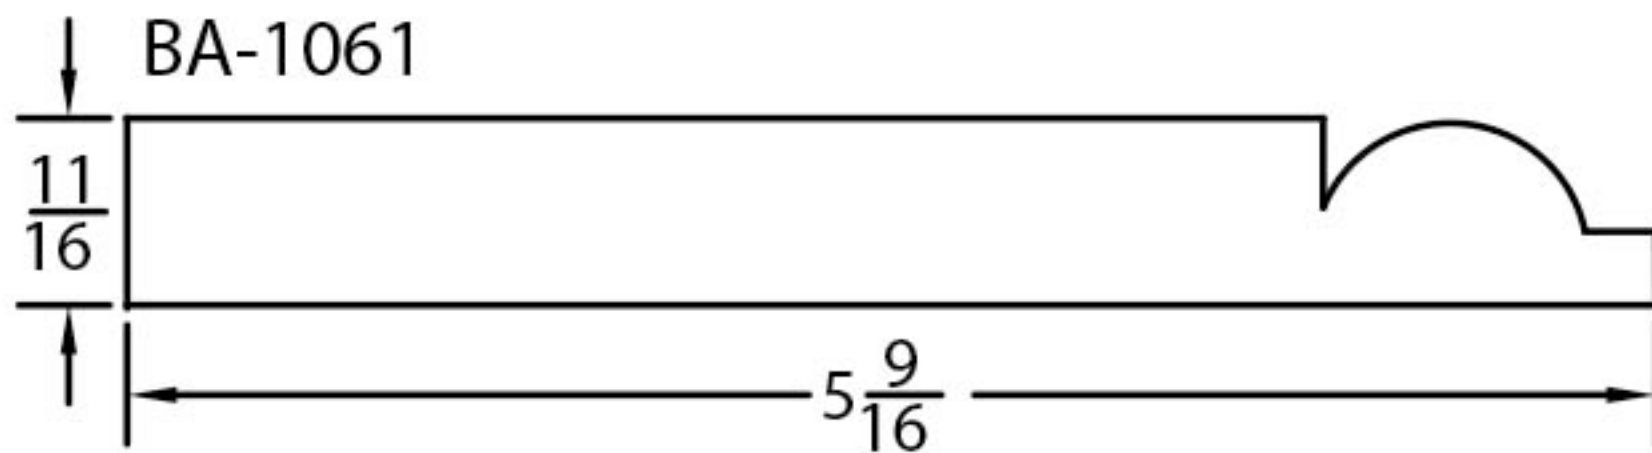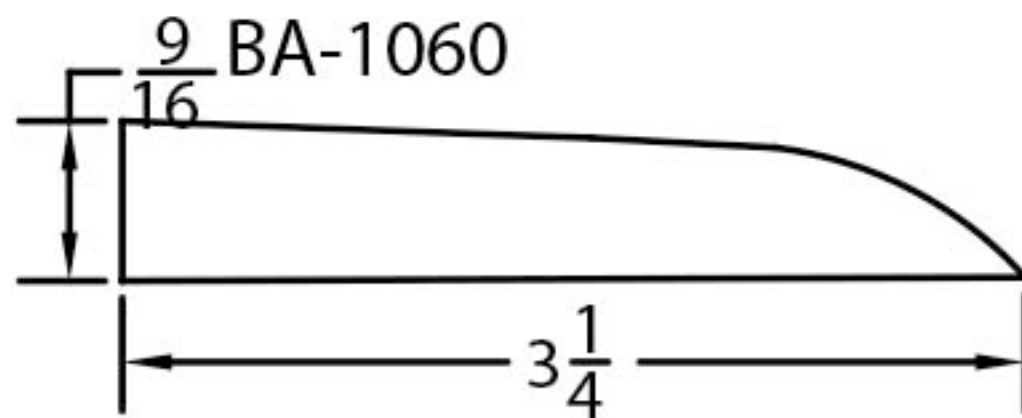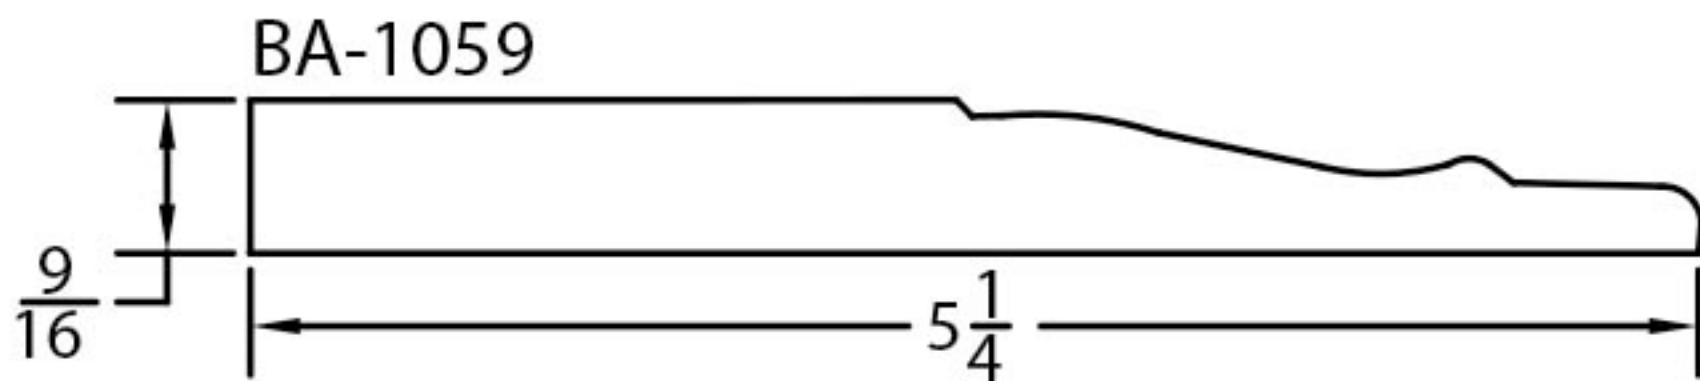

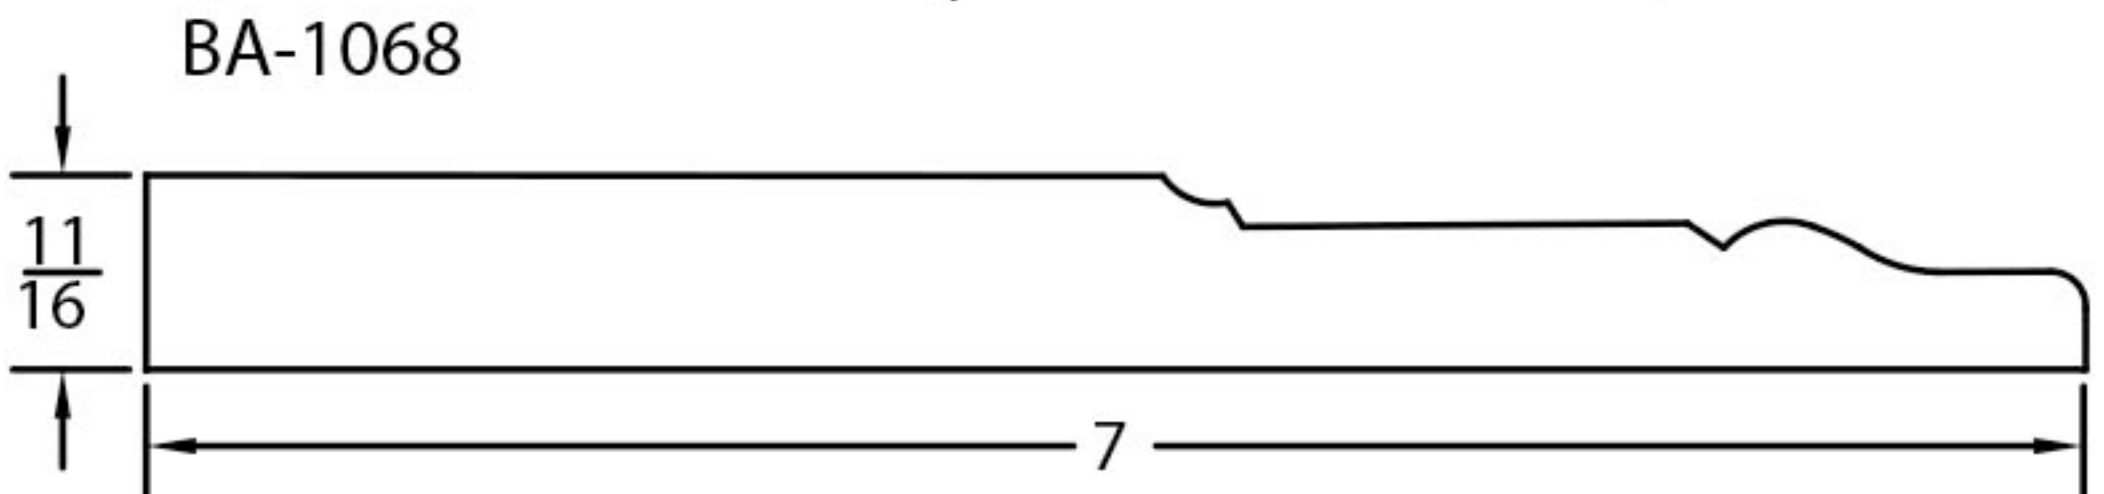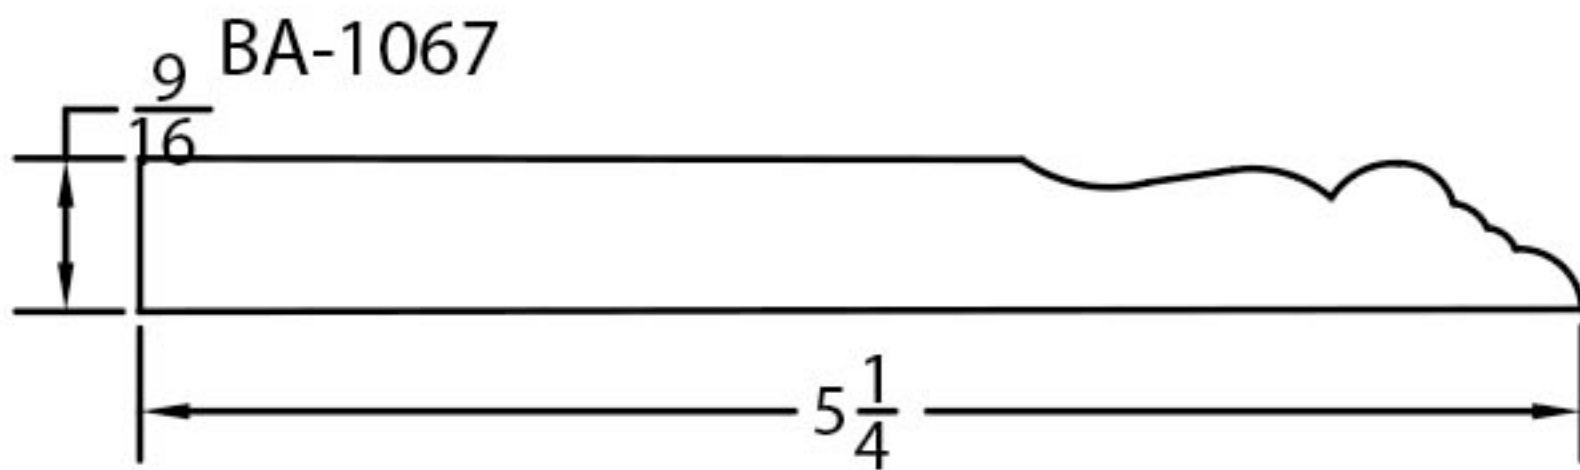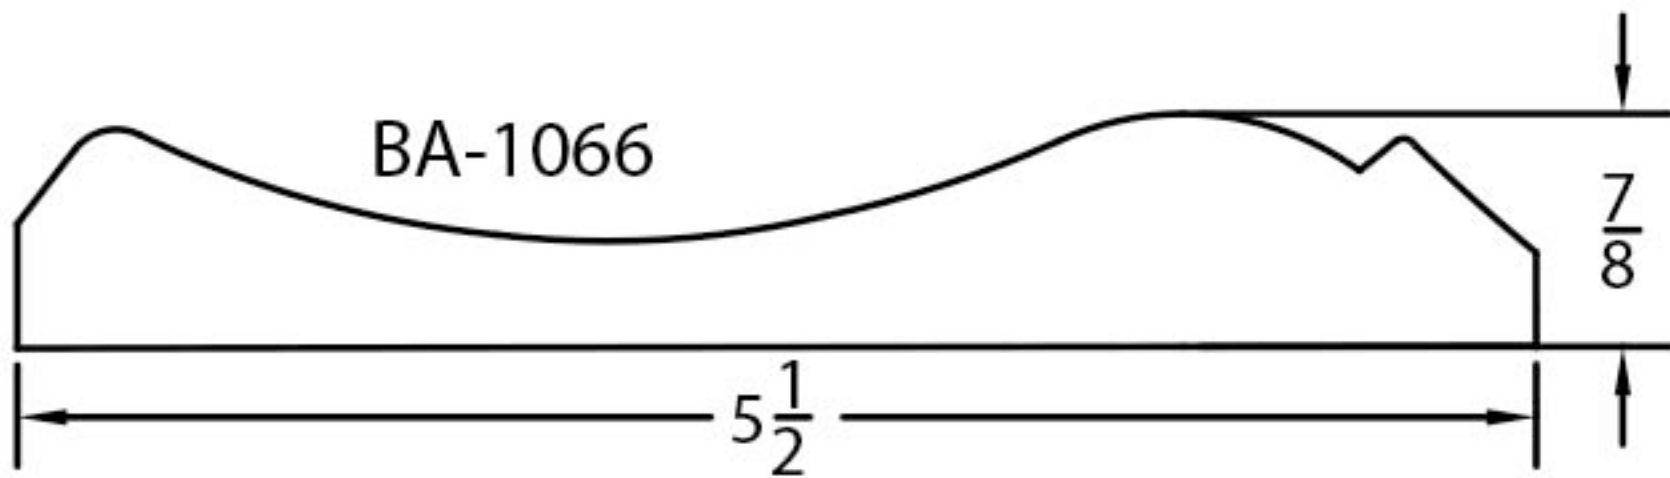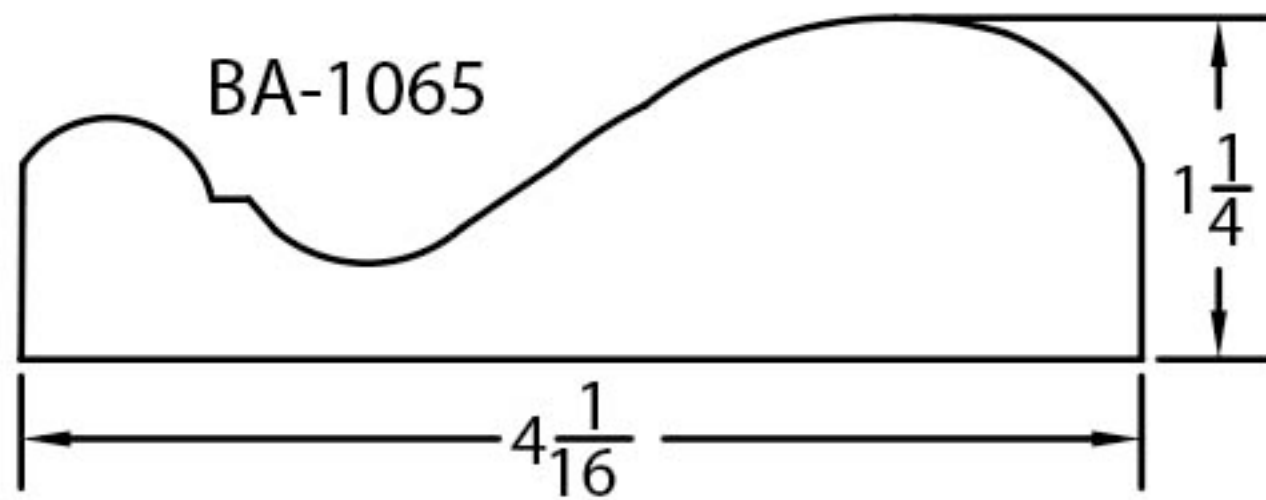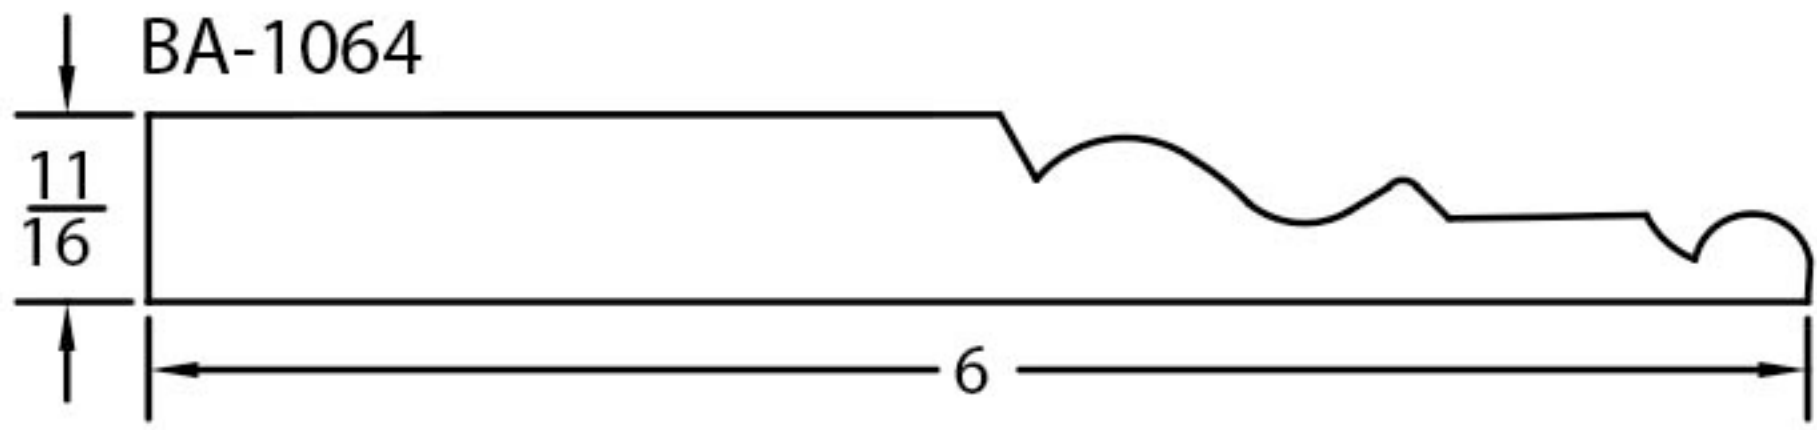


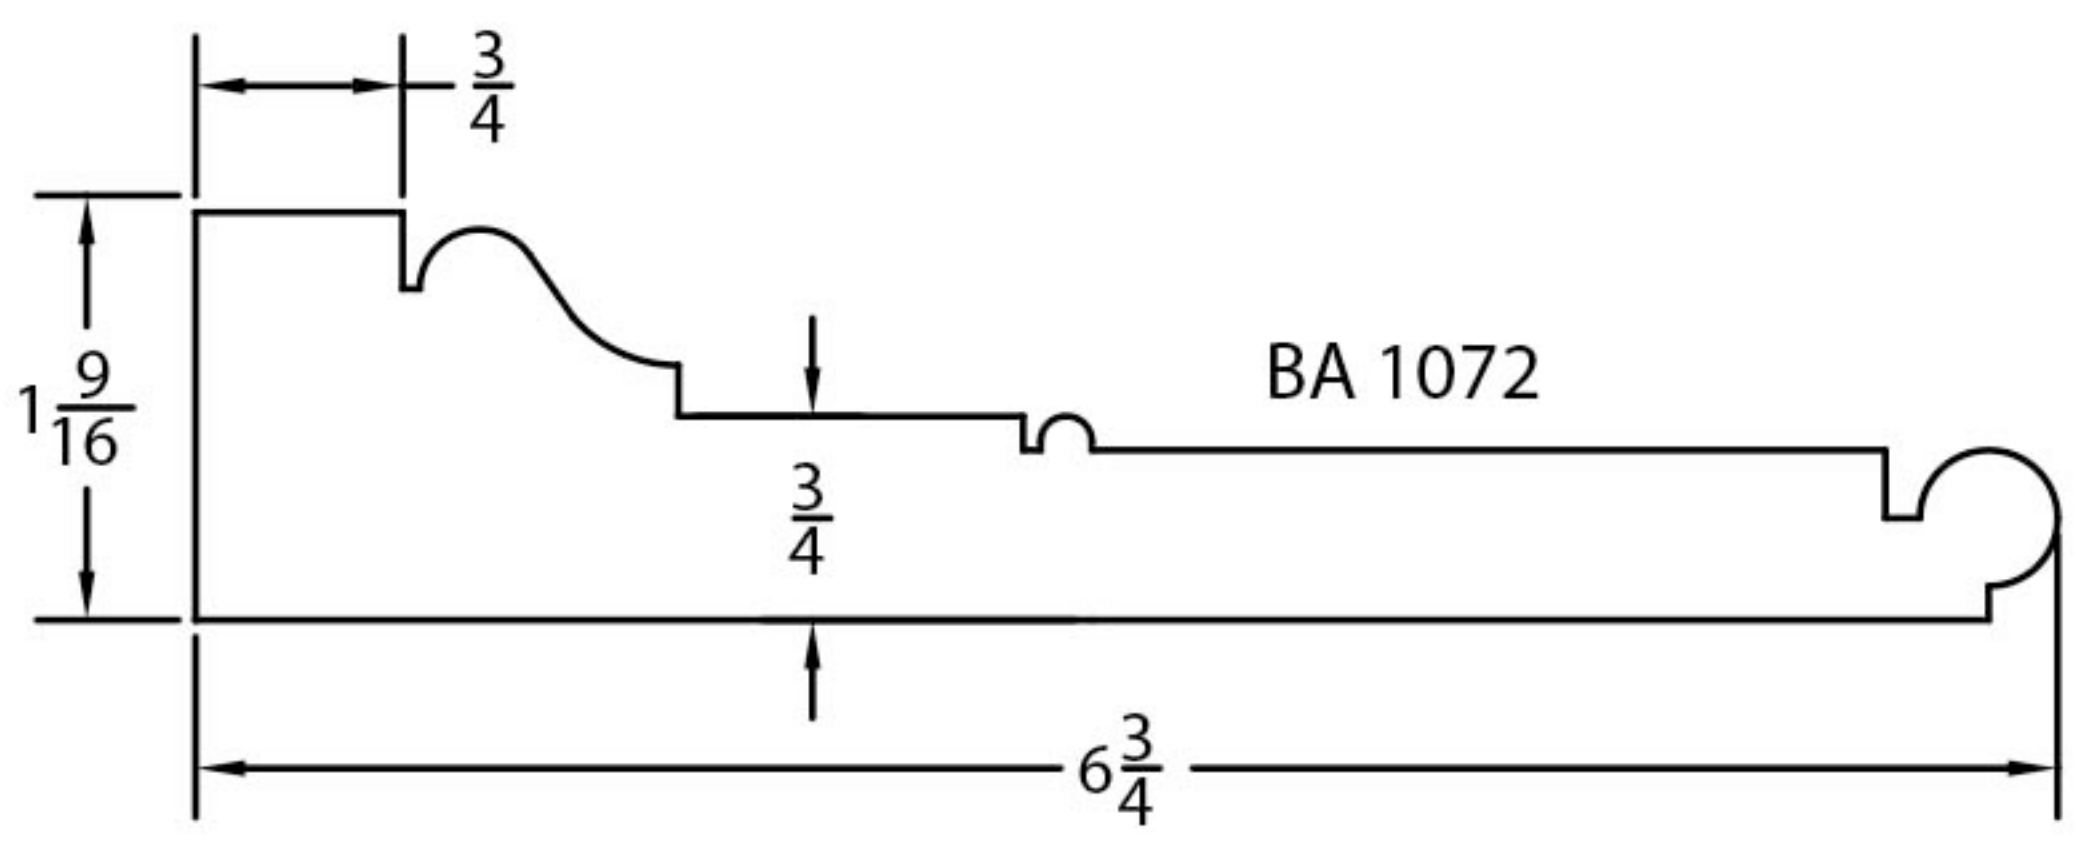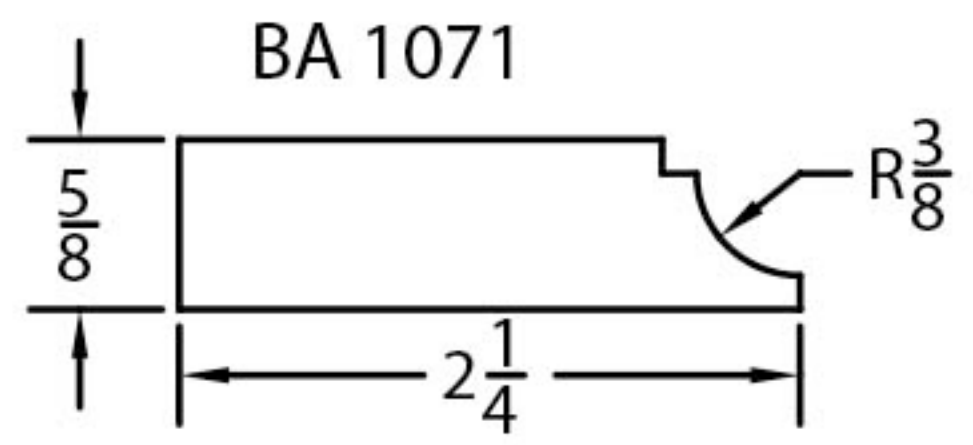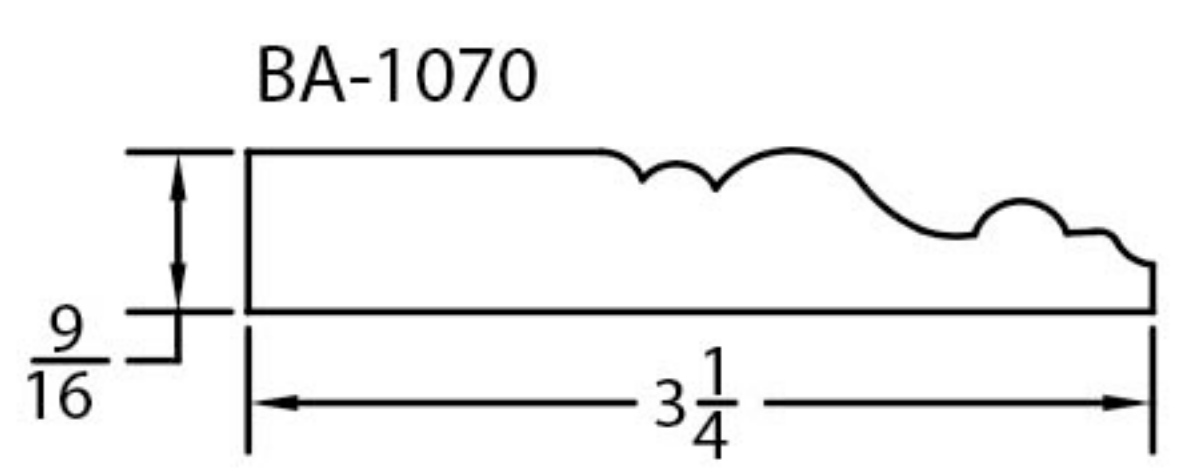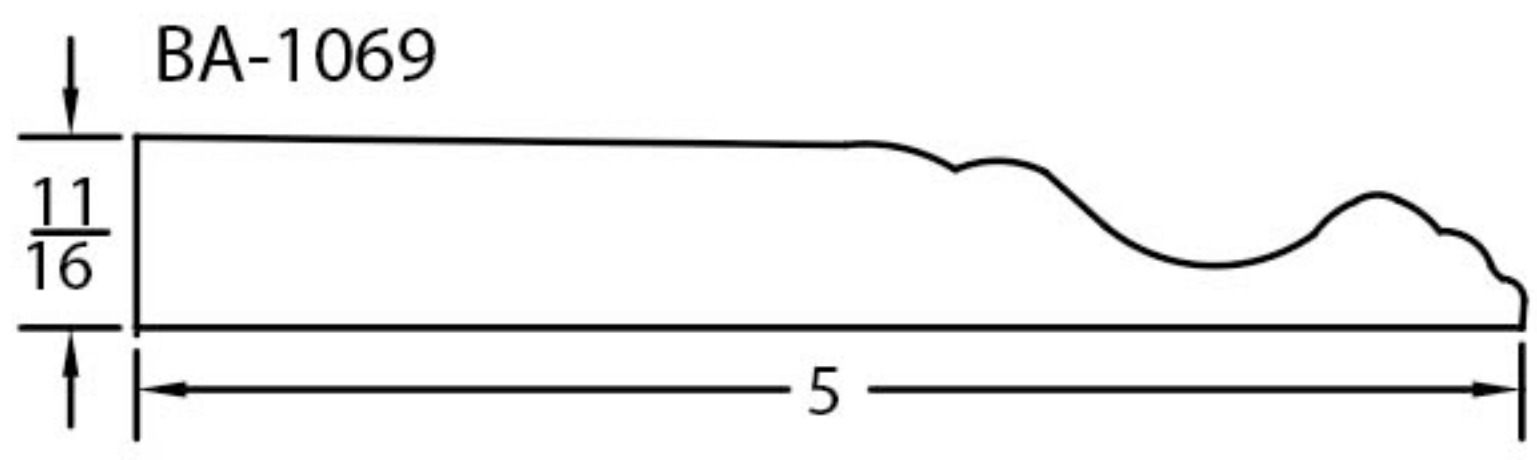


BA-1073

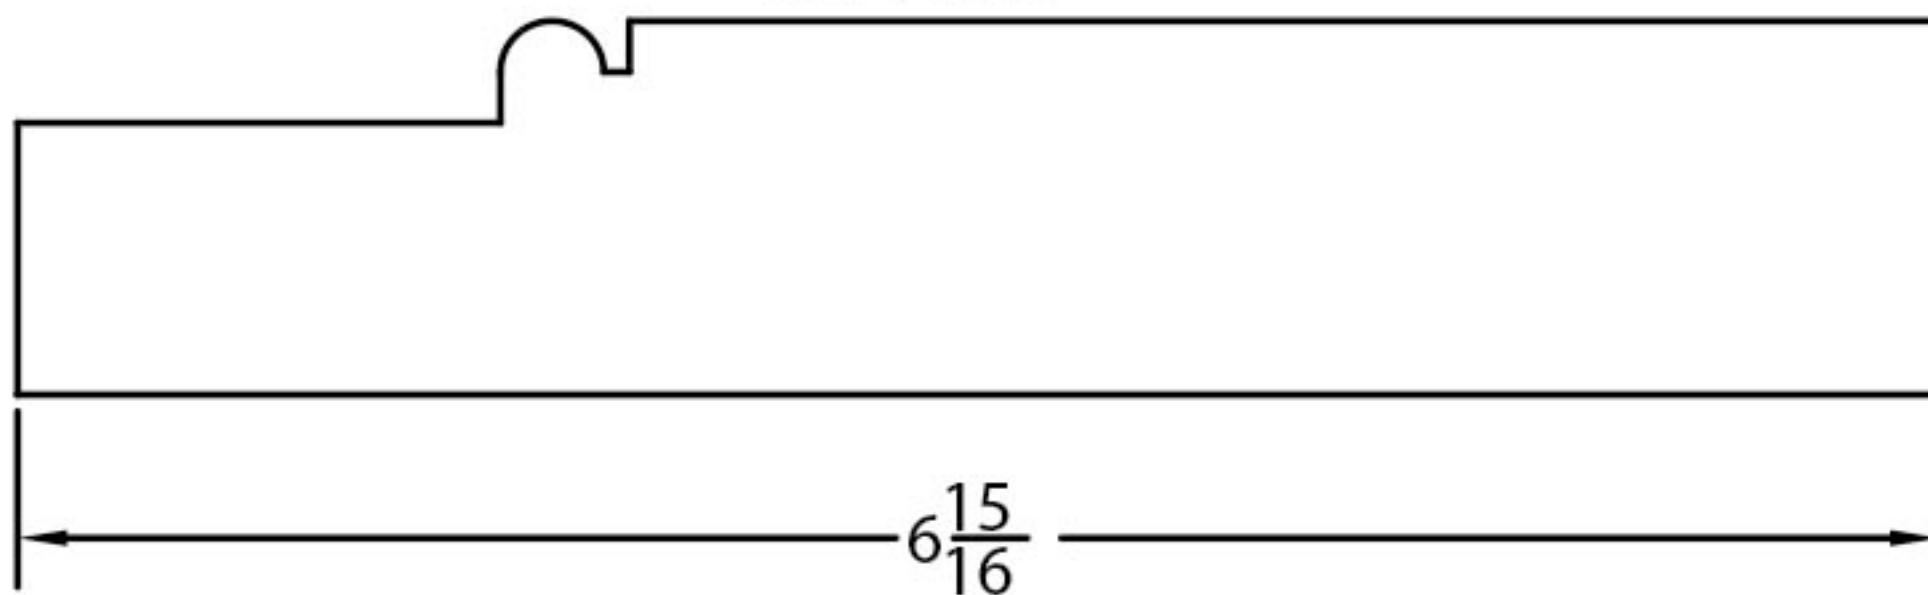


BA-1075

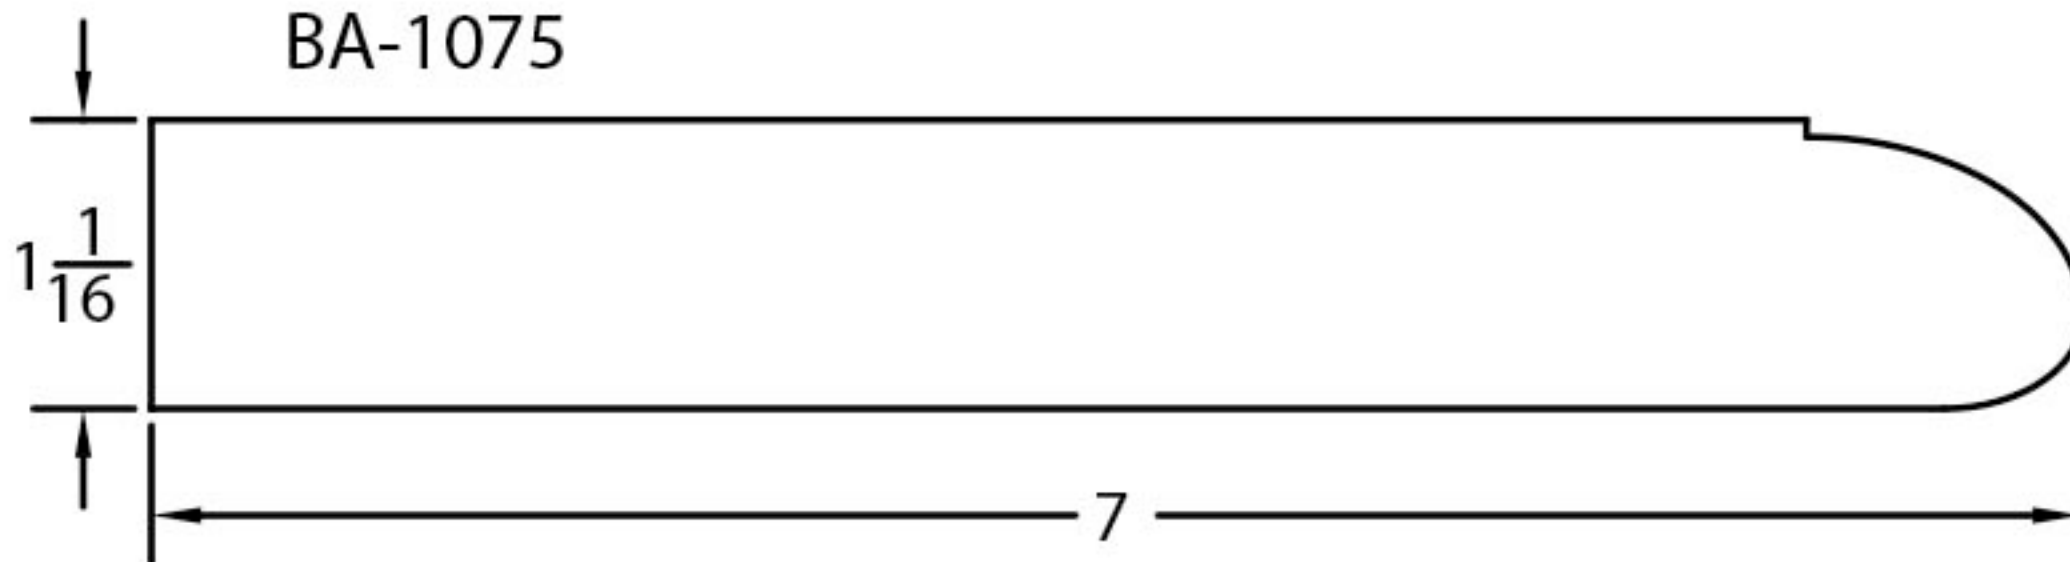

BA-1074

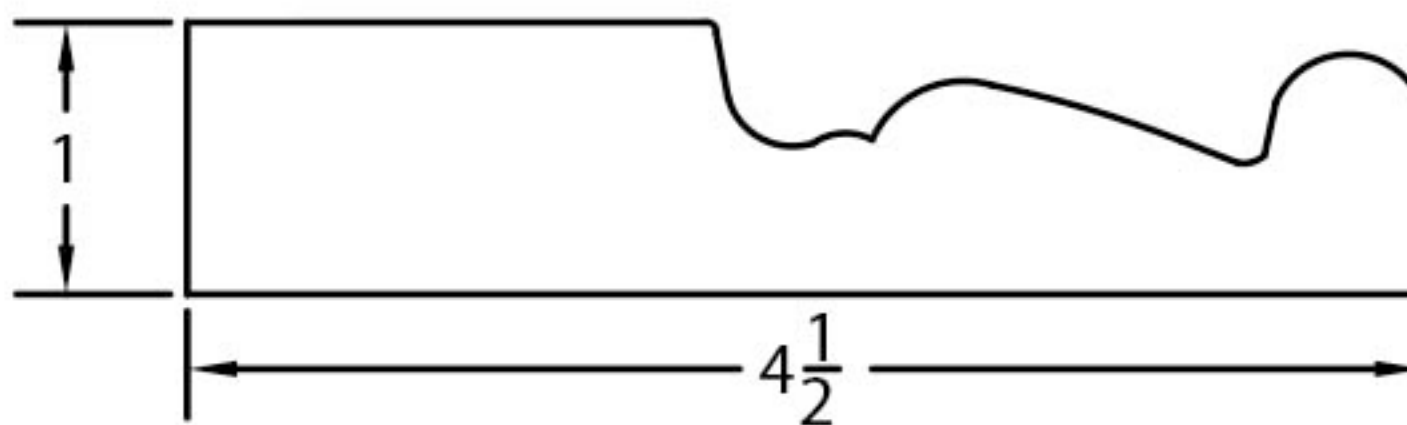

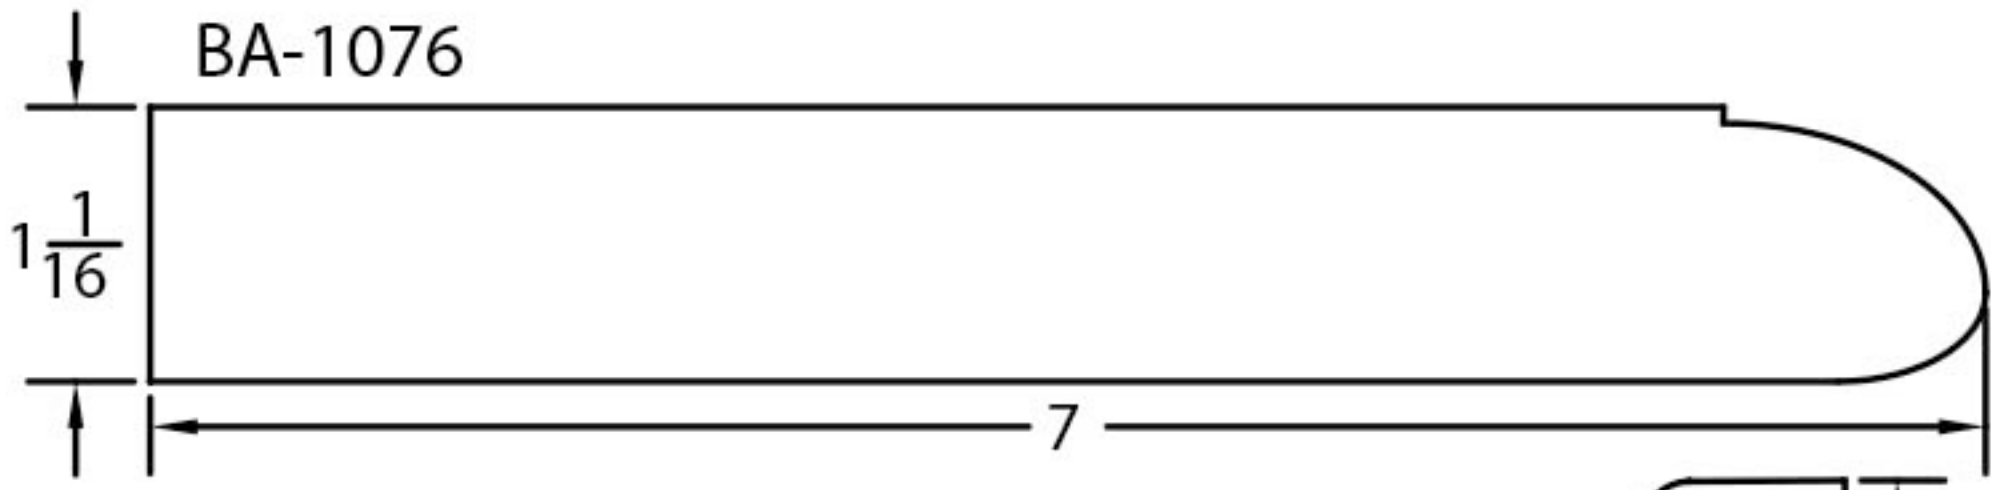

BA-1078

