



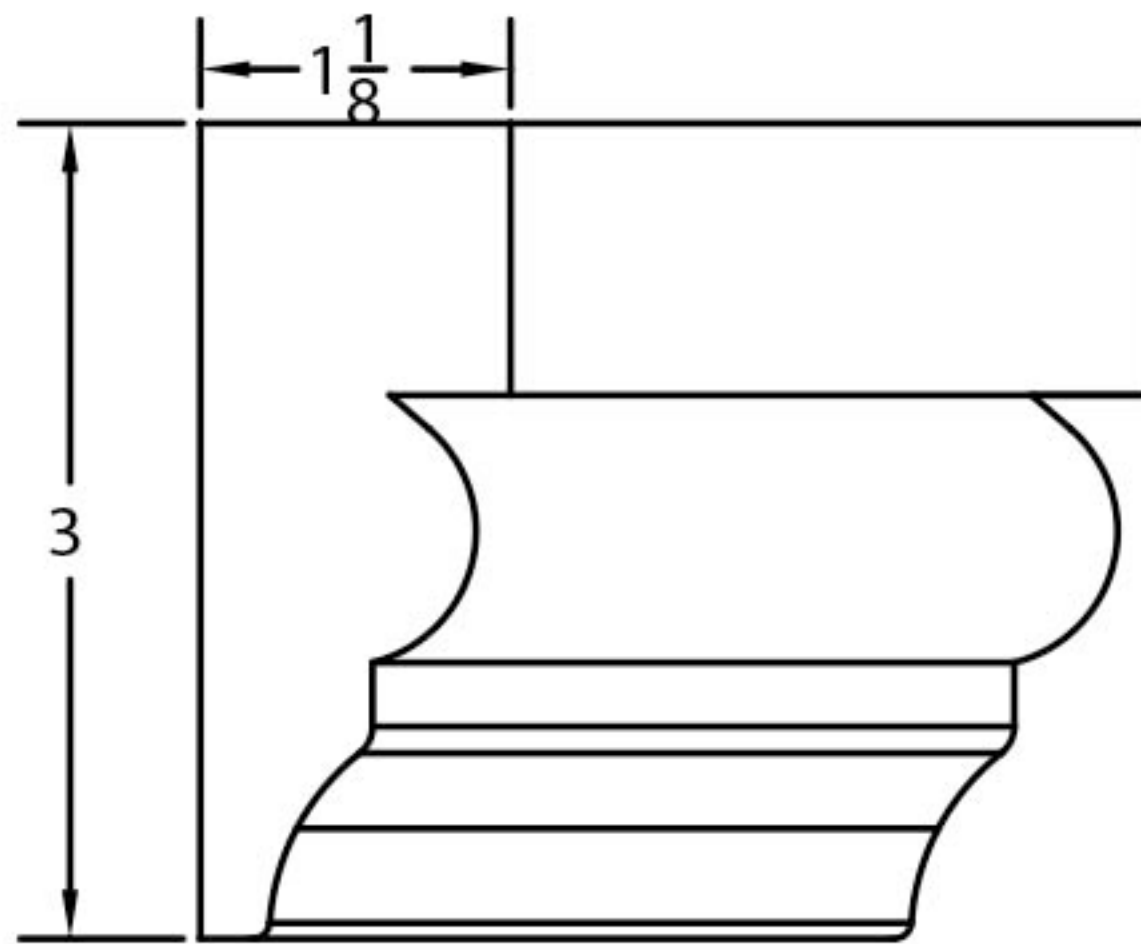


---

# MISCELLANEOUS MOULDINGS


For a complete set of Moulding profiles, please visit our website  
**[www.alpinewoodproducts.com](http://www.alpinewoodproducts.com)**

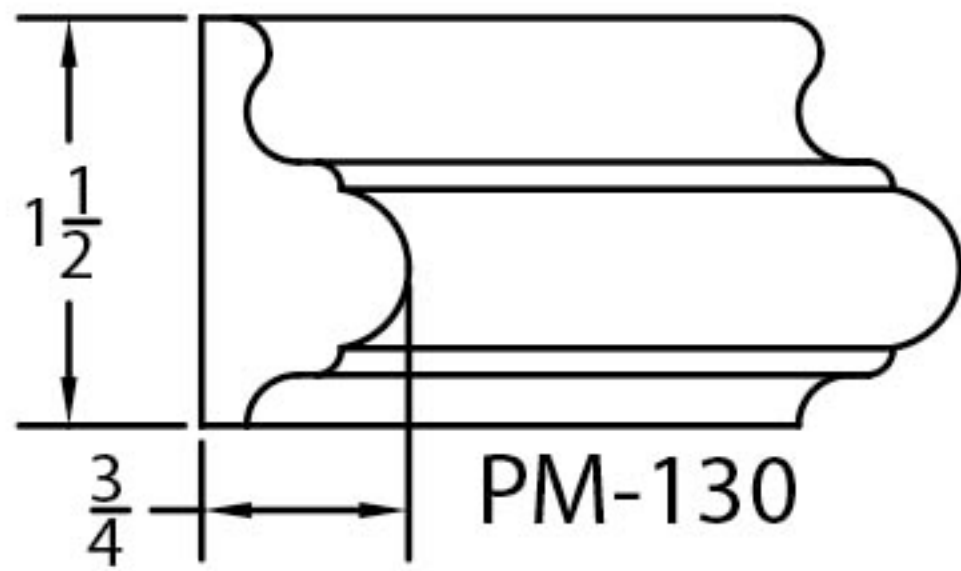


AP-300

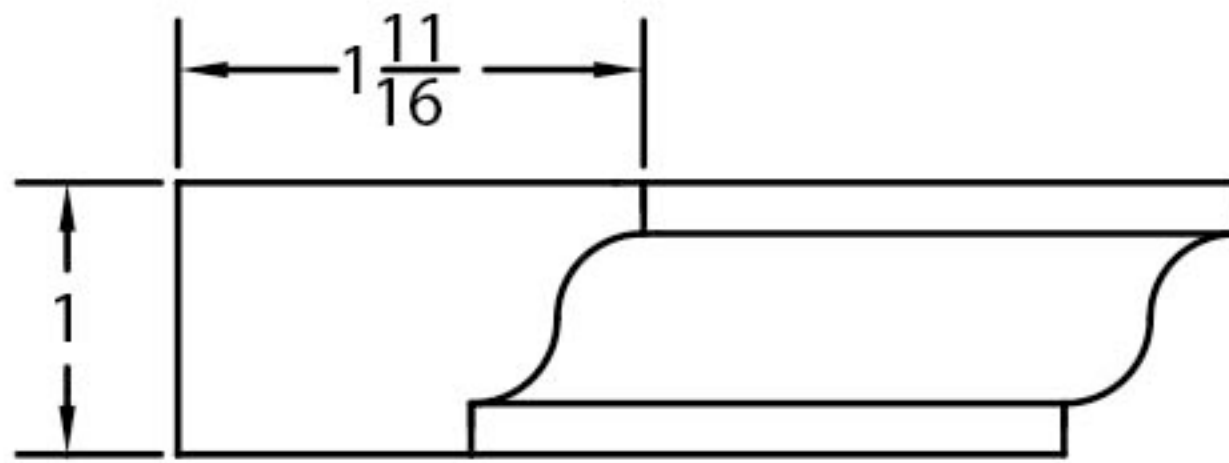


CM-120

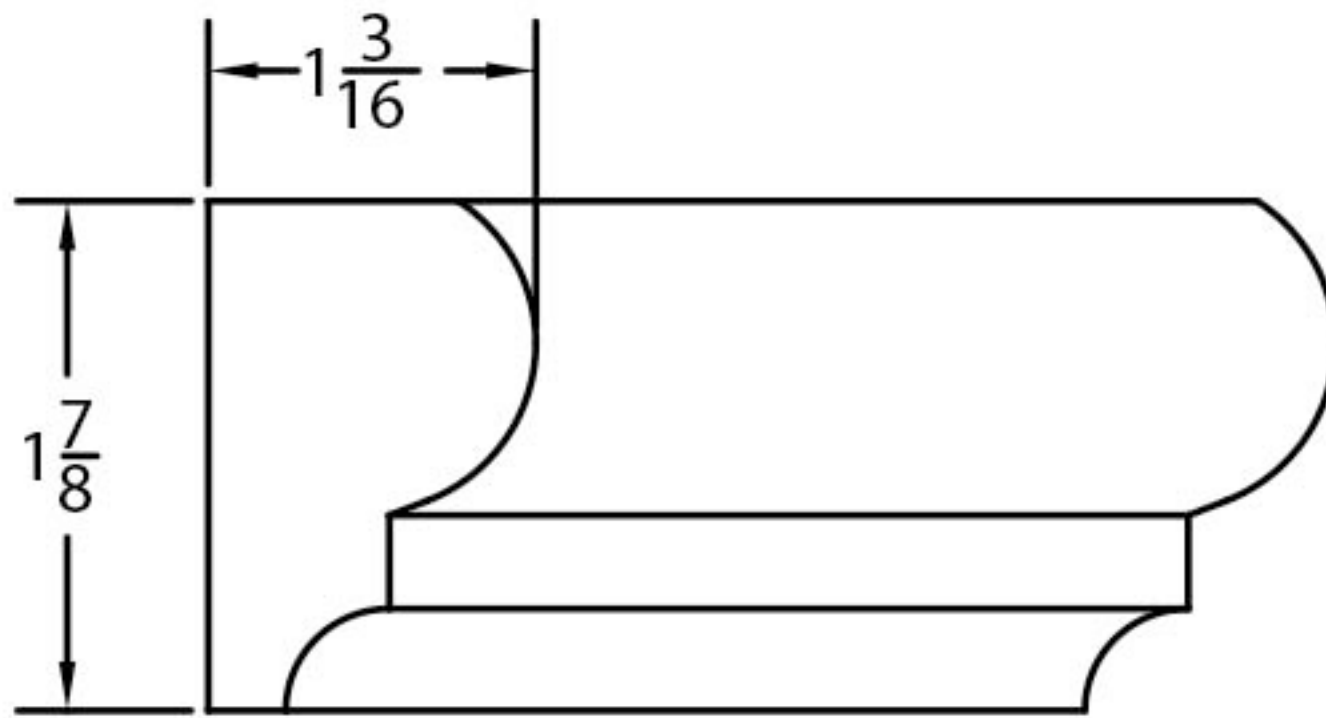


CM-154

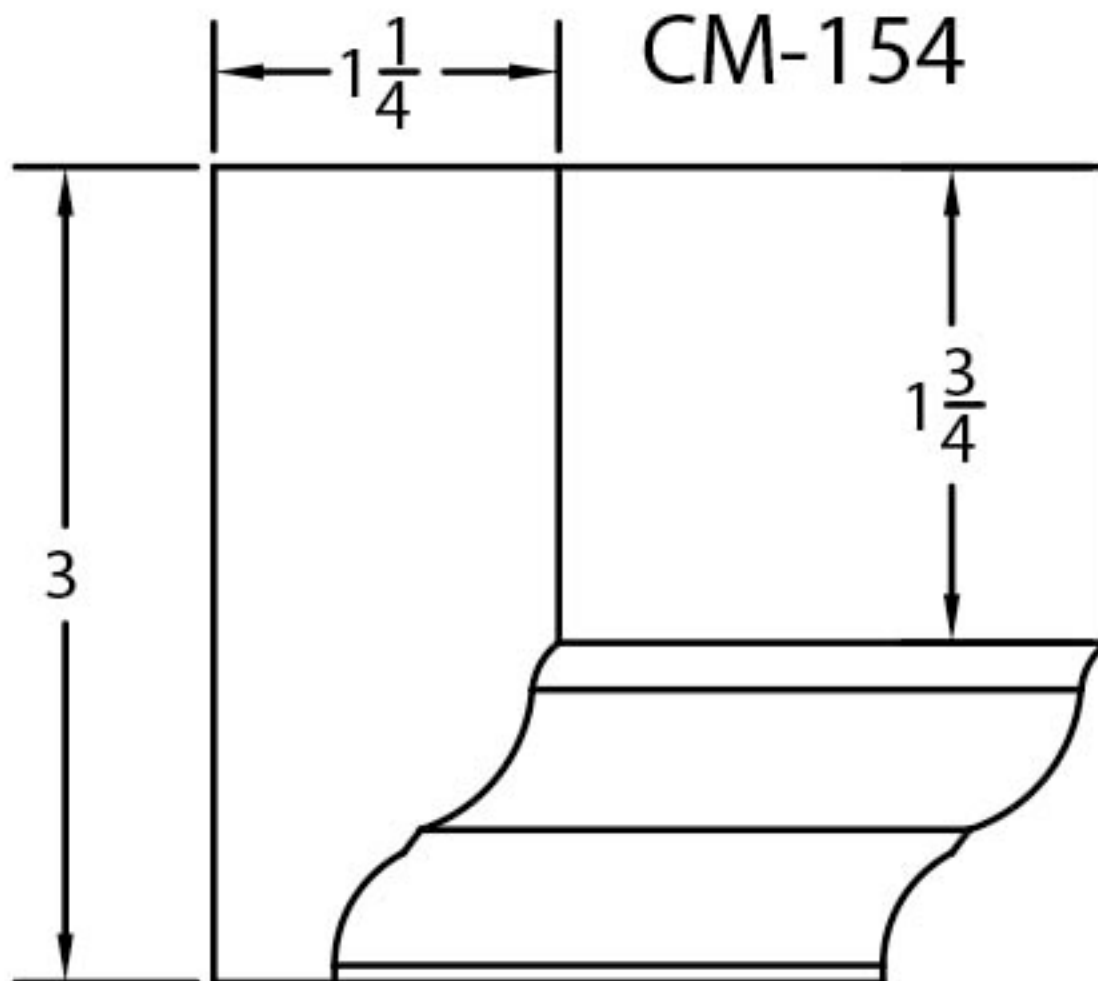





CM-300




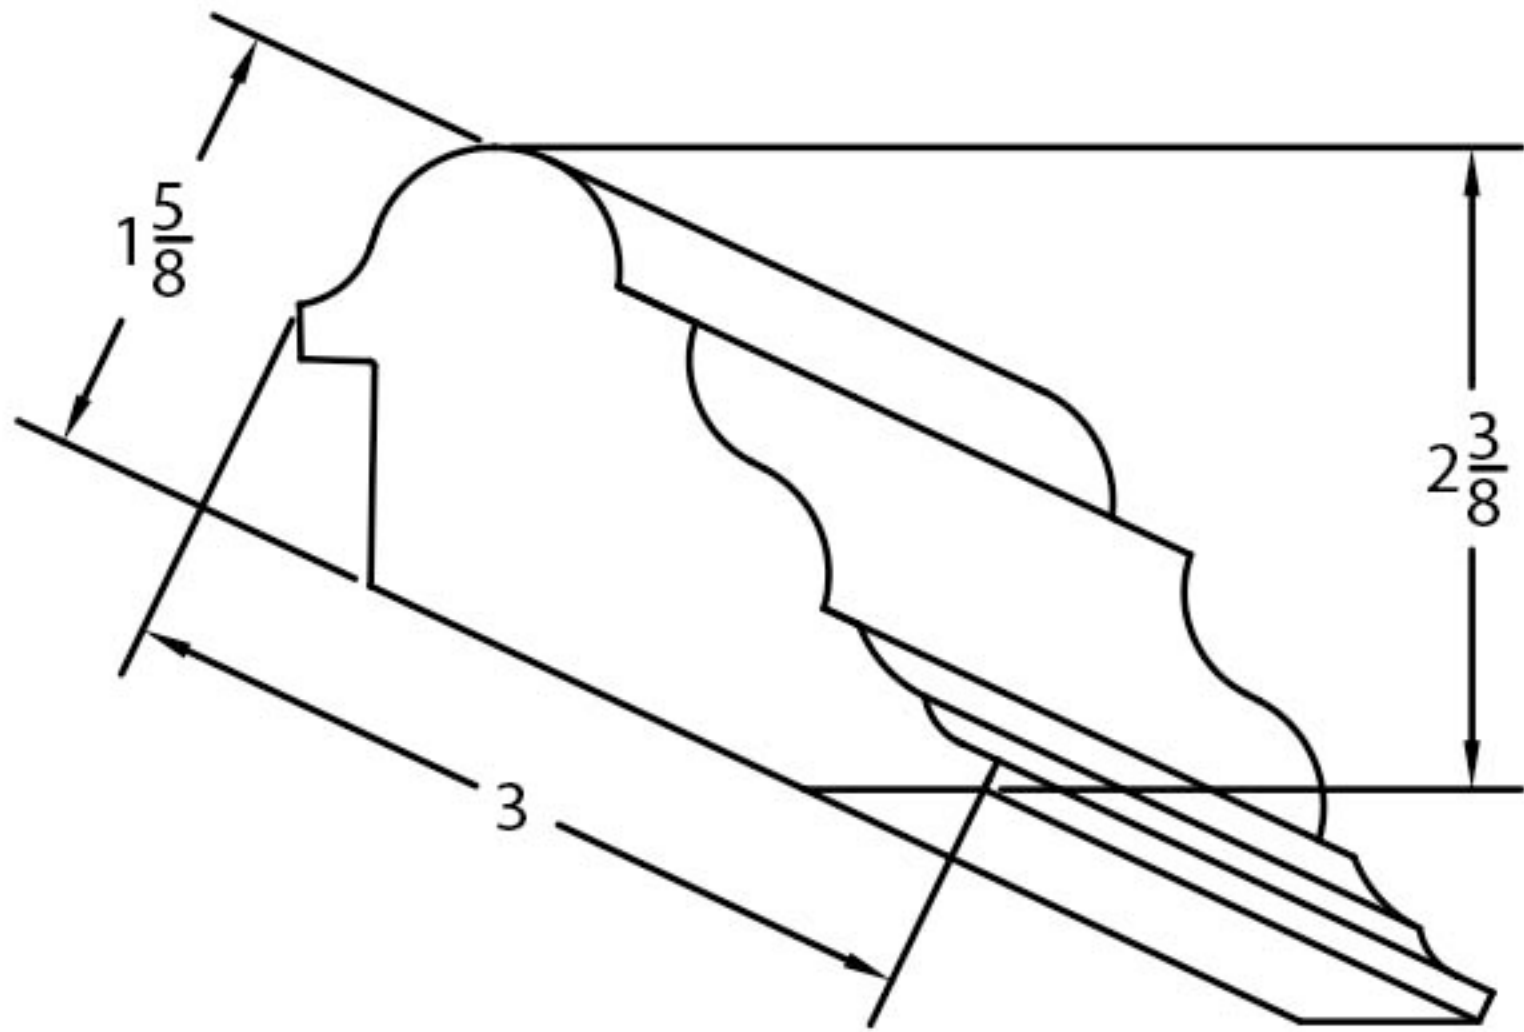


CM-325

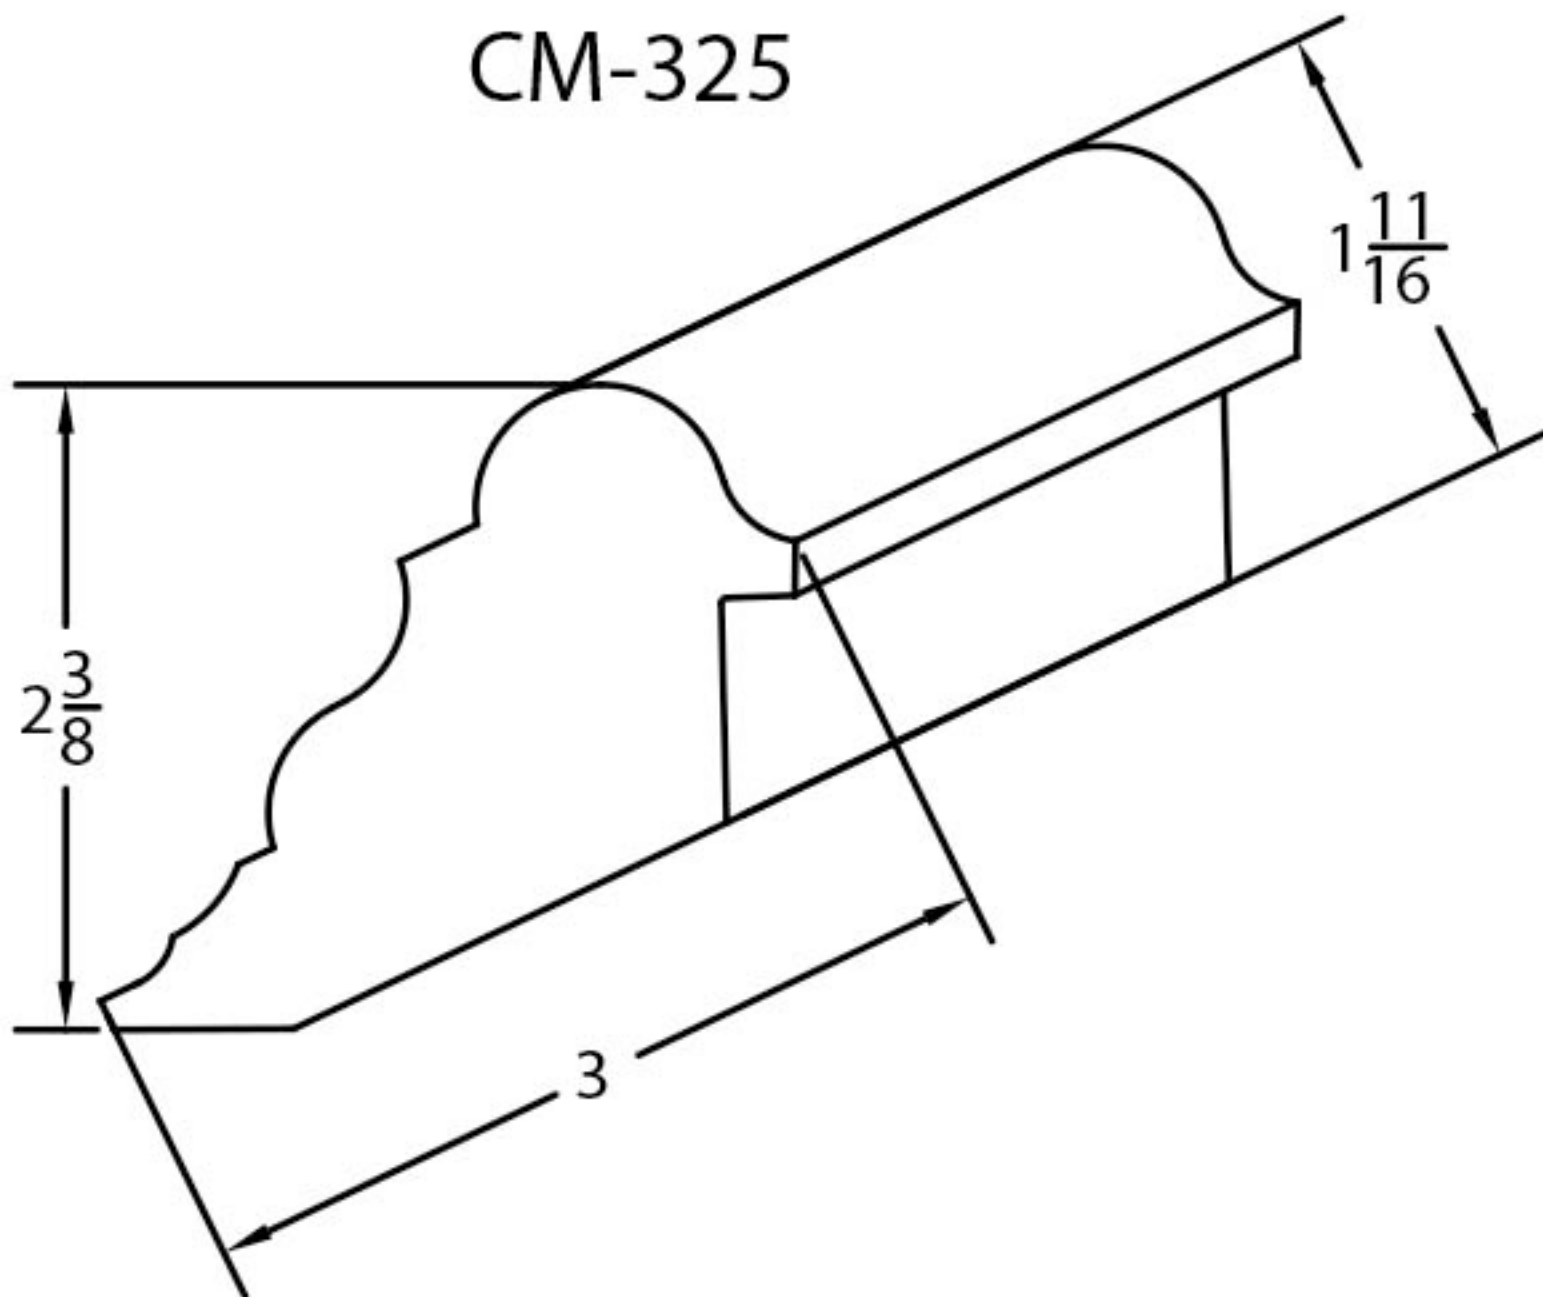


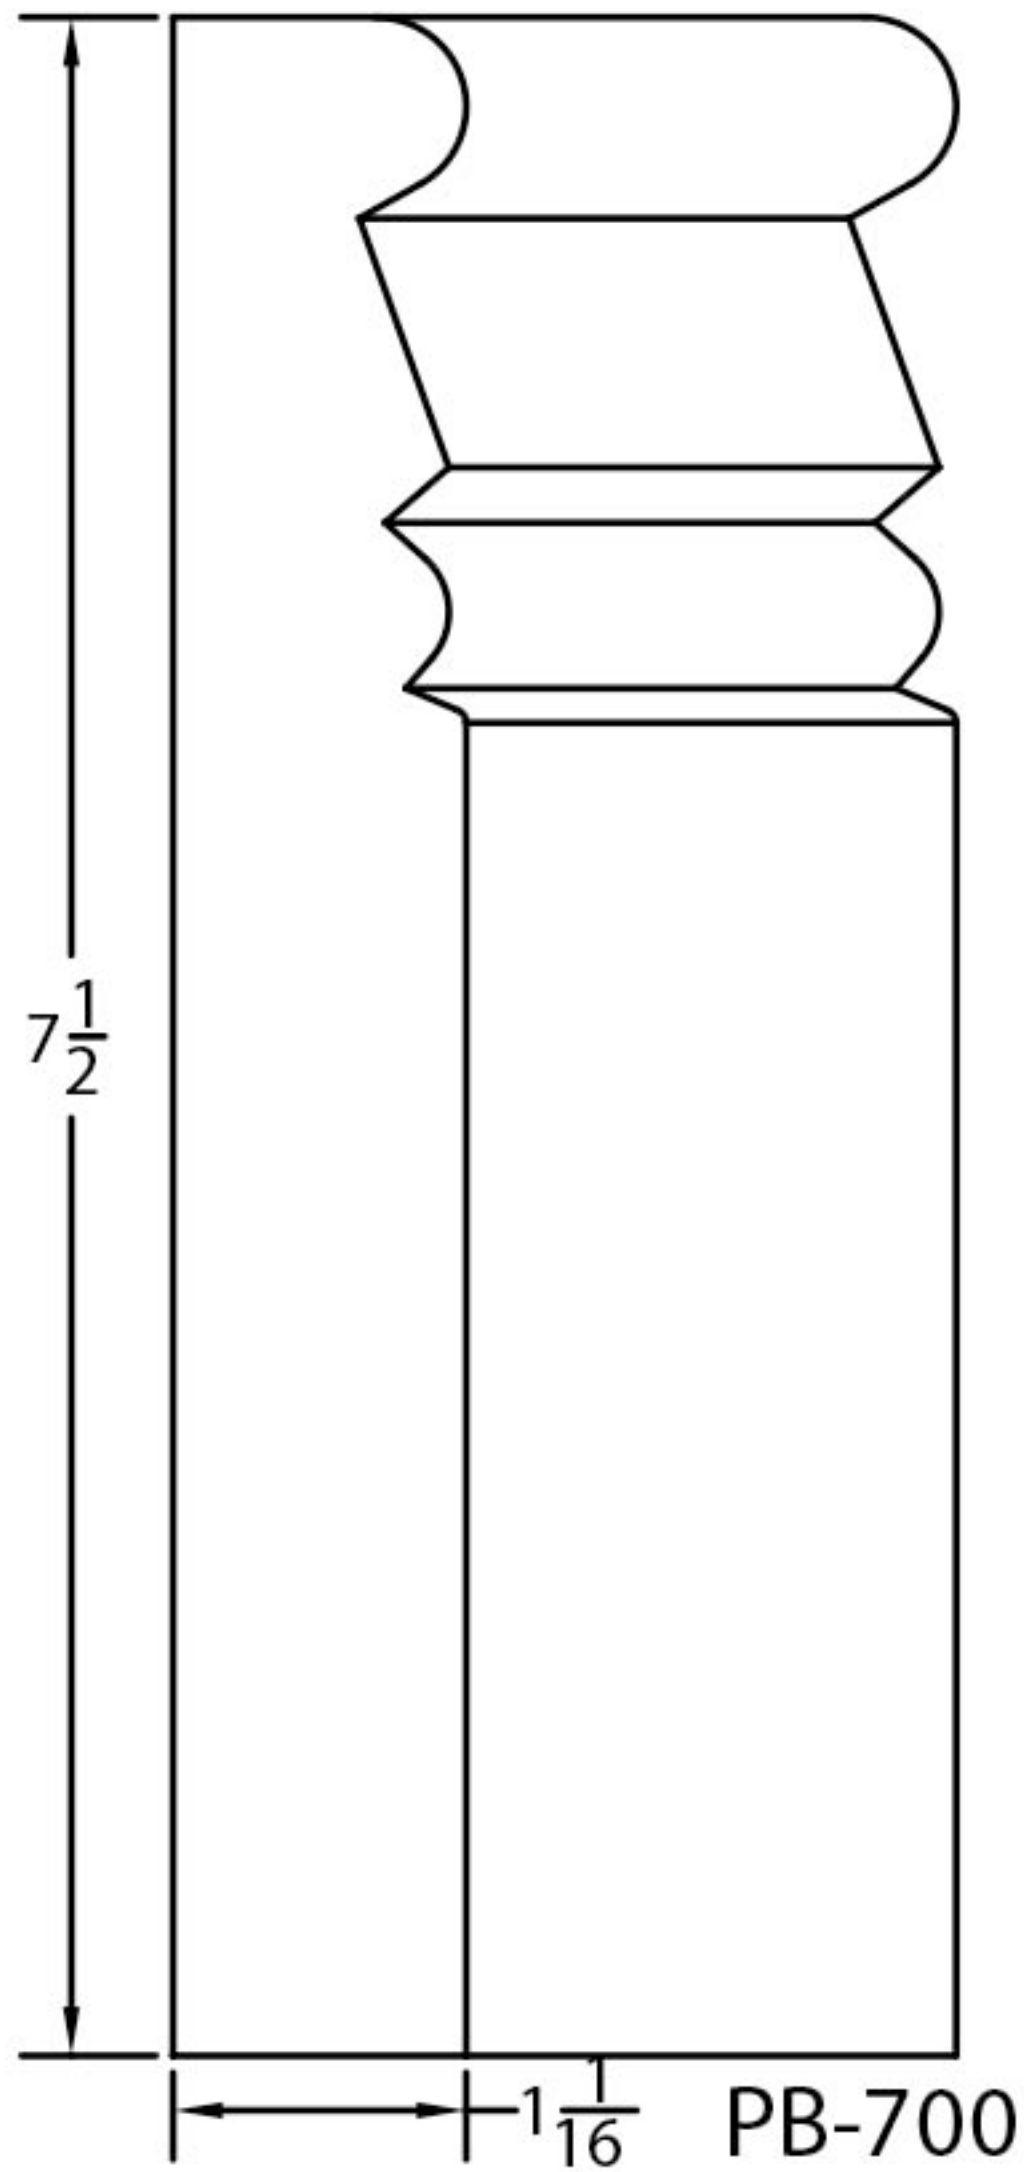

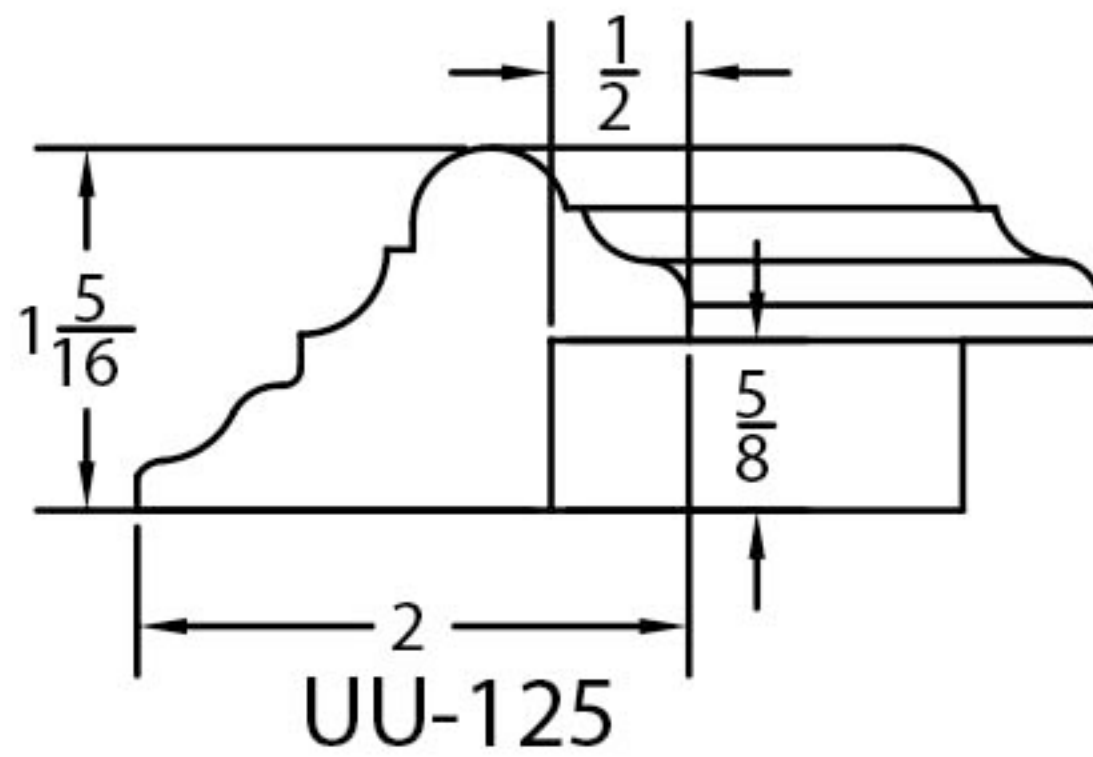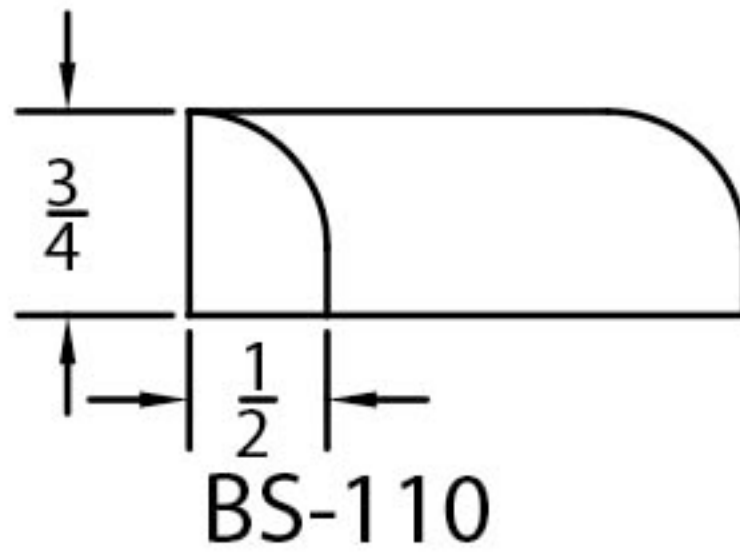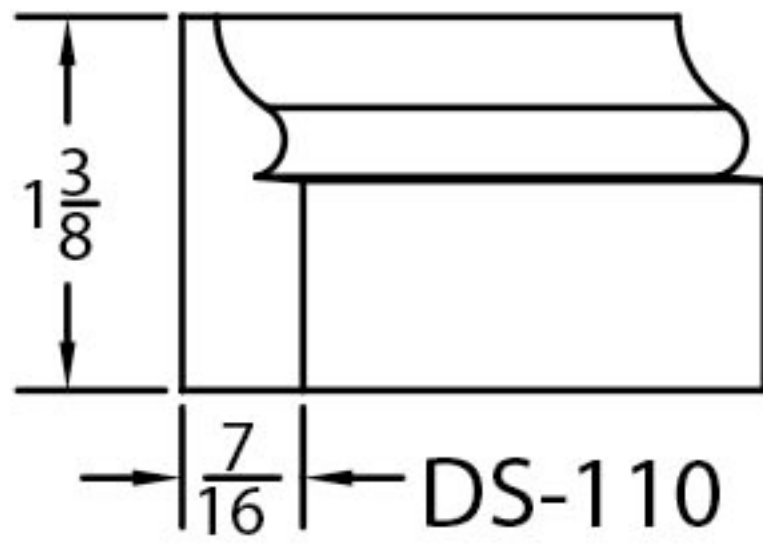


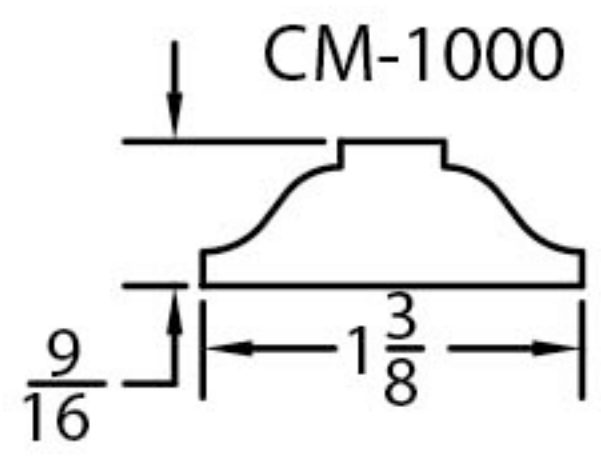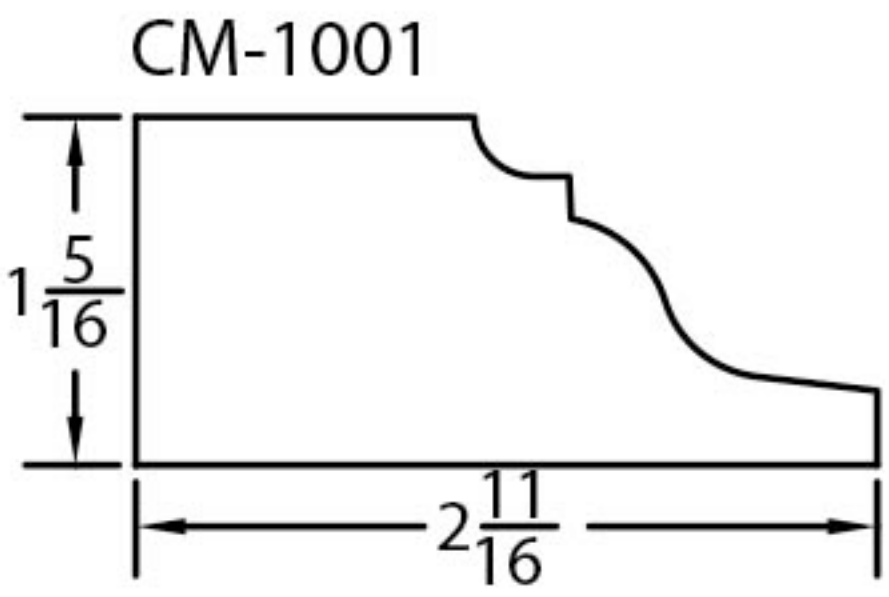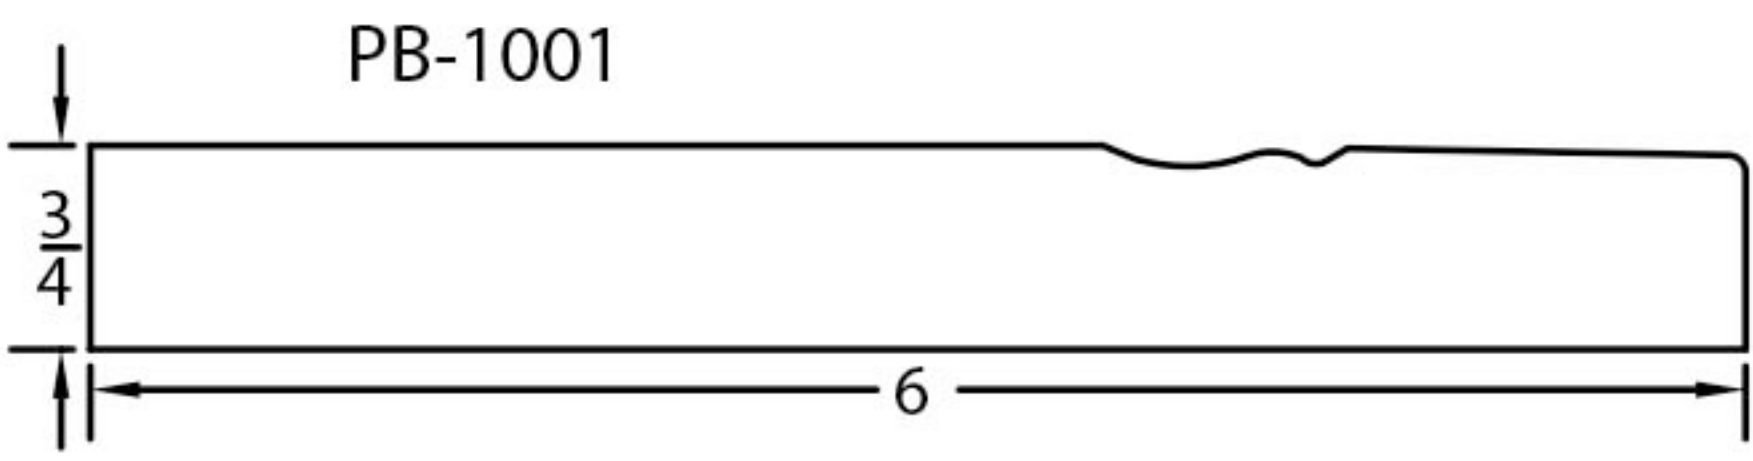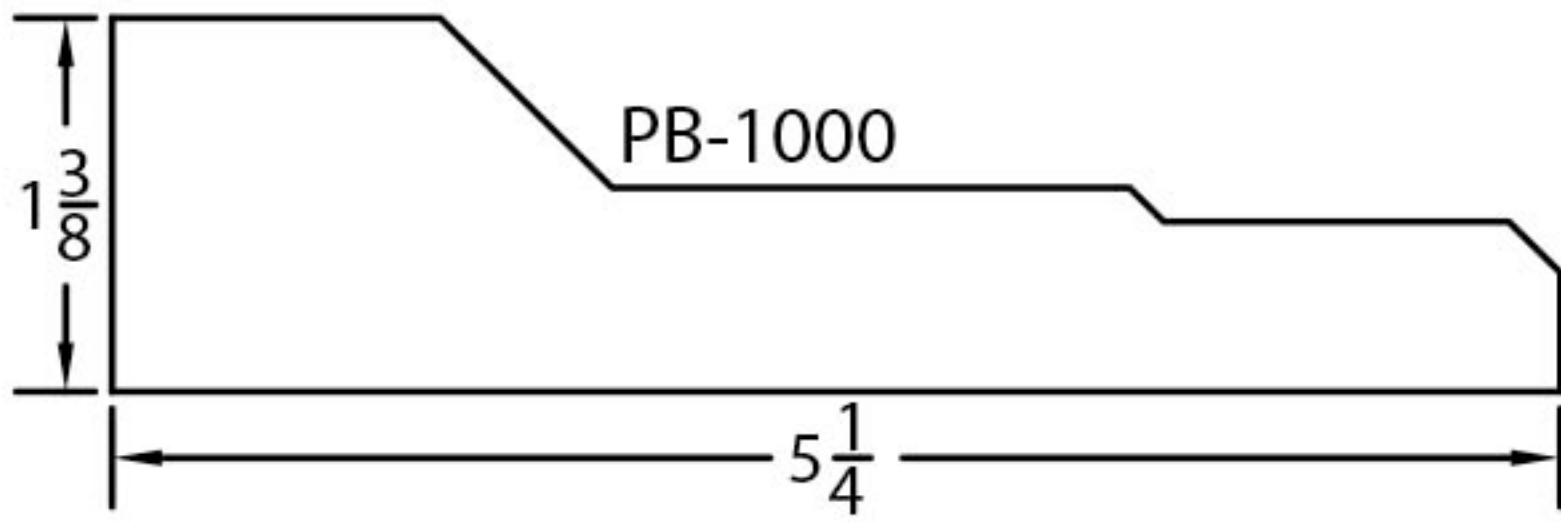





MM-1000






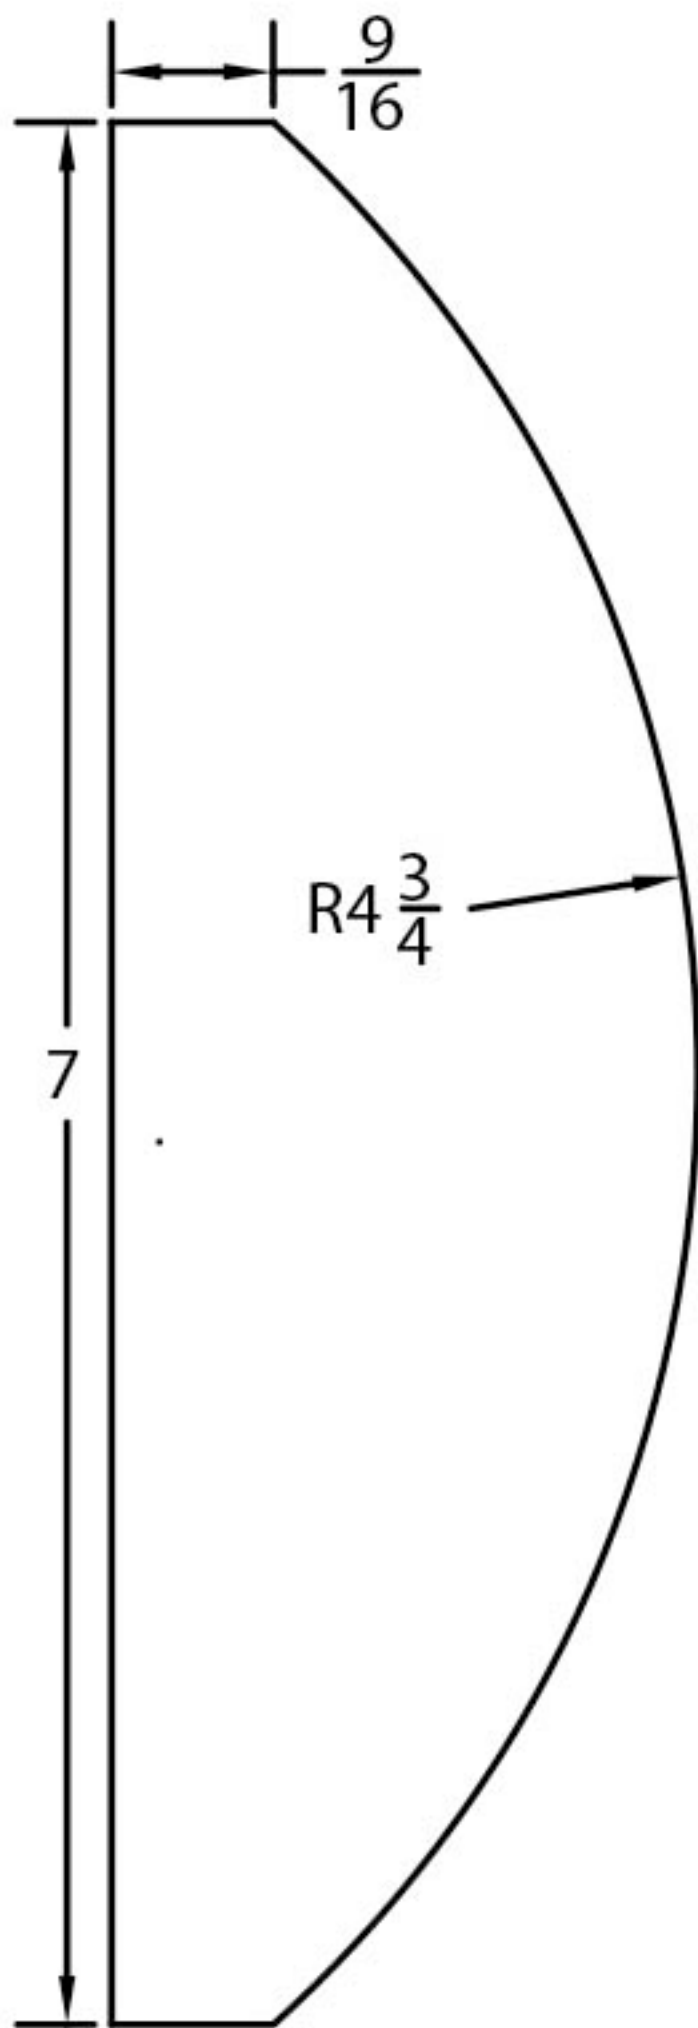


MM-1001

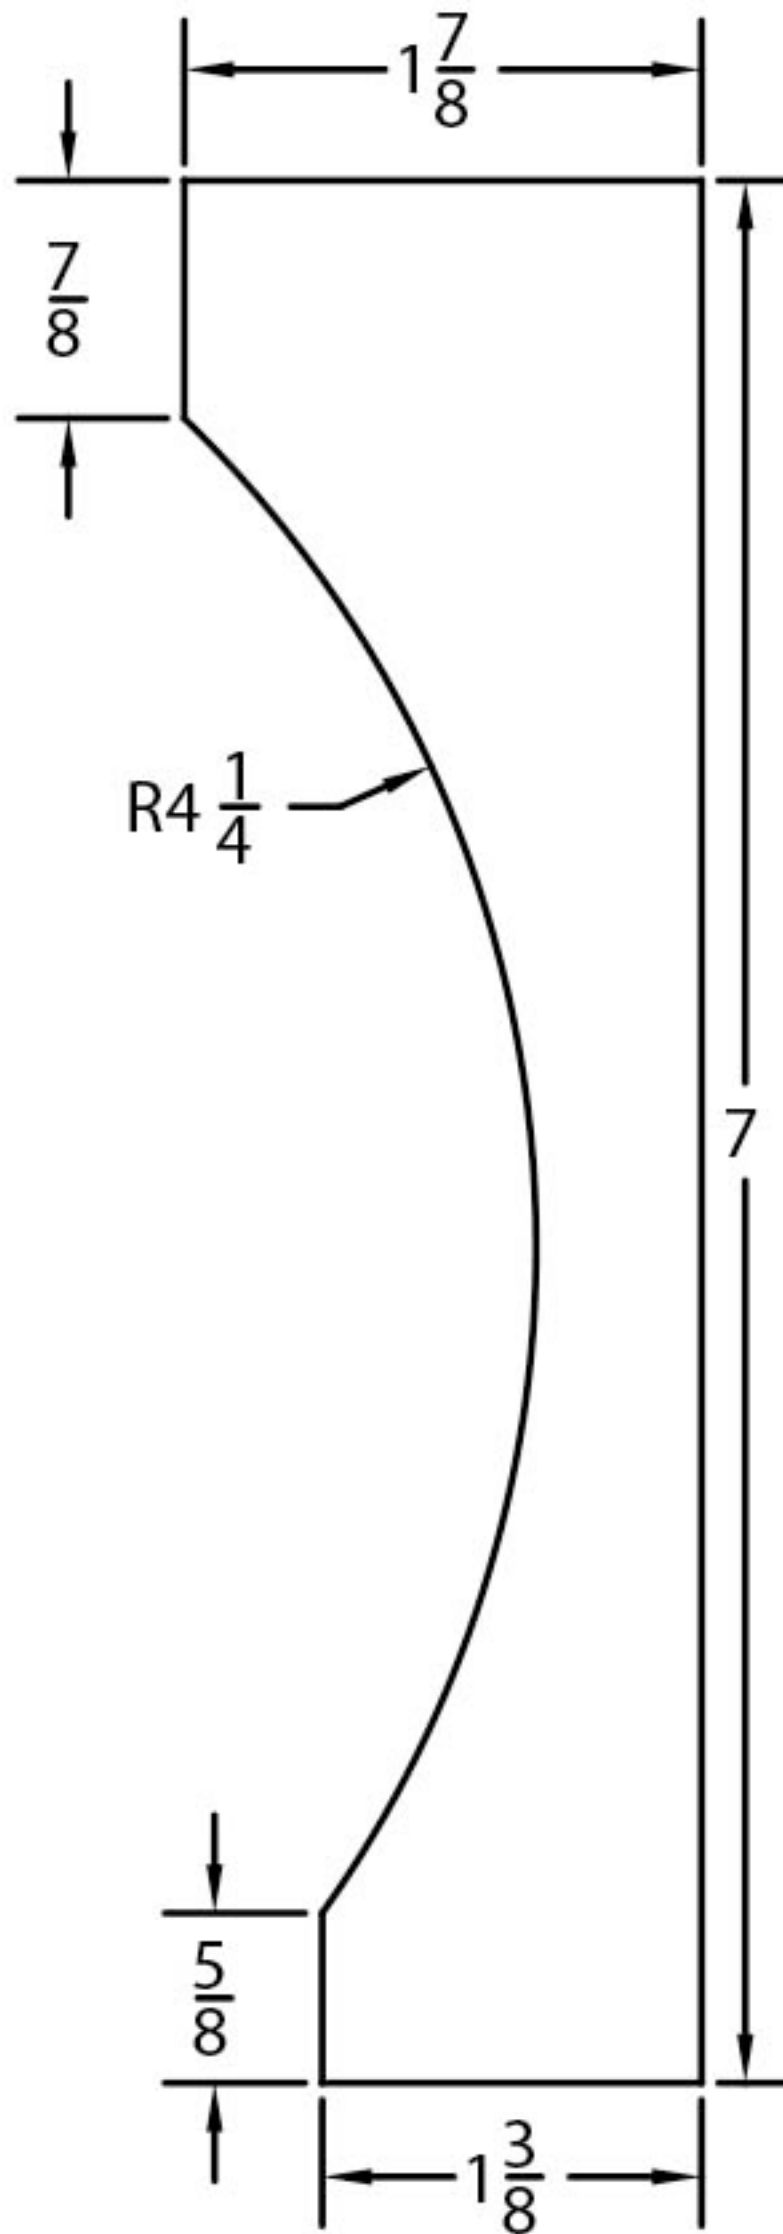




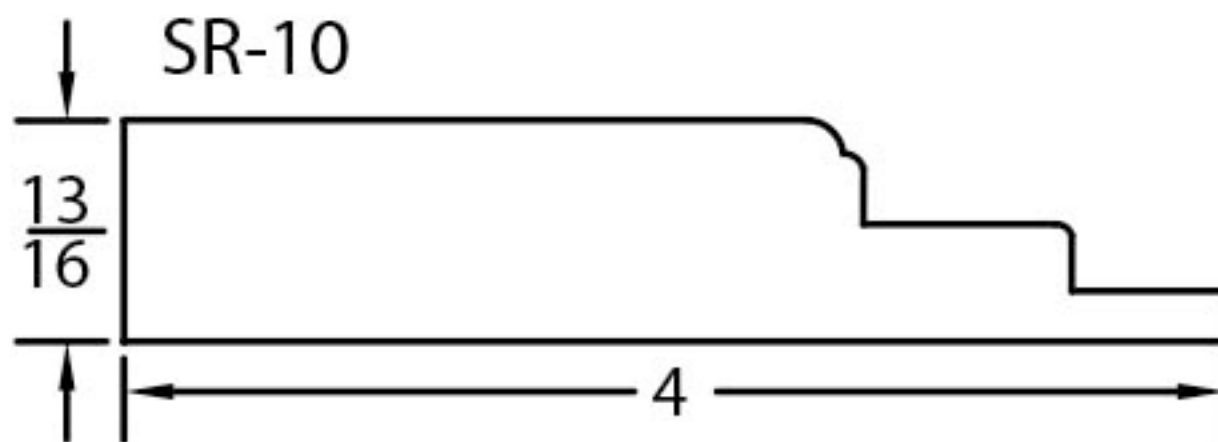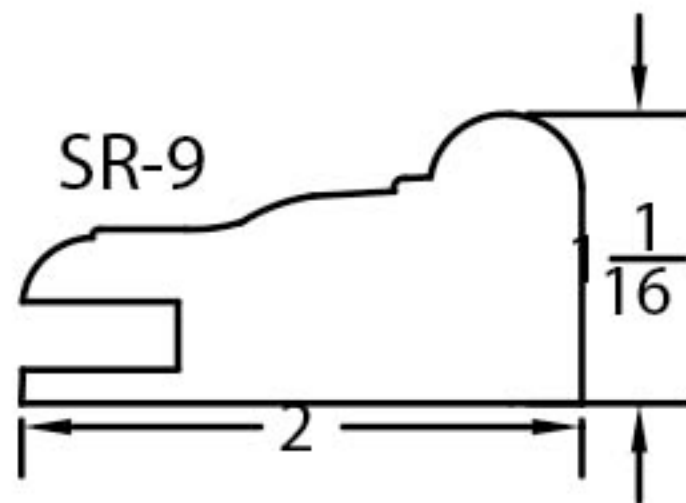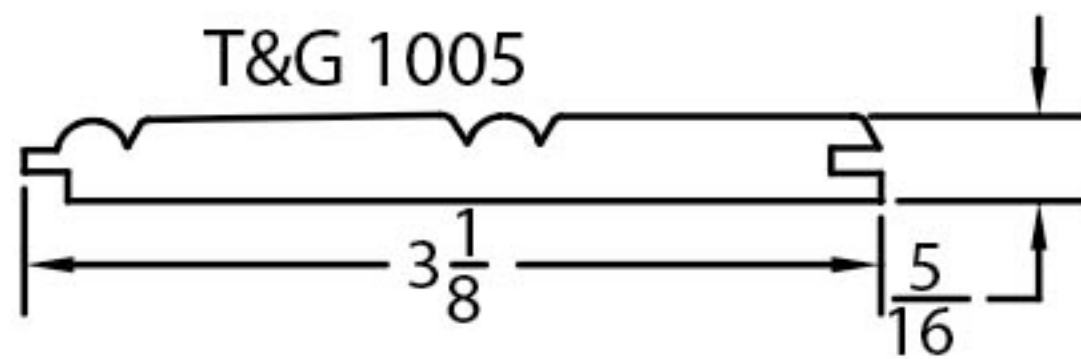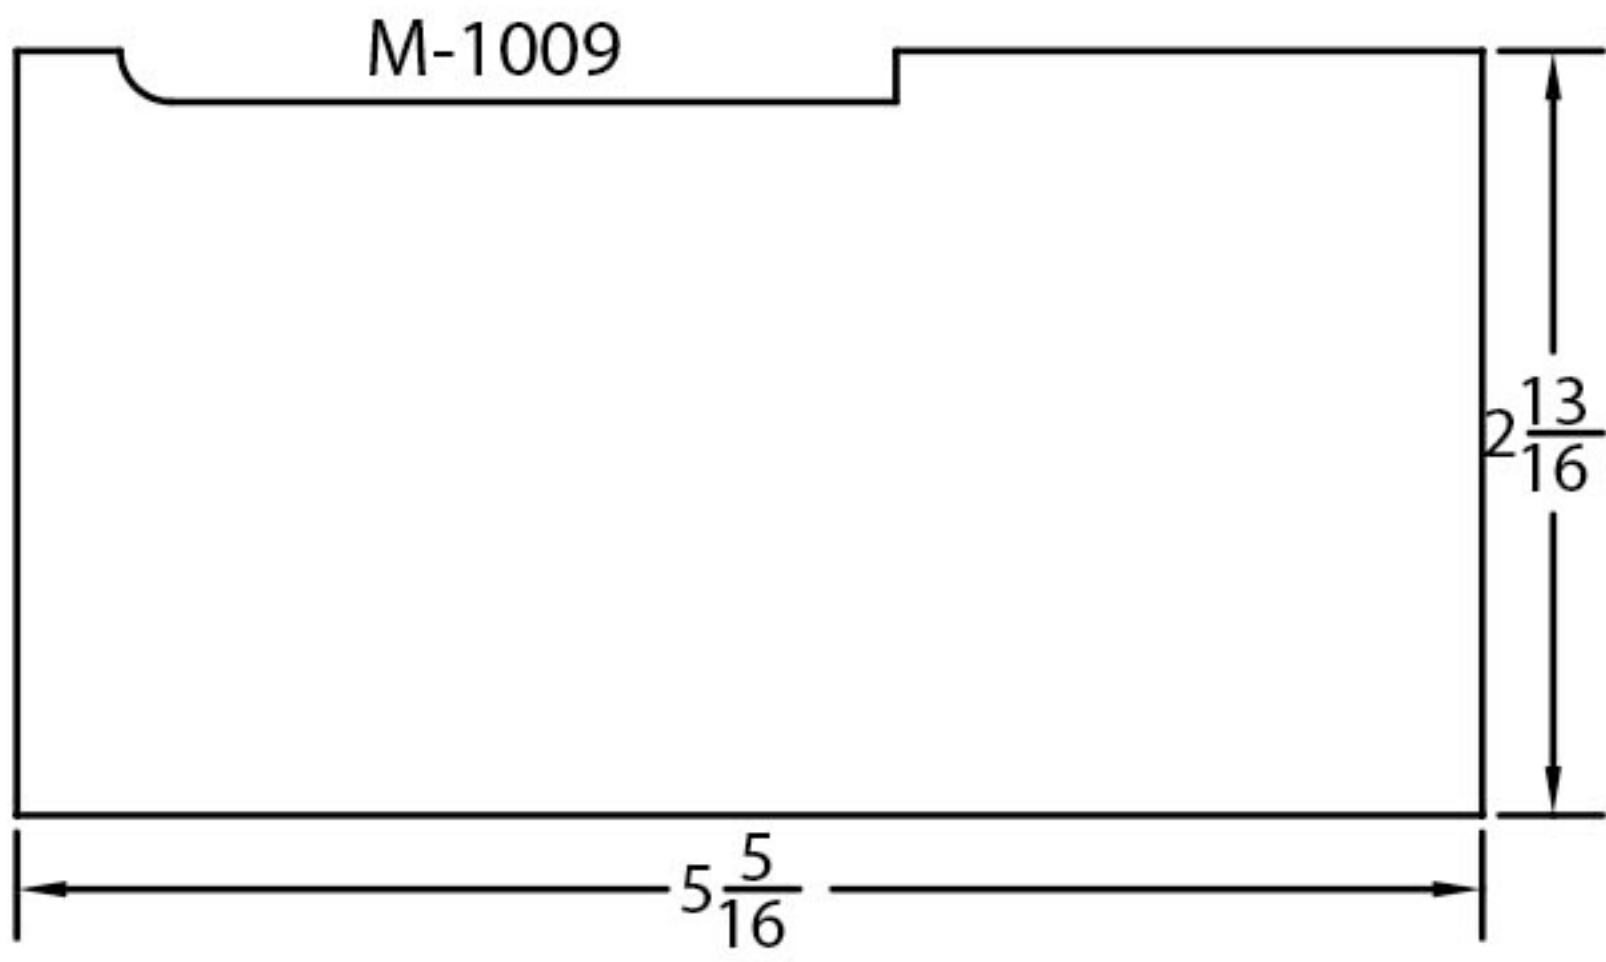


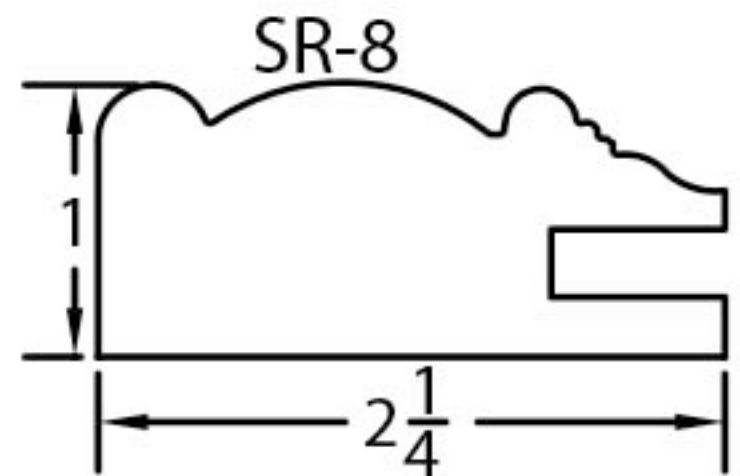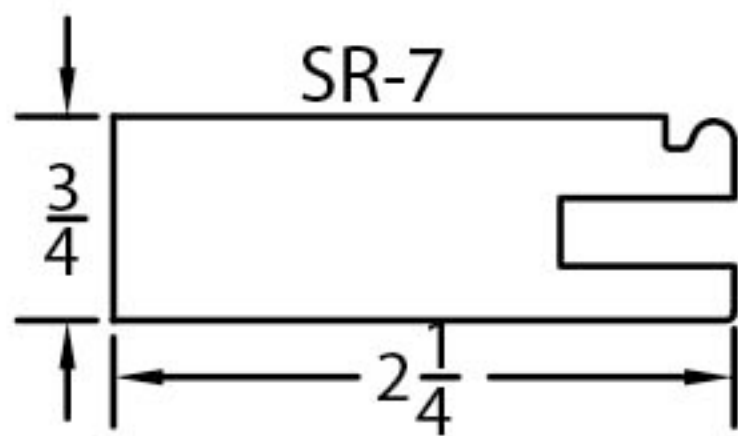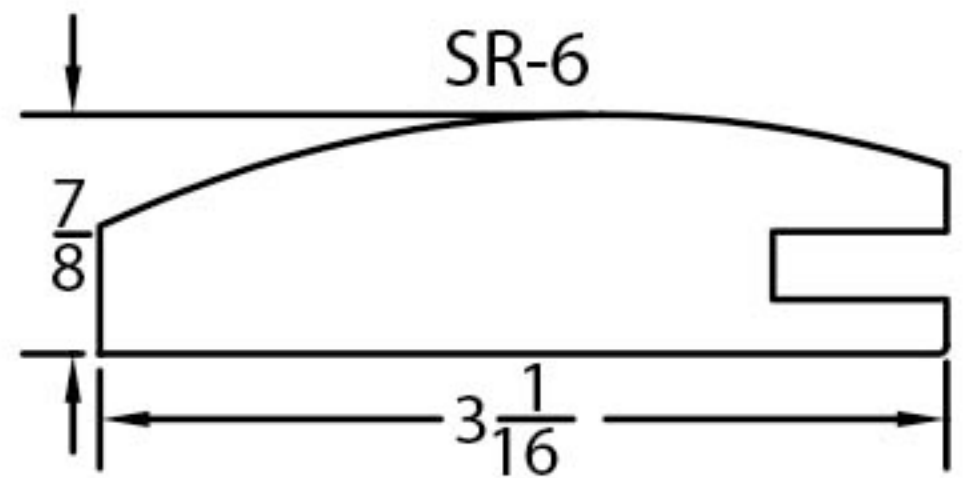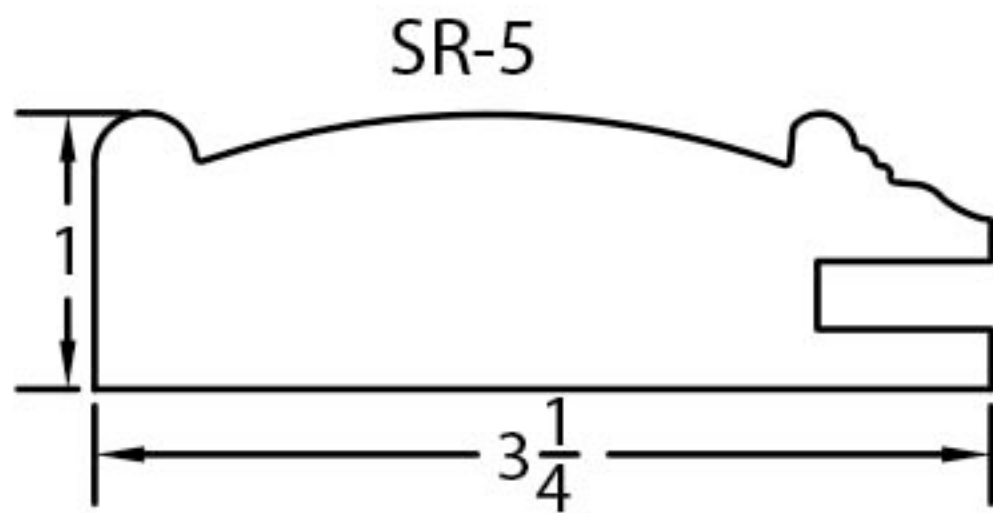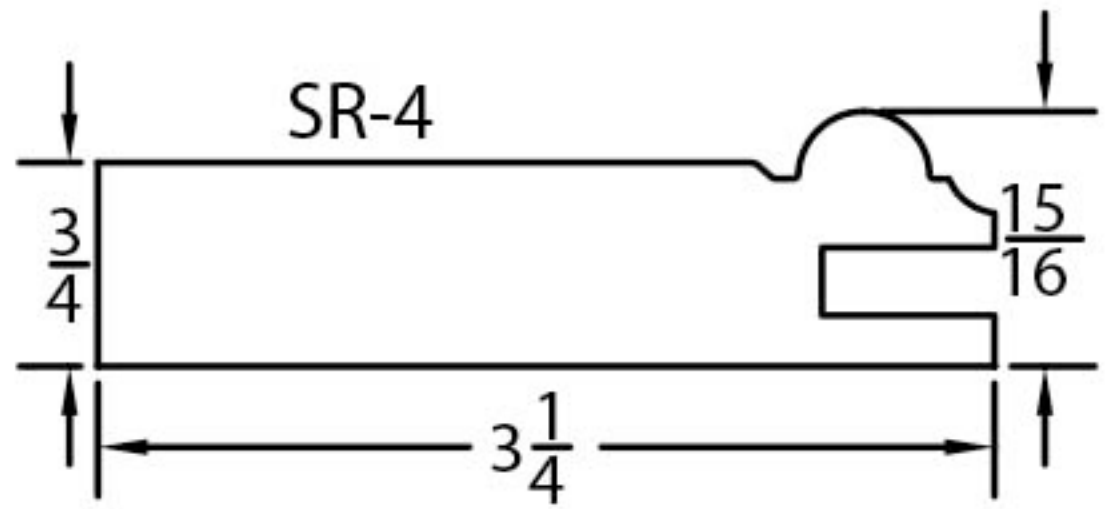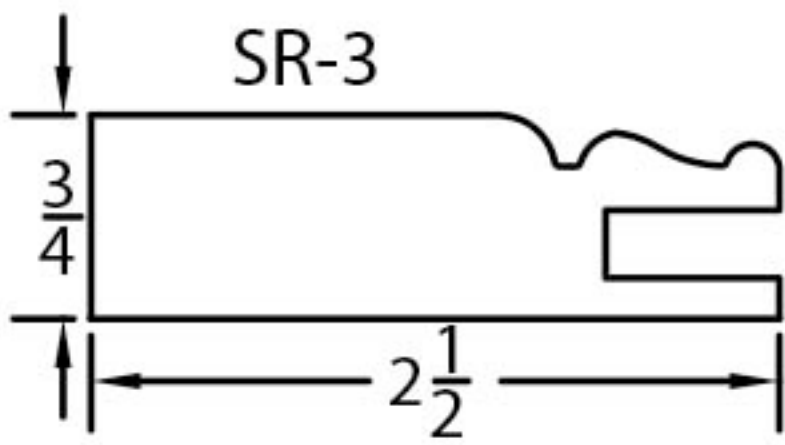


M-1007





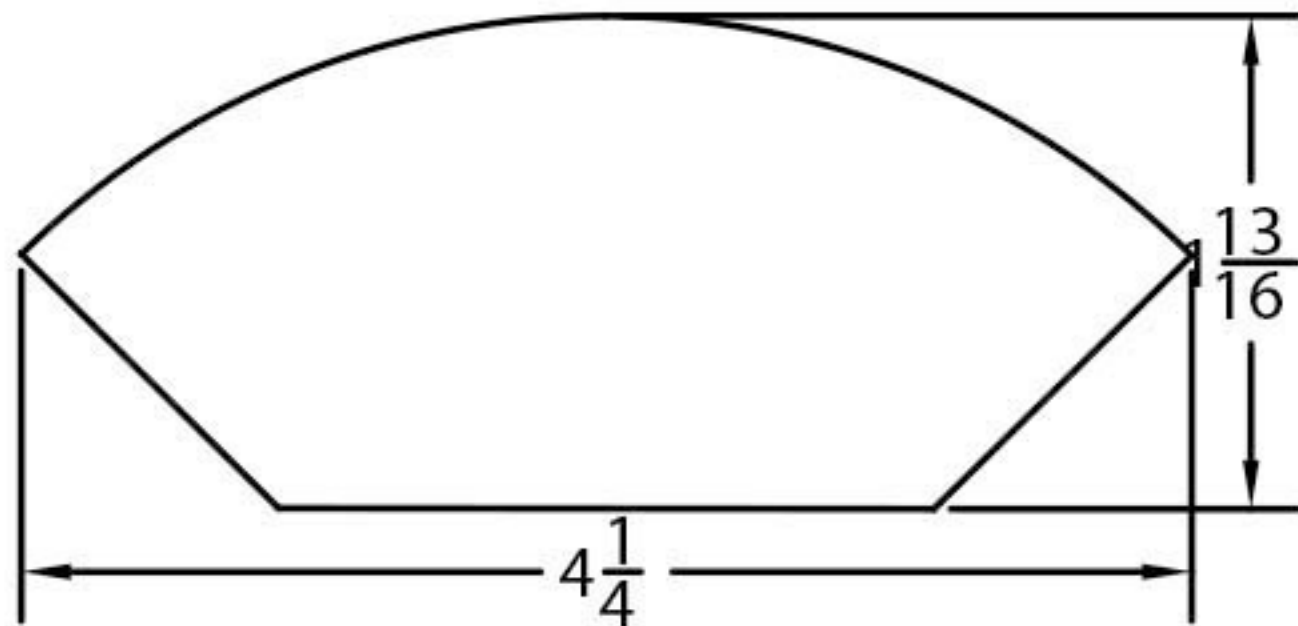







M-1005

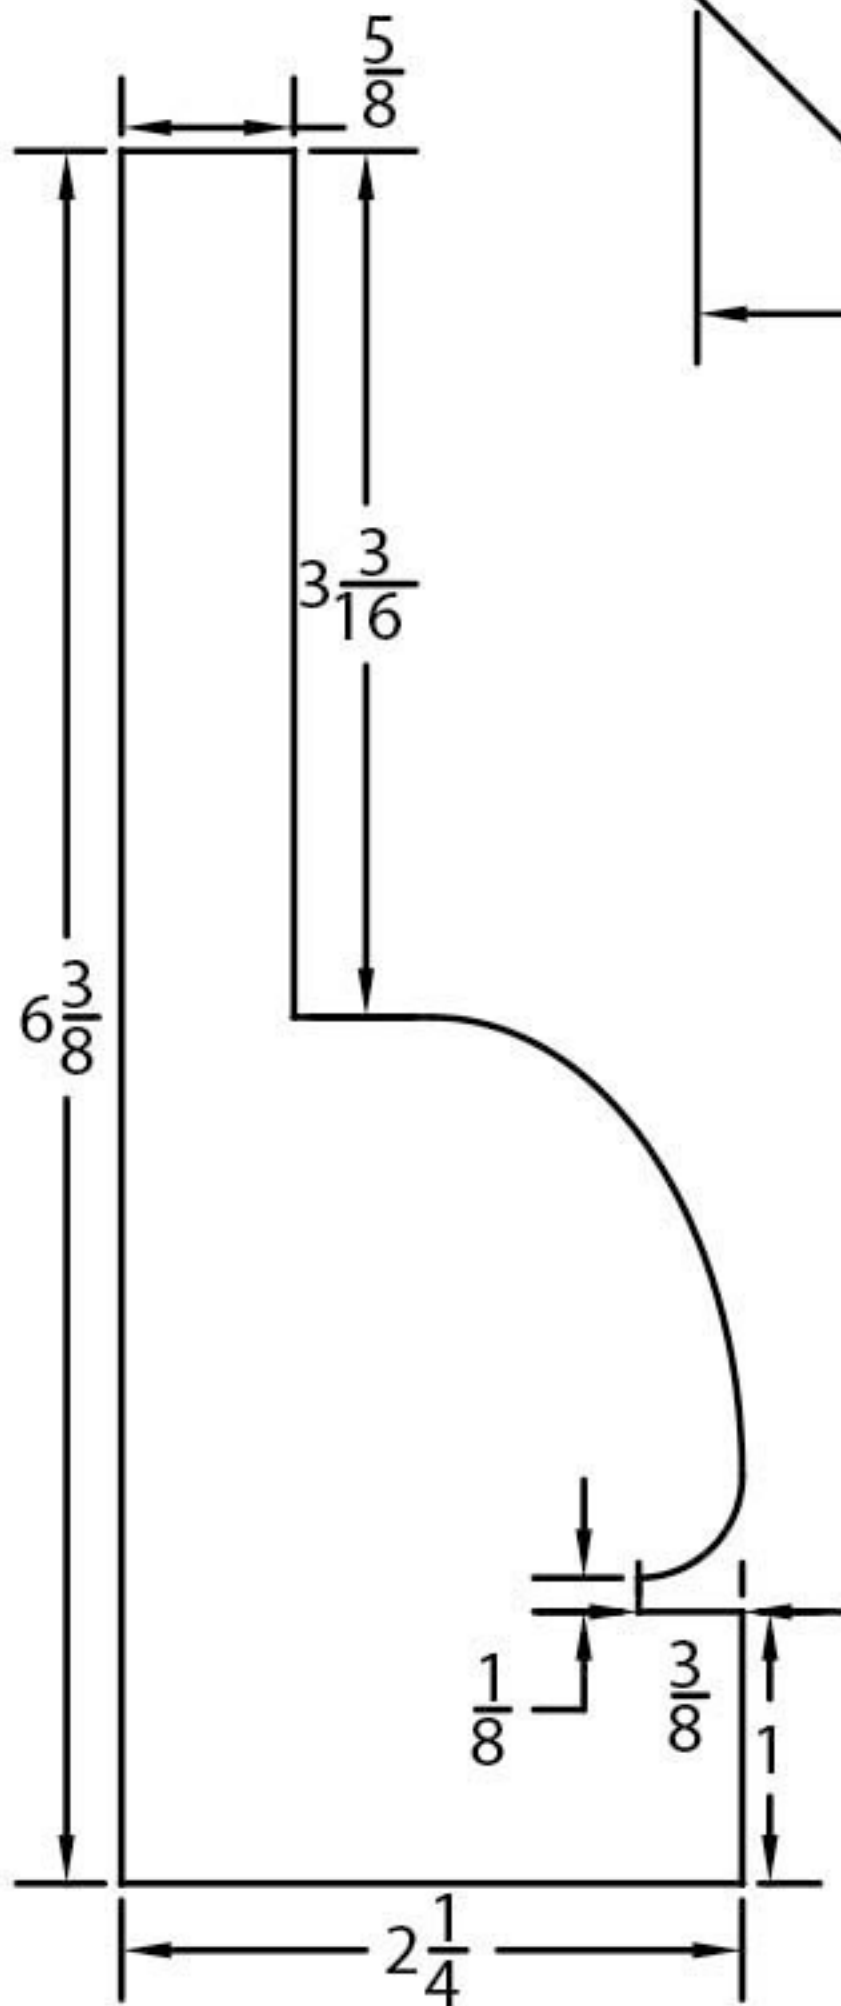


M-1008

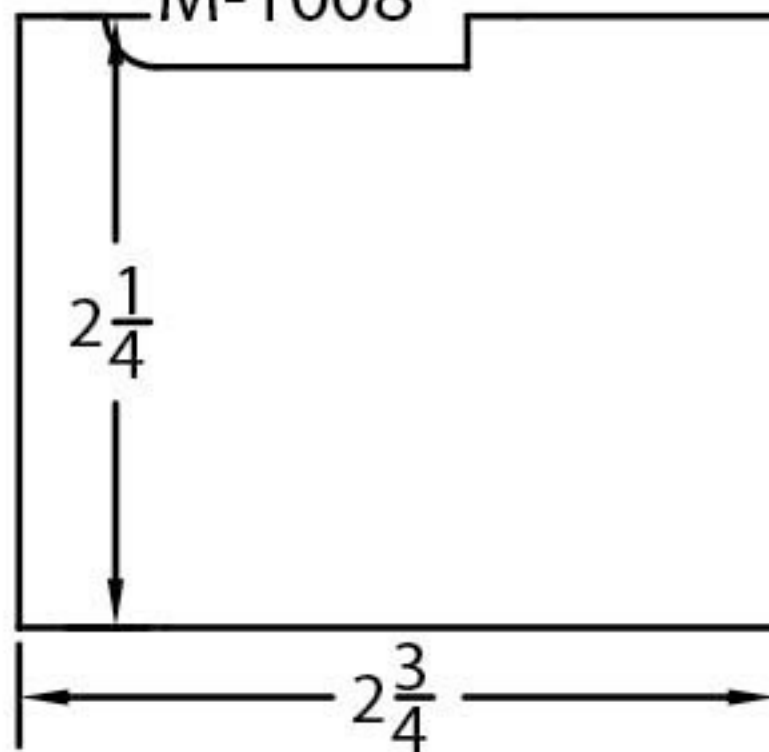

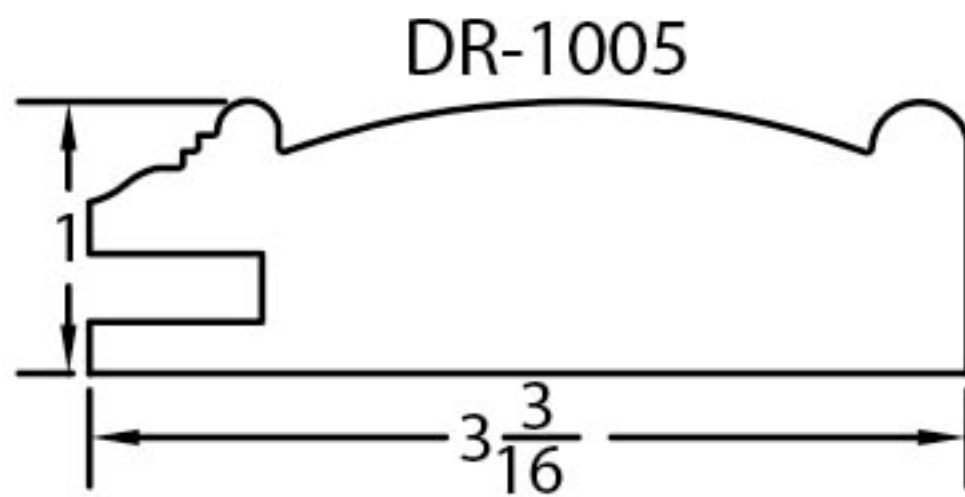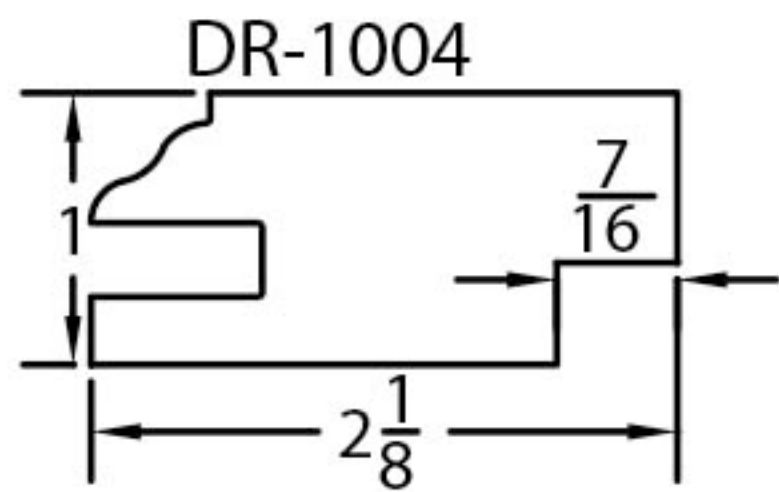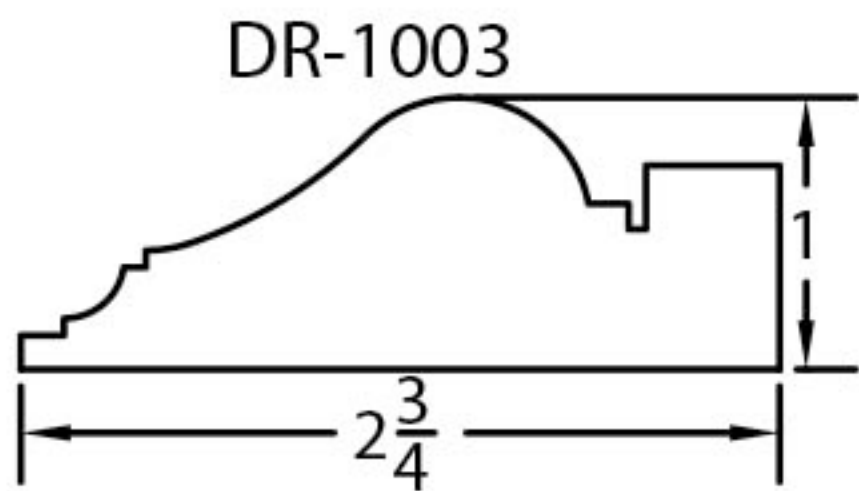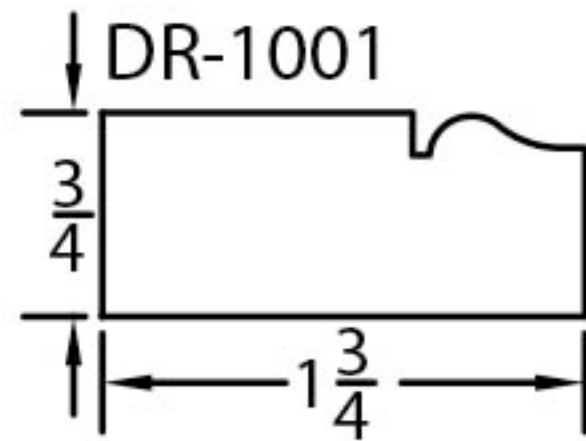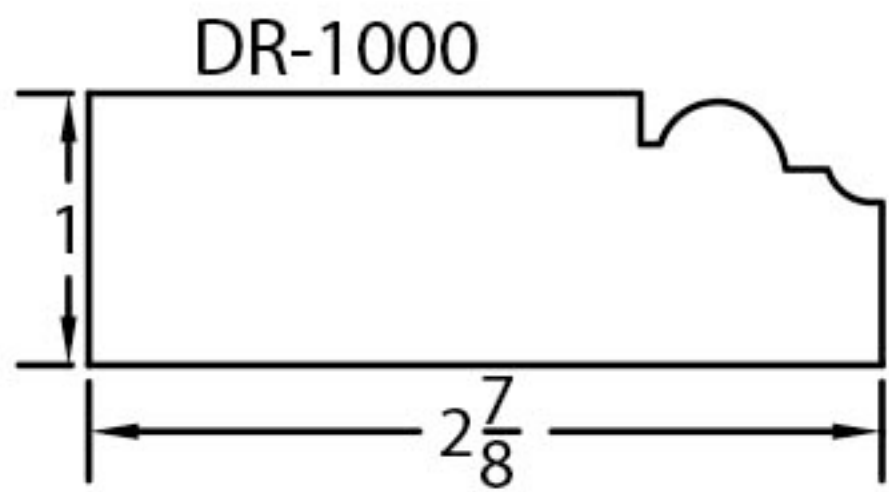


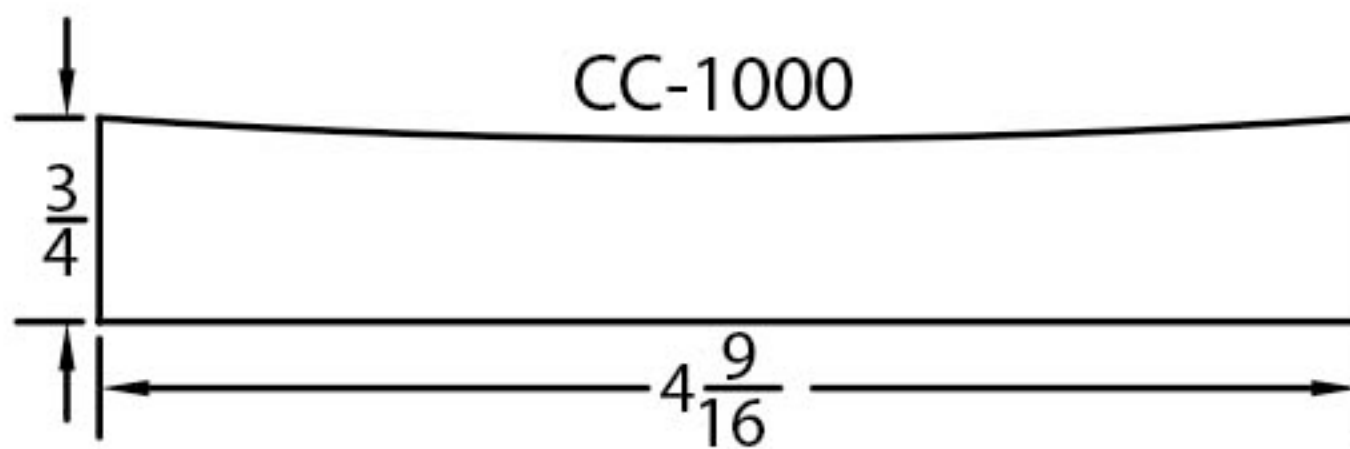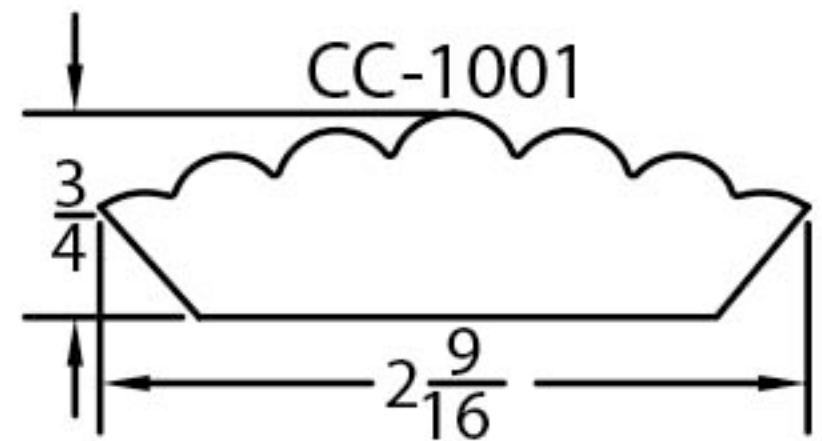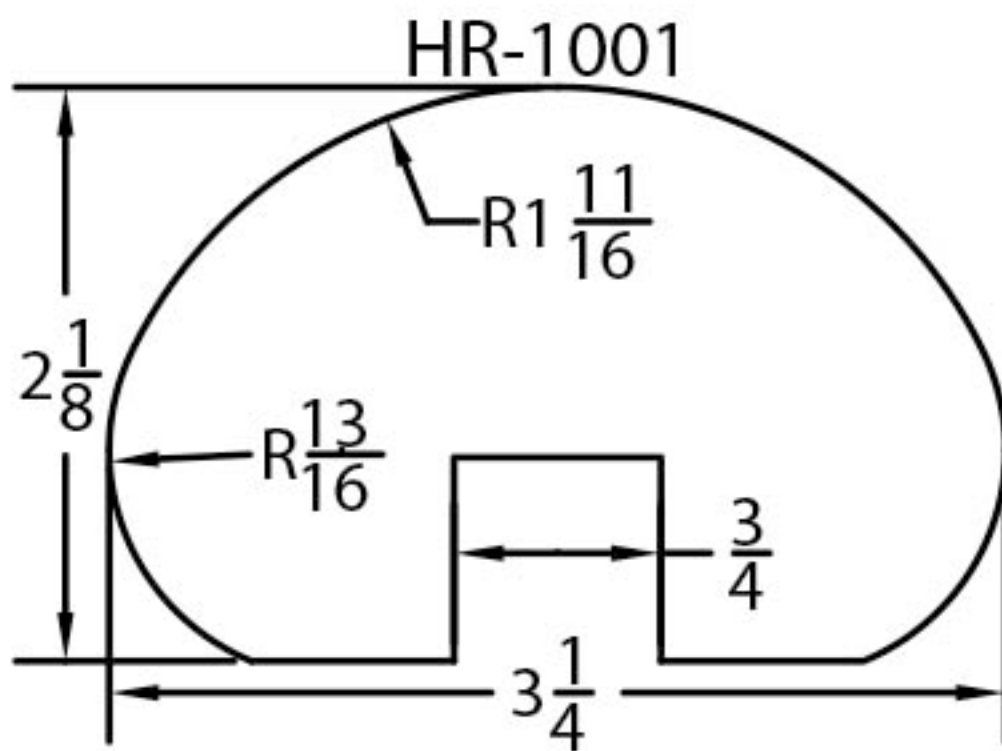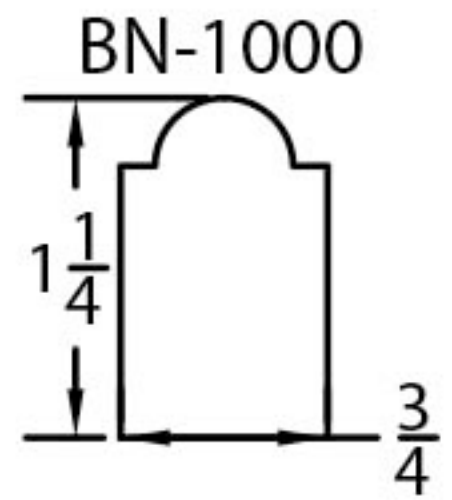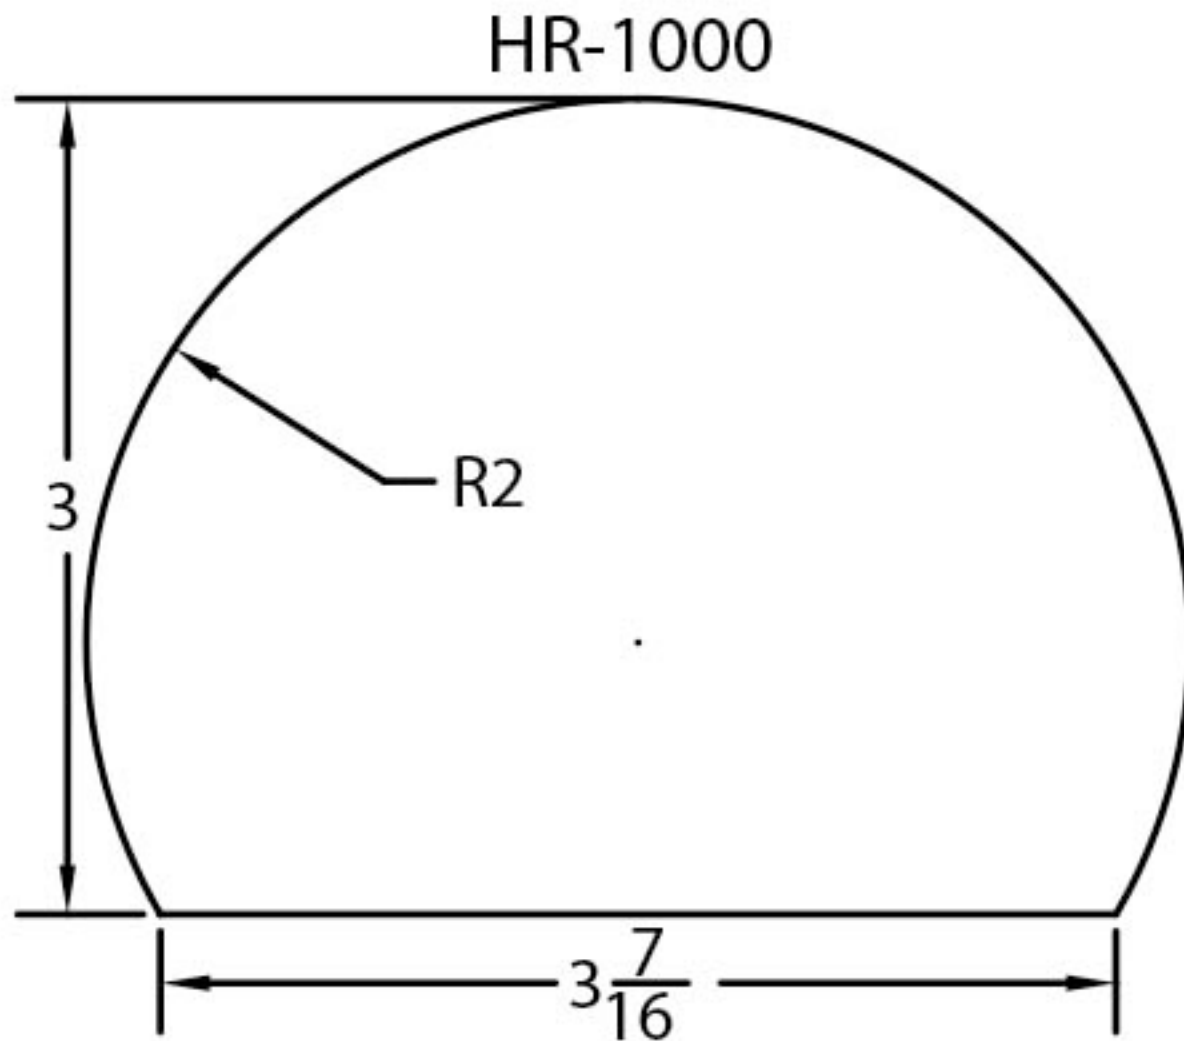


CM-1004


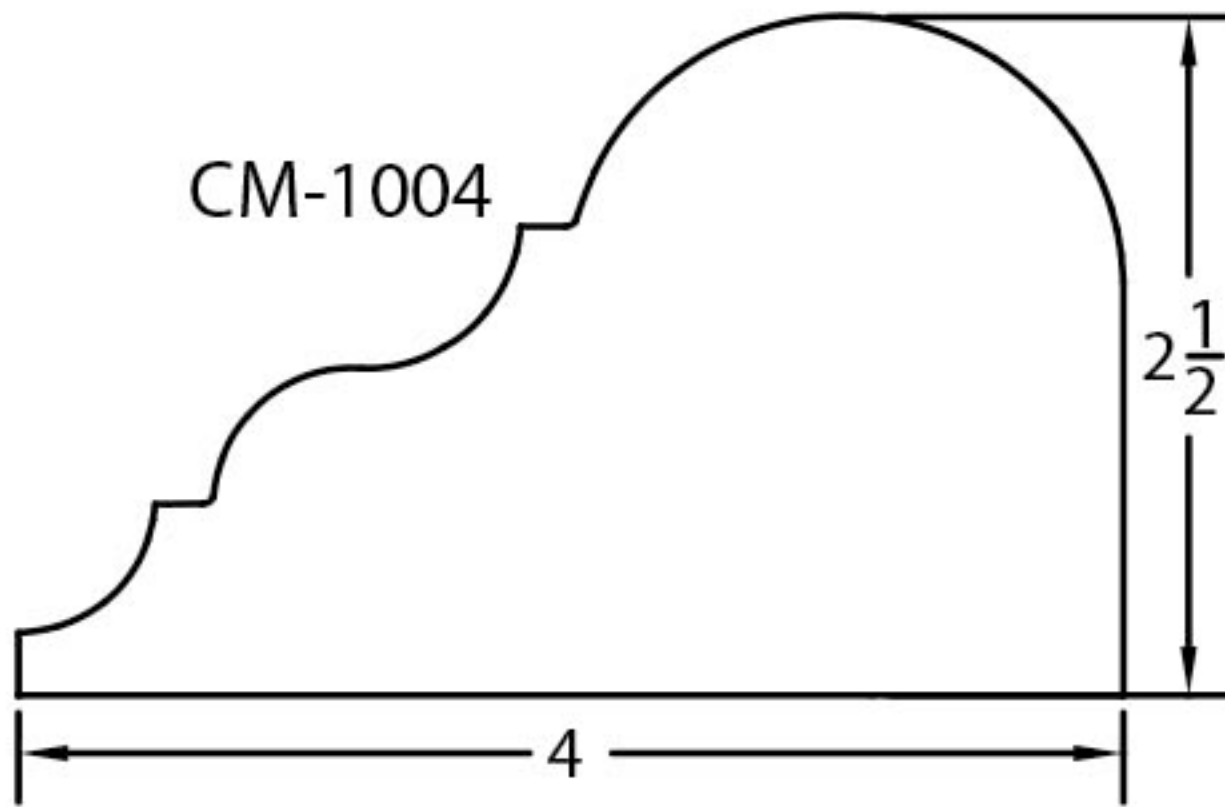





T&G-1000

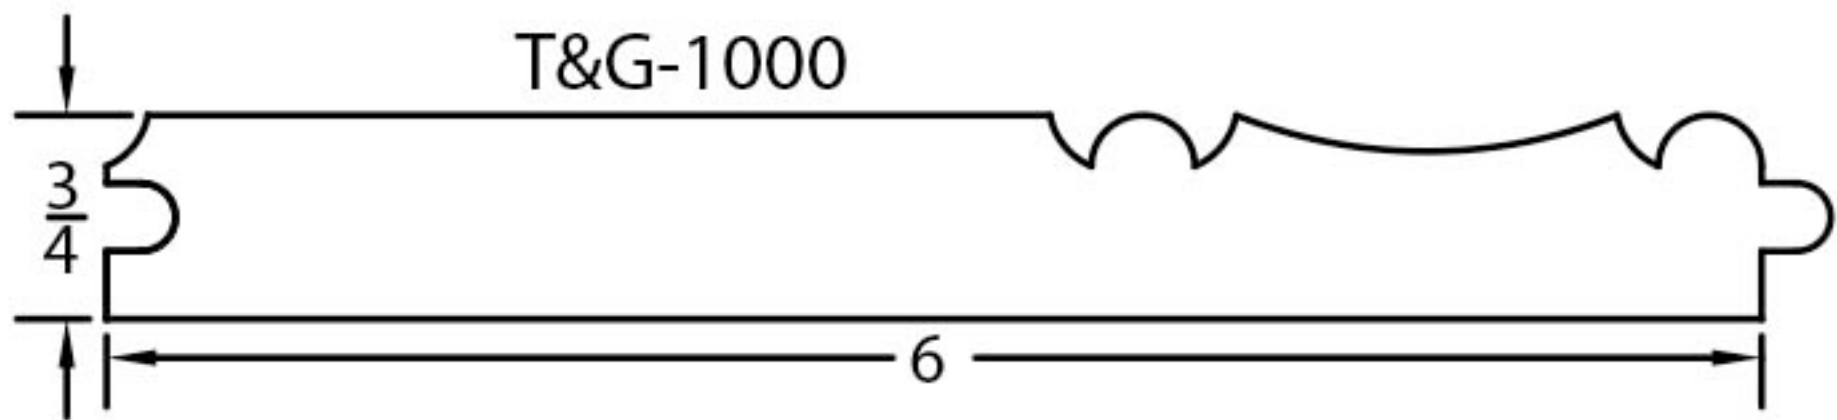

SH-1007

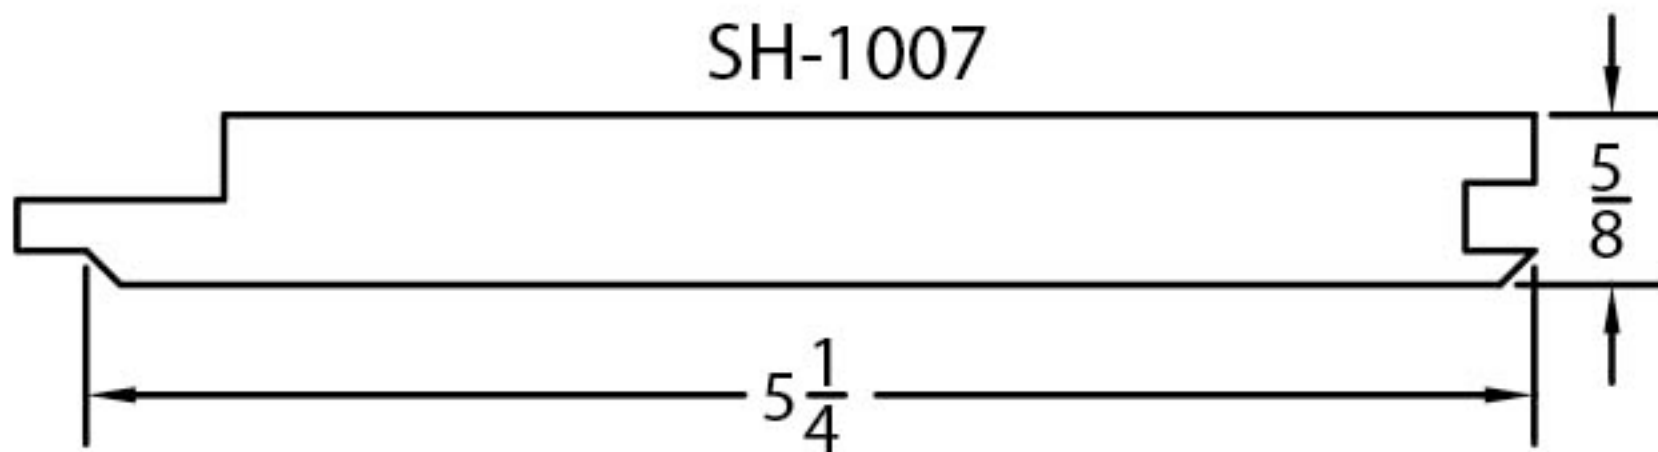


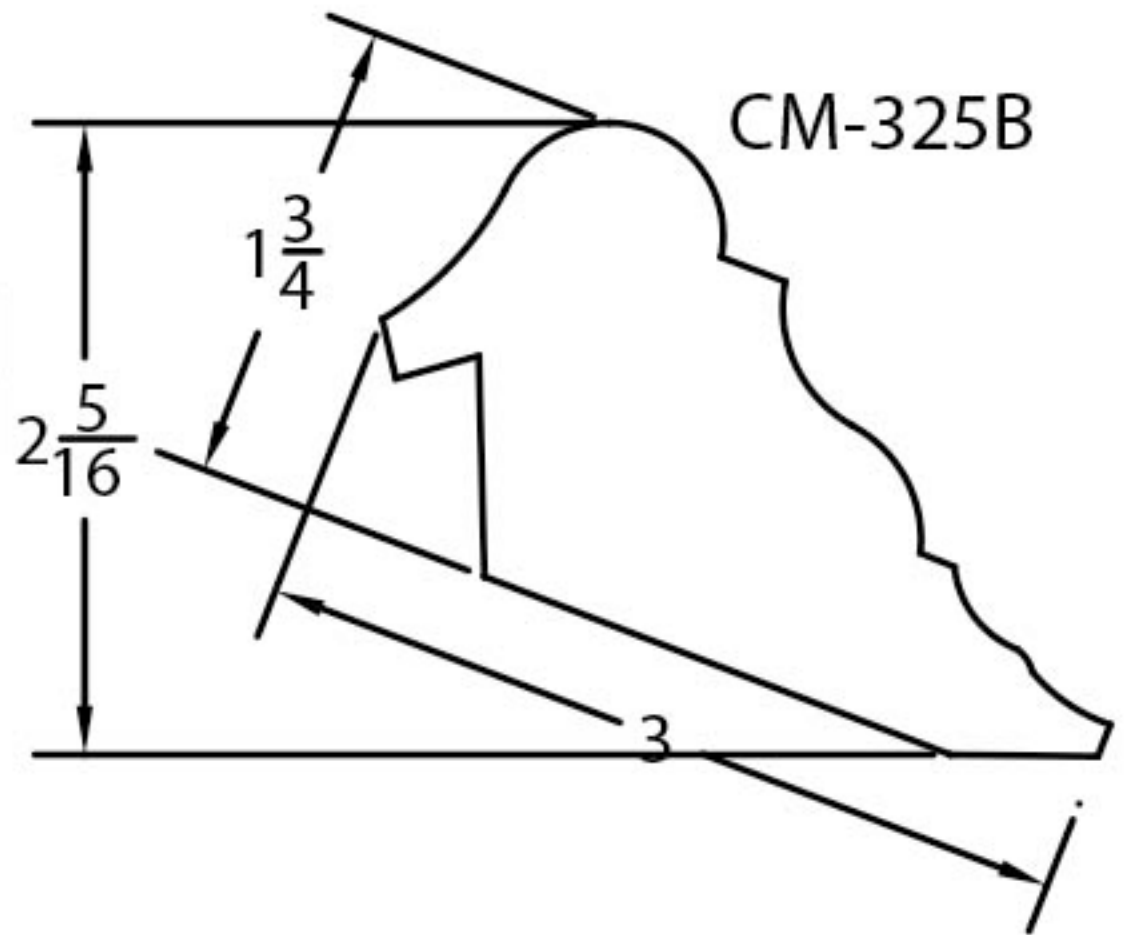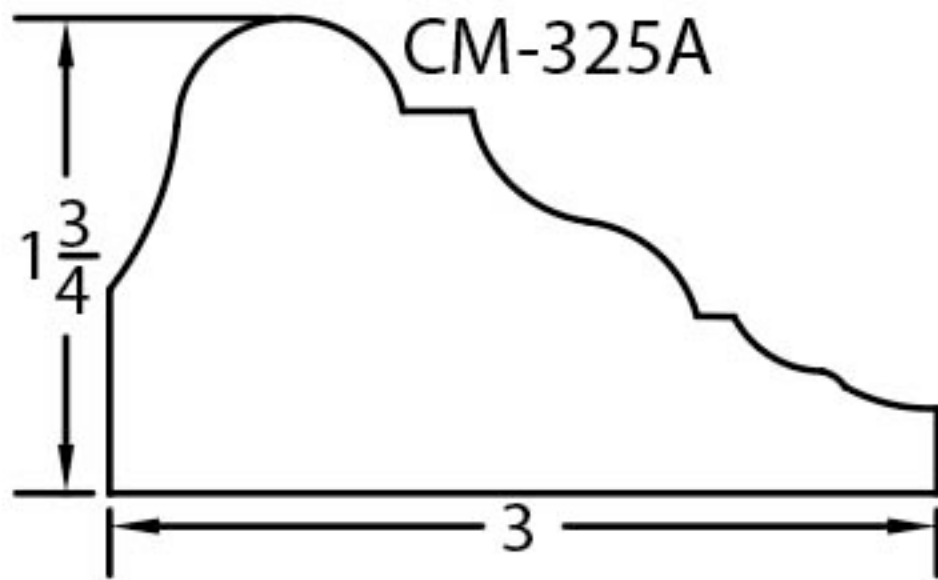

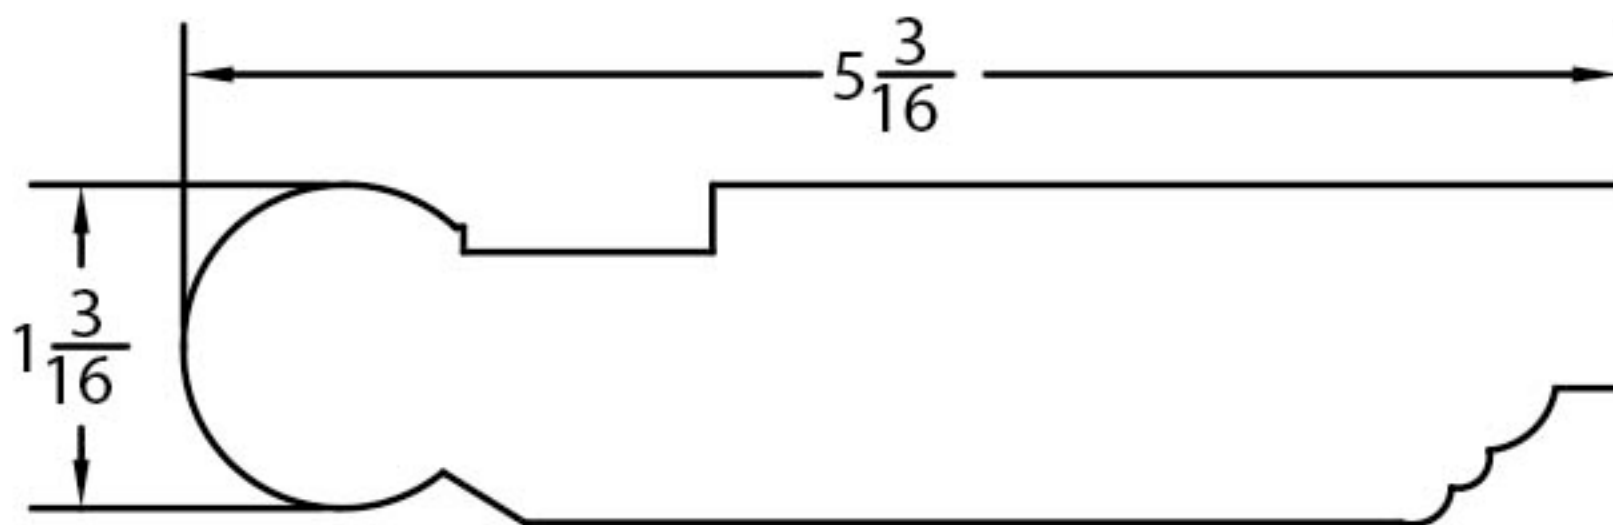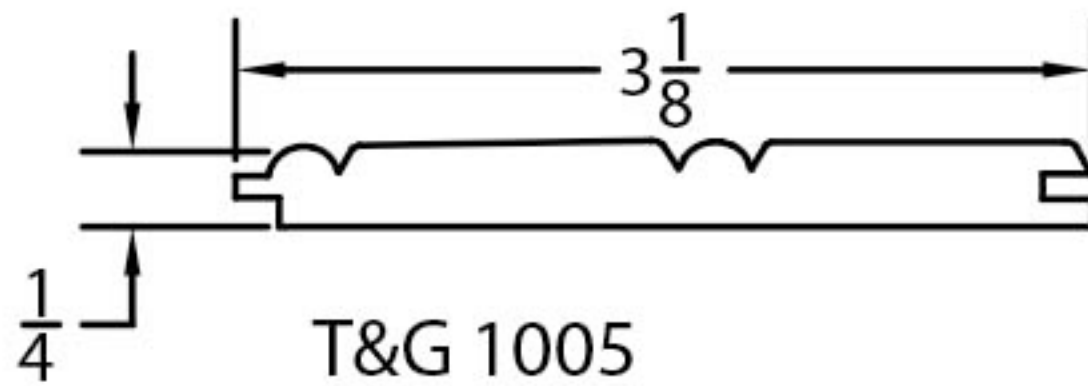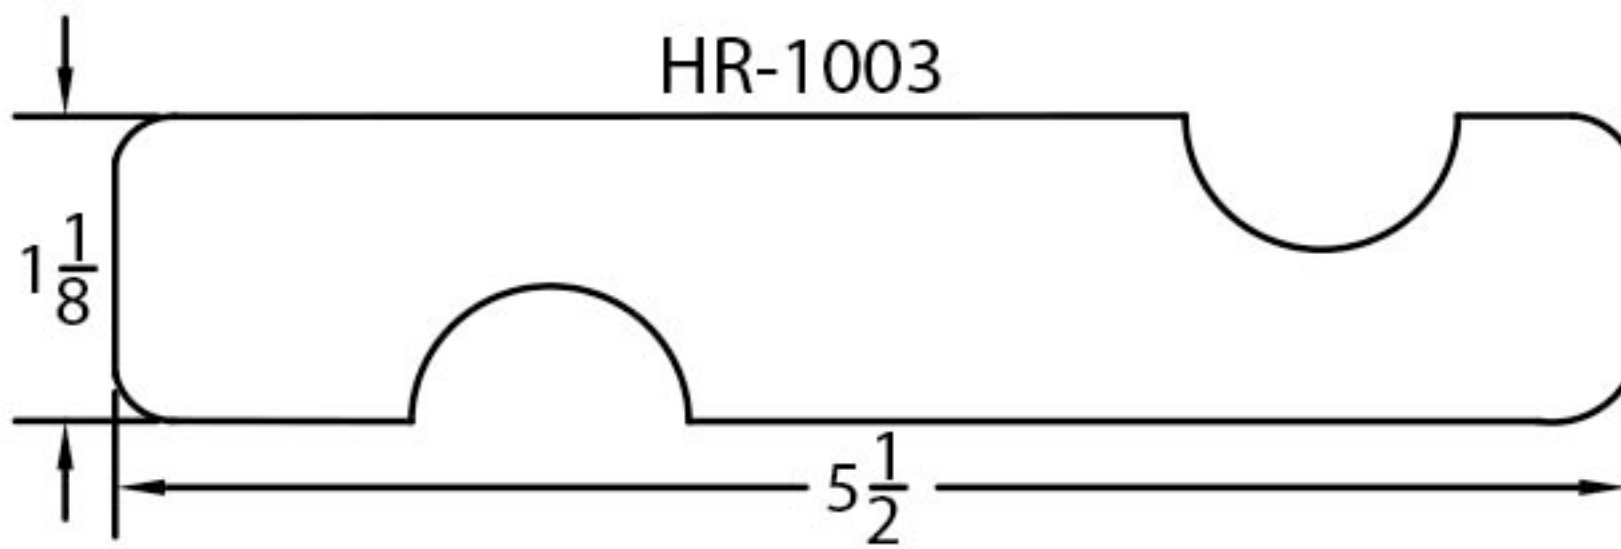


WR-1000




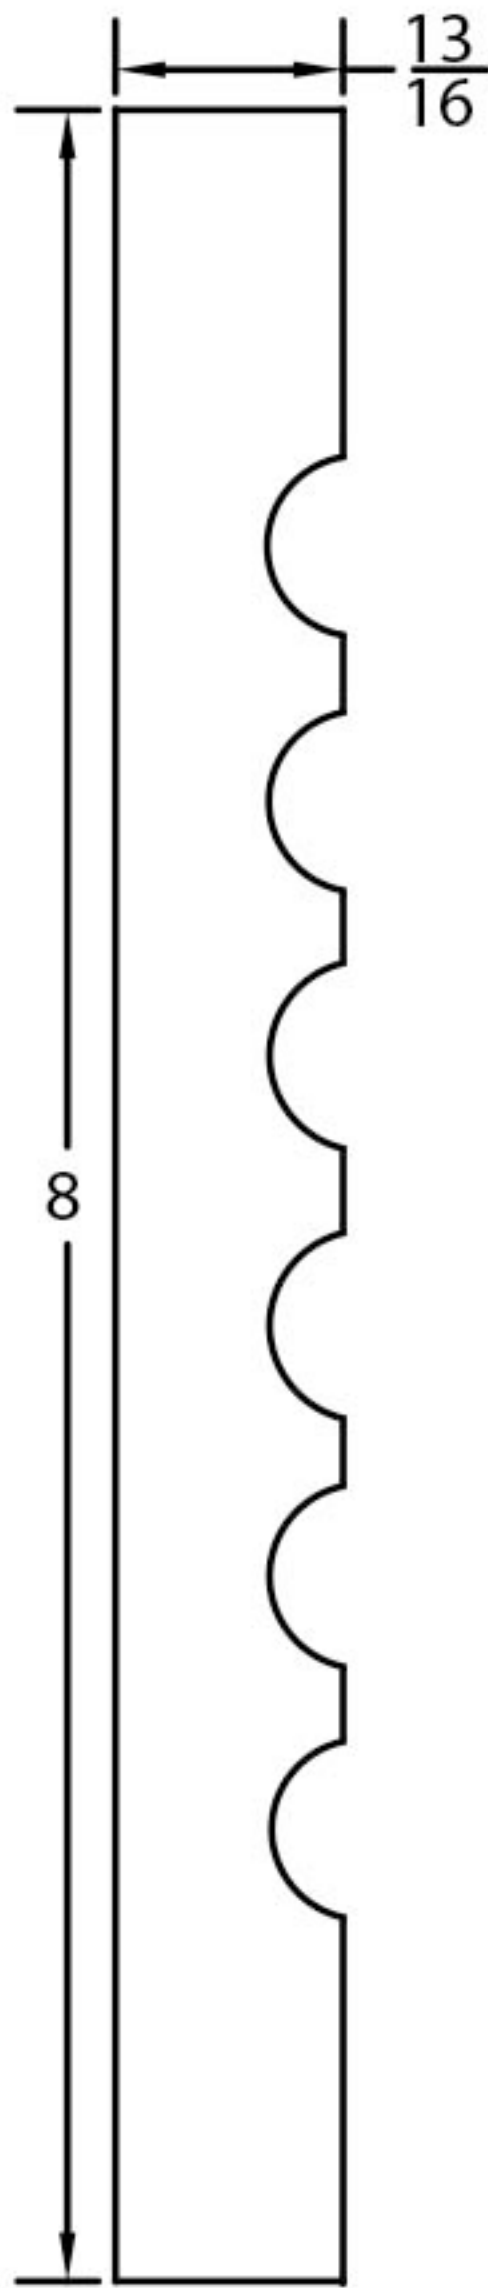


FC-1002

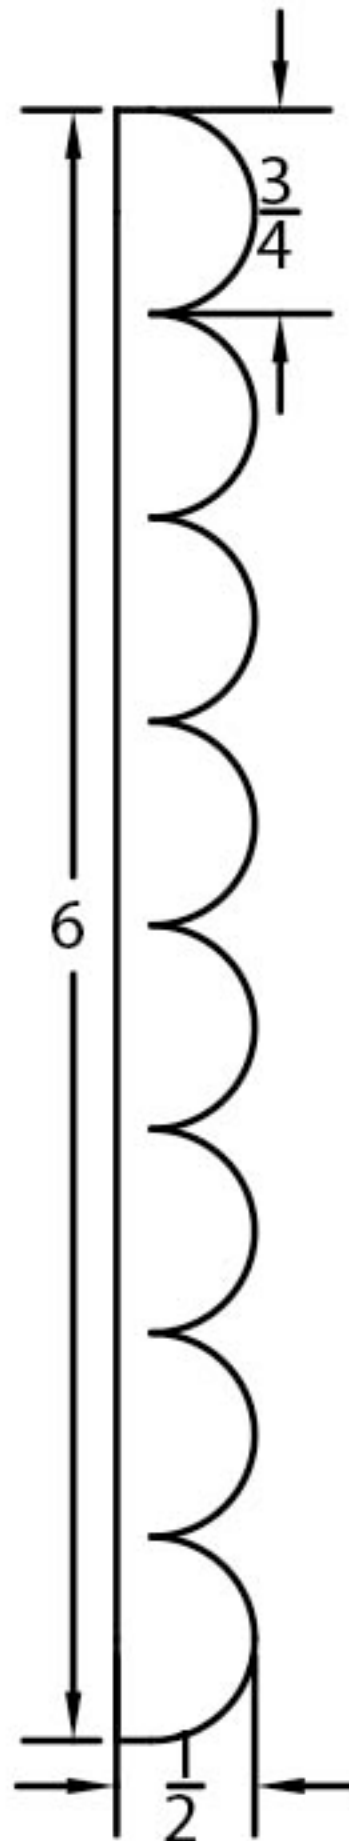


M-1011

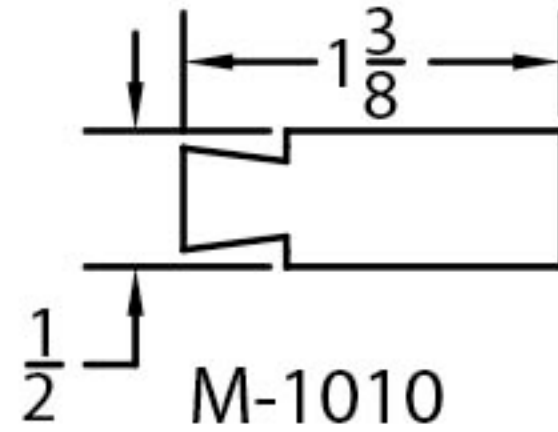


M-1010

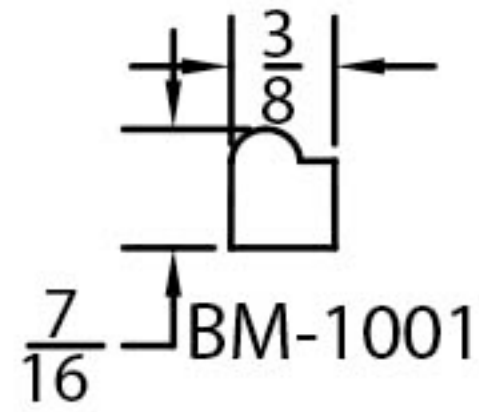





BM-1001

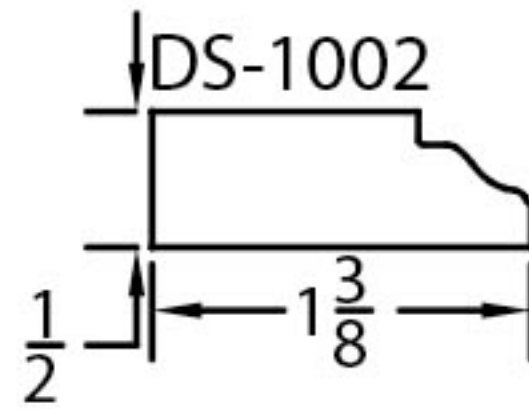





DS-1002

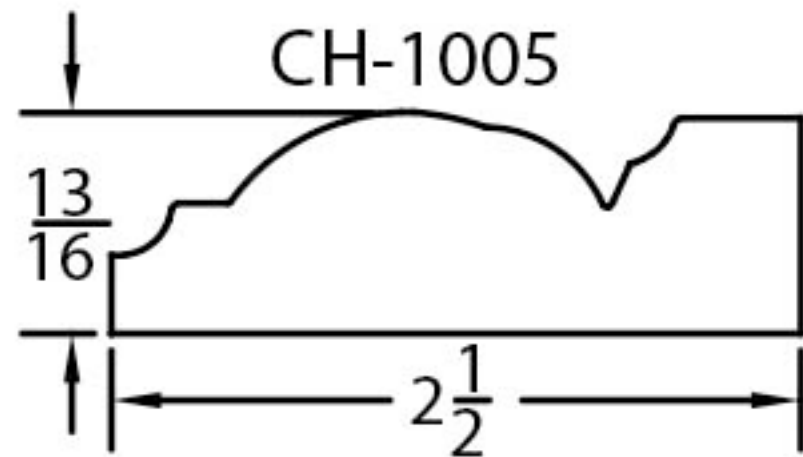


CH-1005

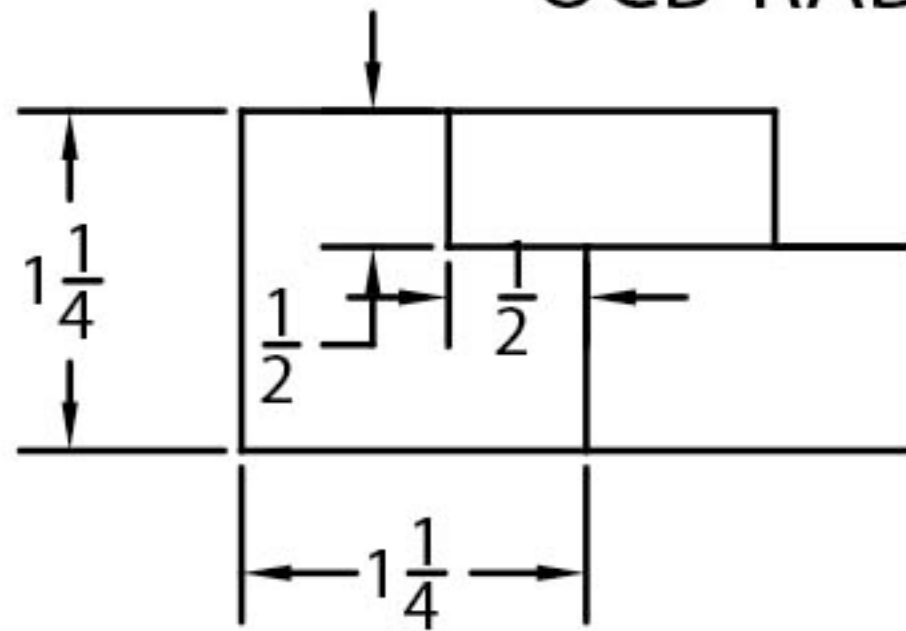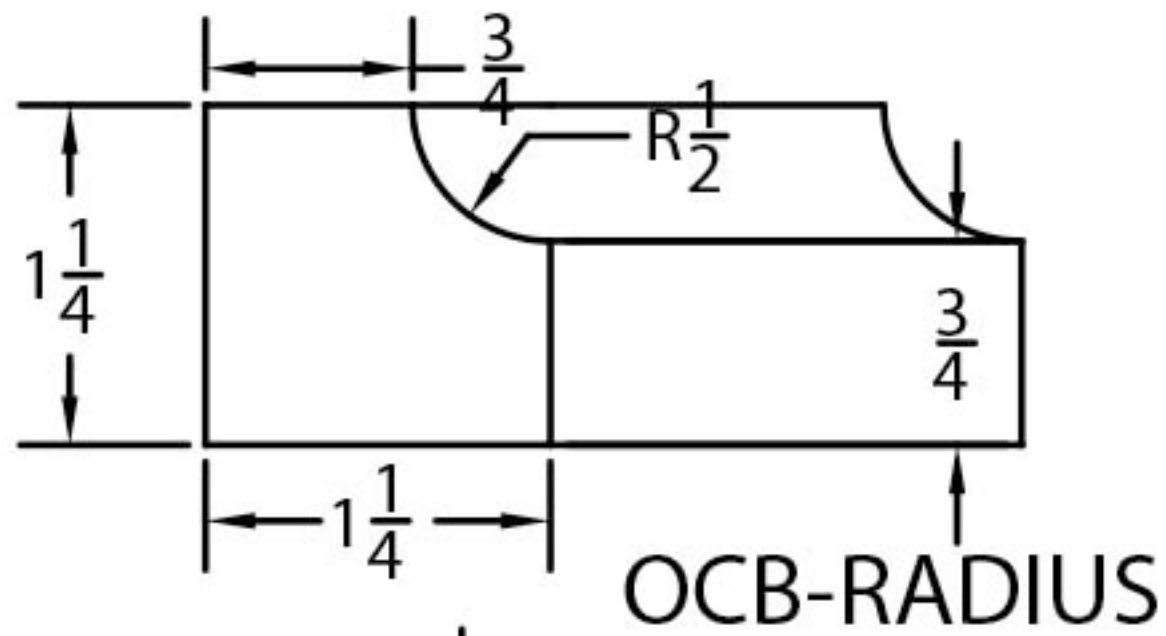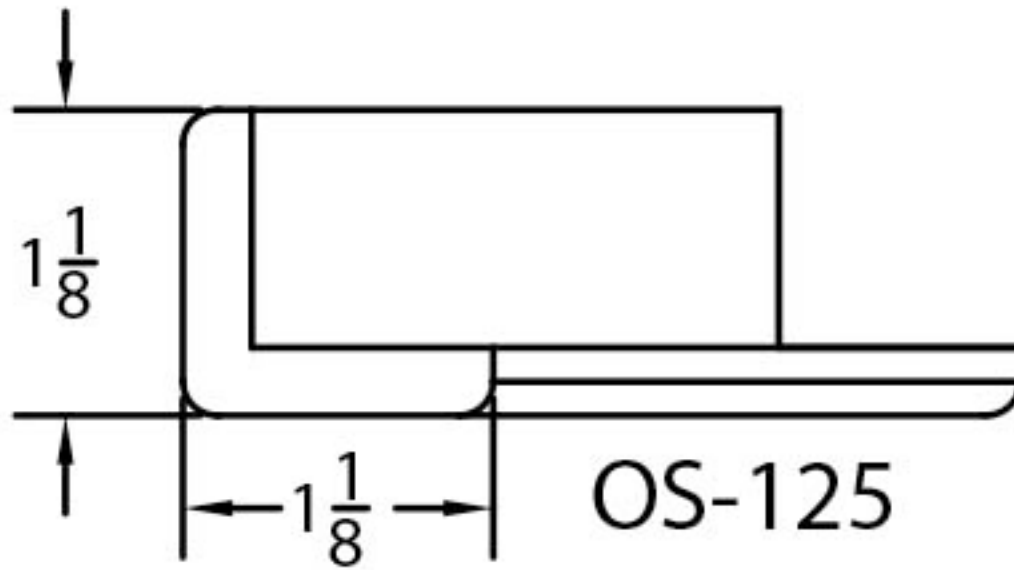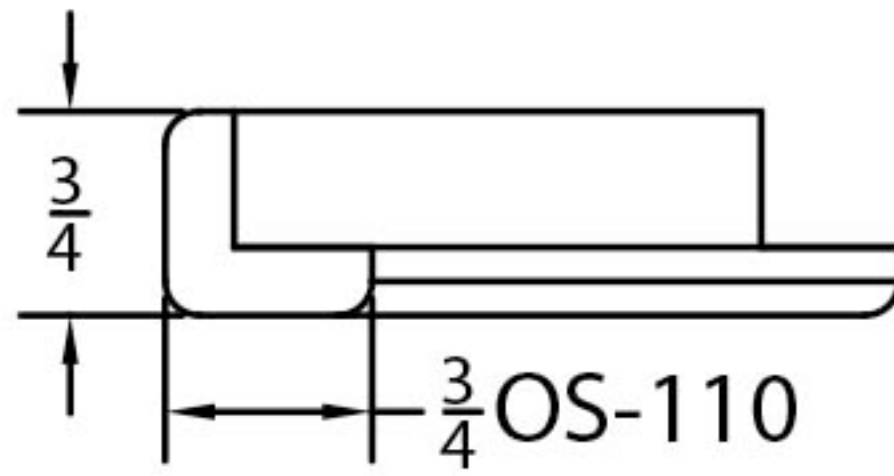


OSC-STOCK

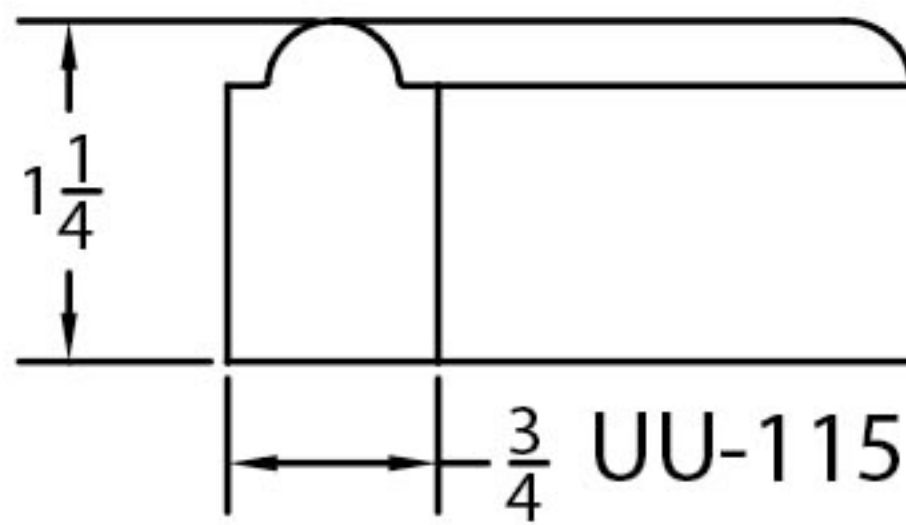
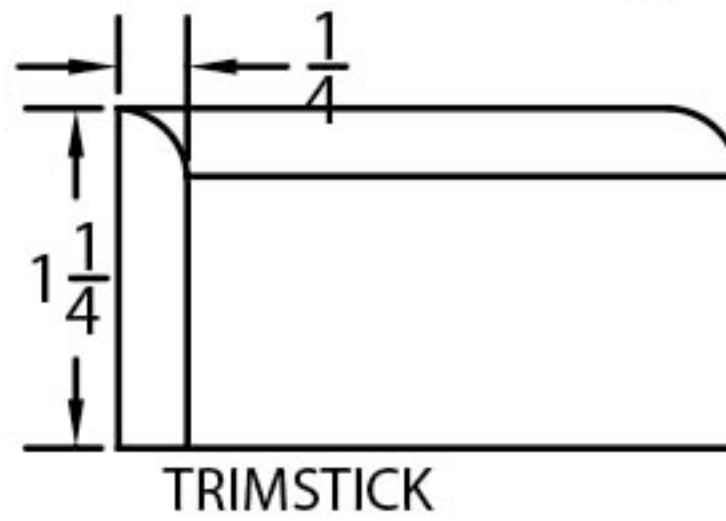
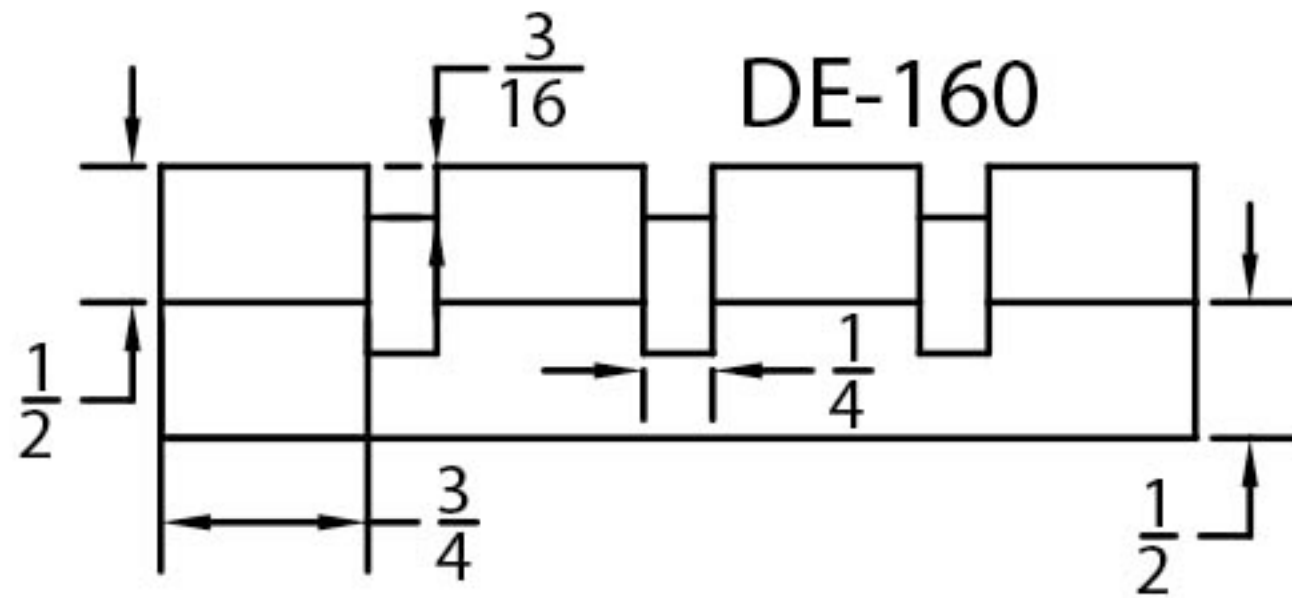
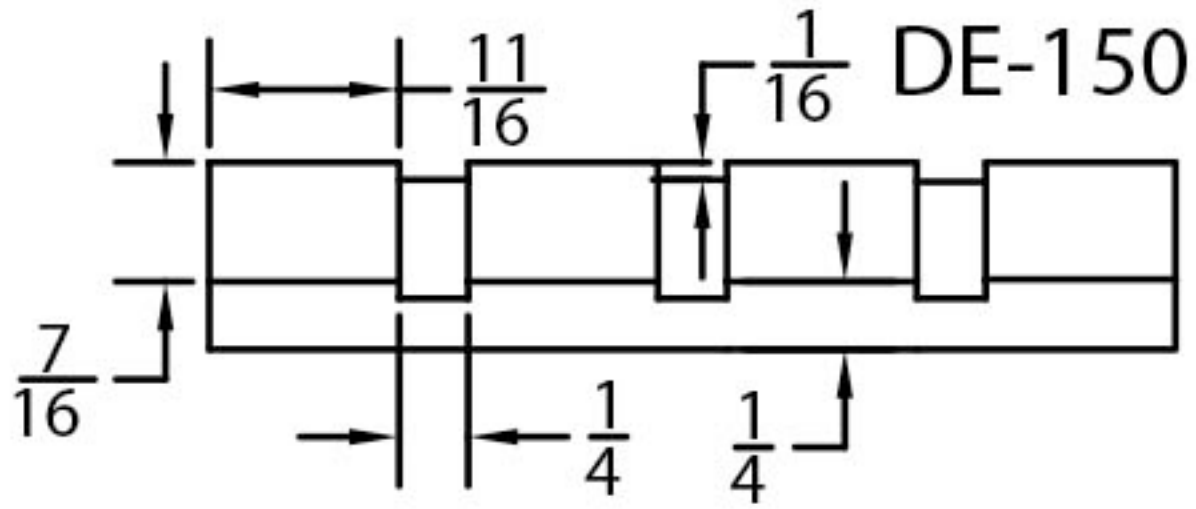


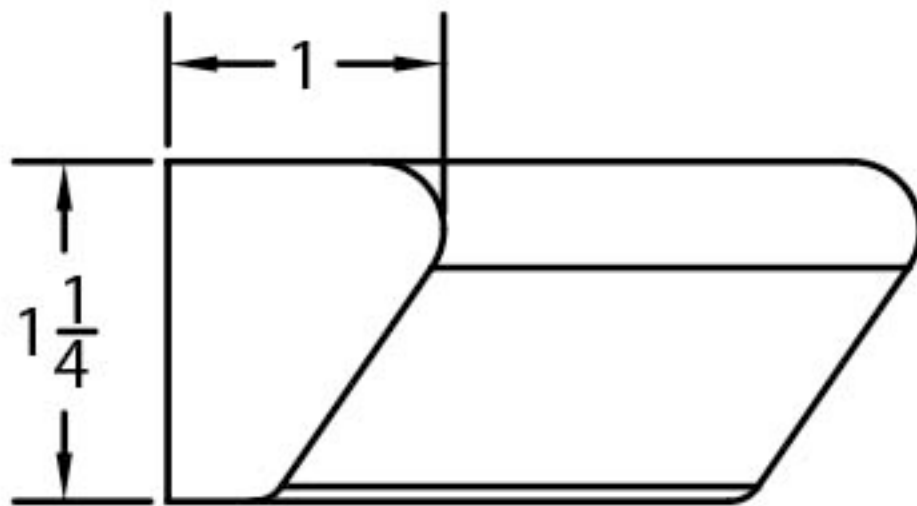


CN-100

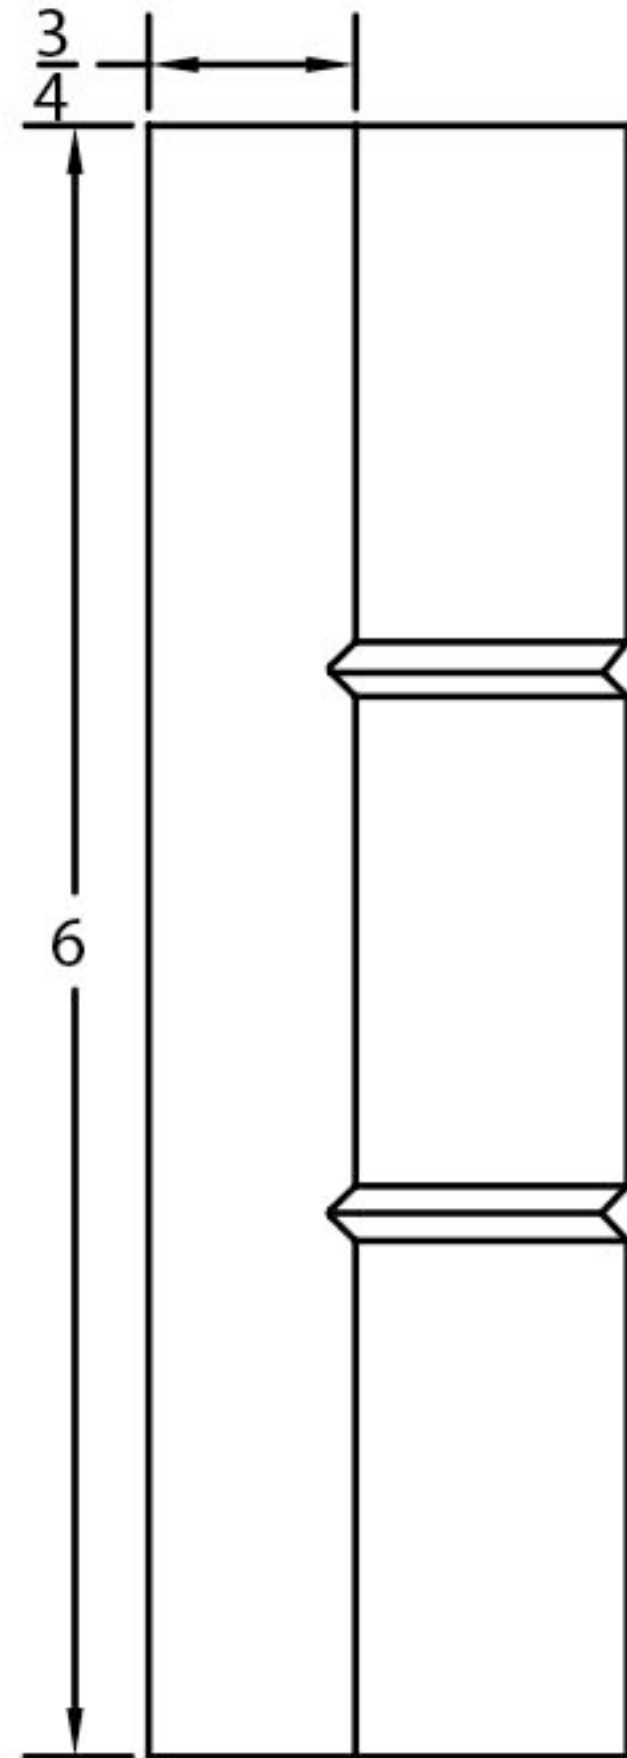


V-GROOVE

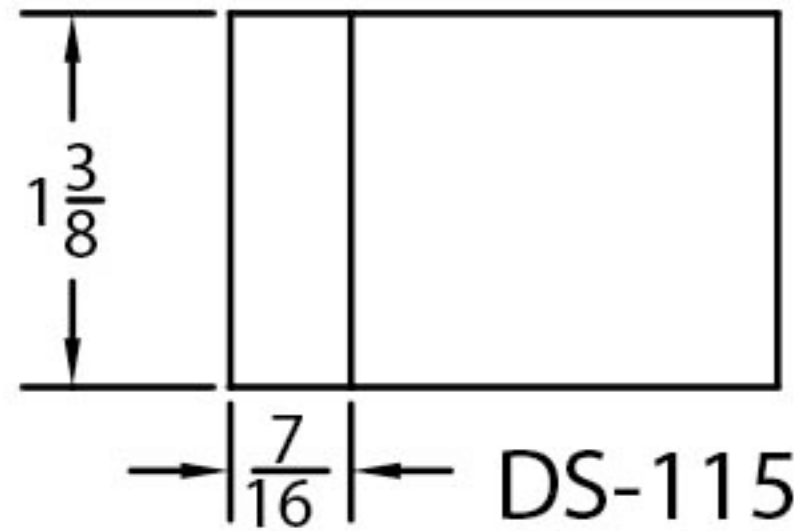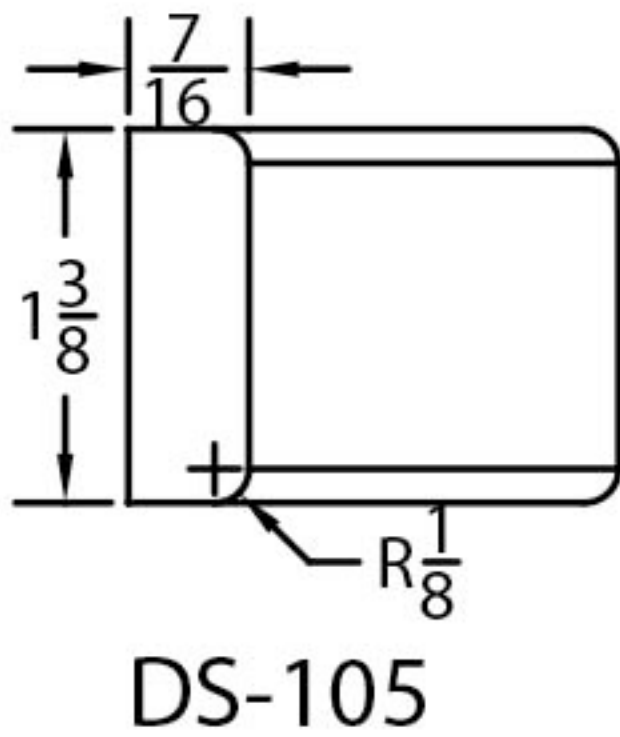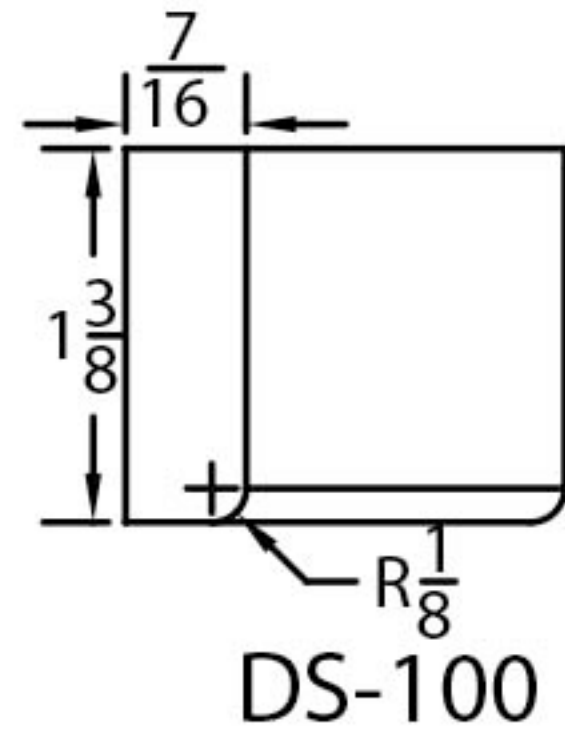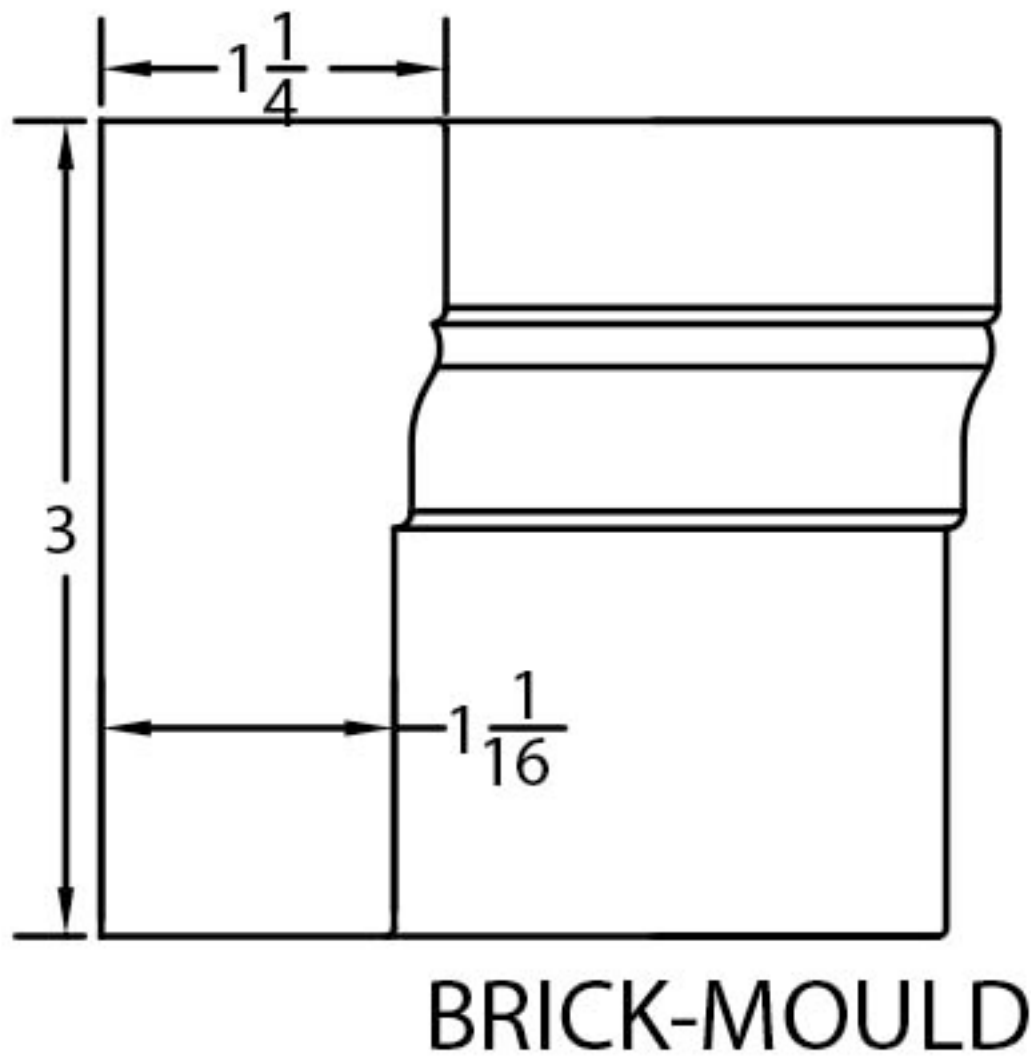


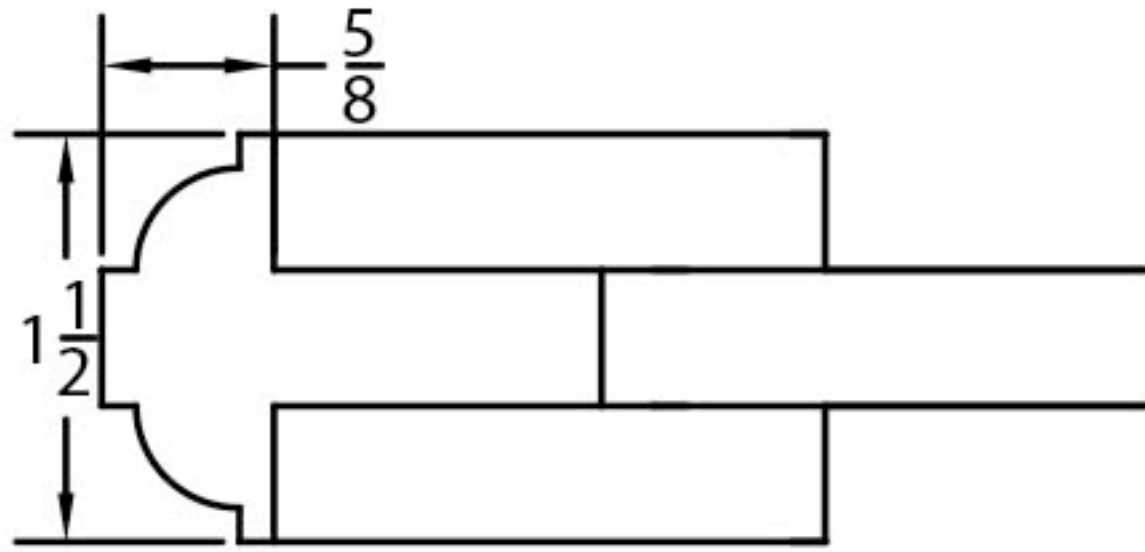


M-100

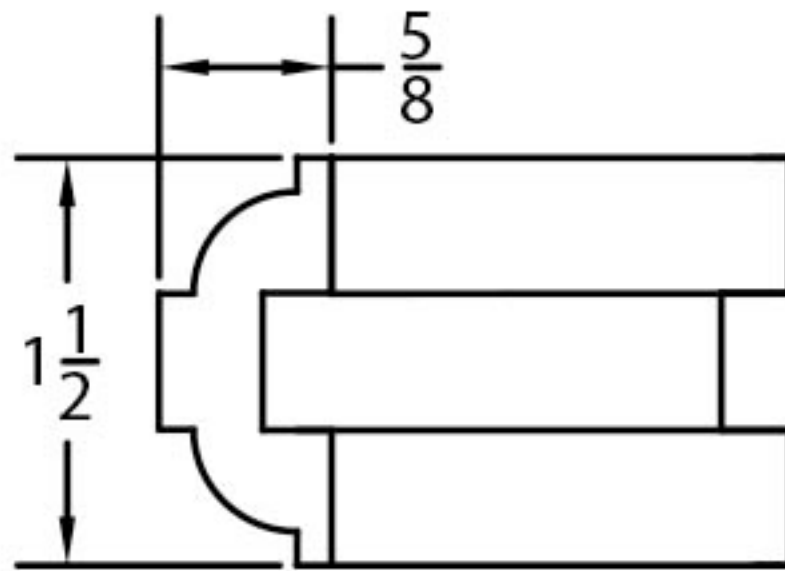


T-300

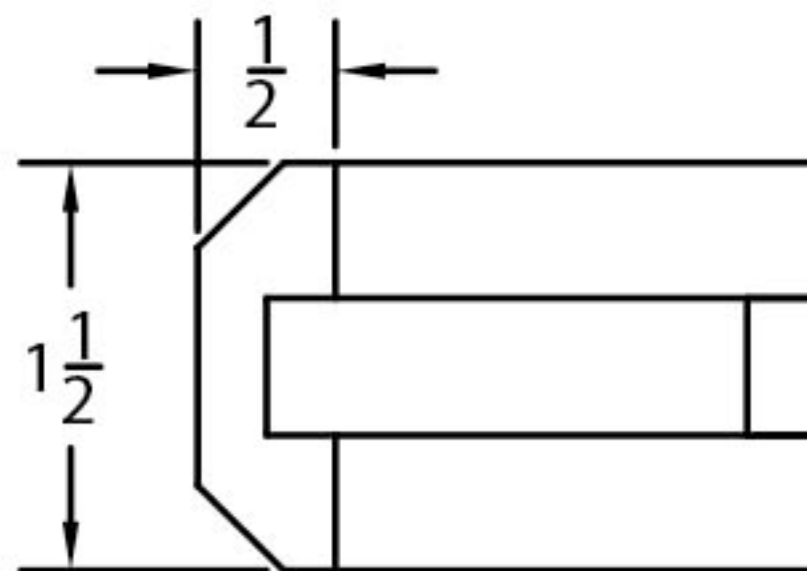


T-400

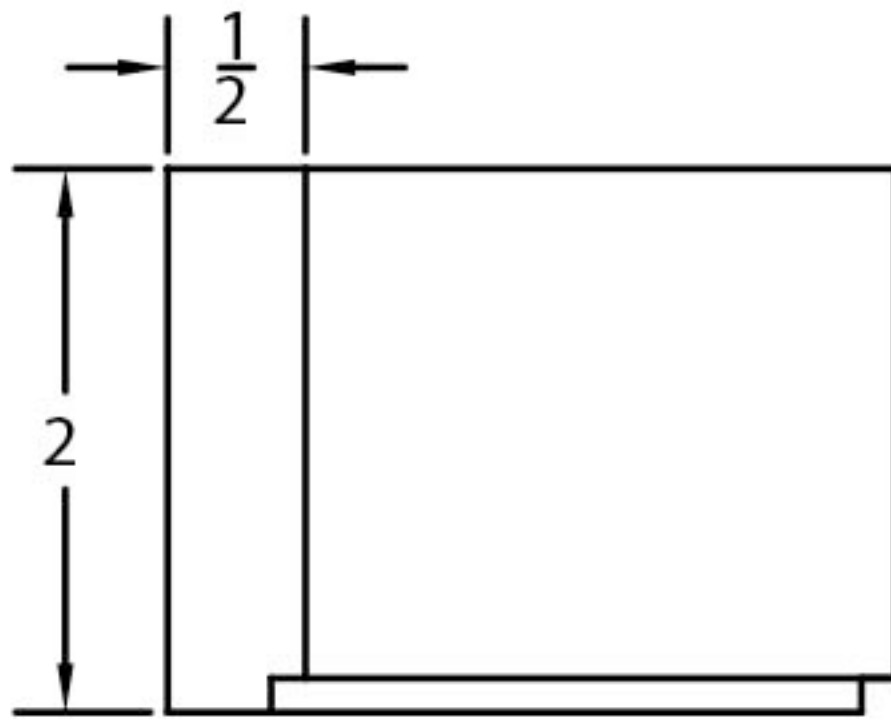

T-100

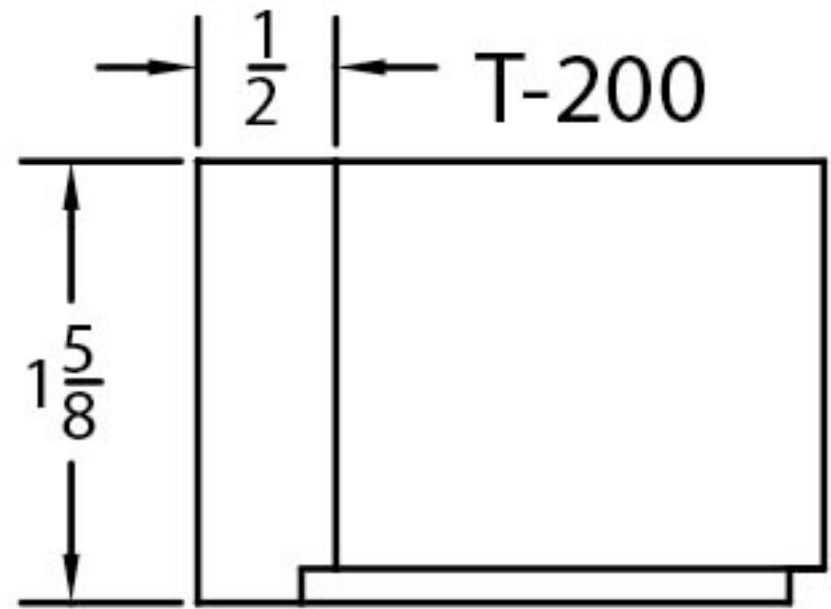

T-200

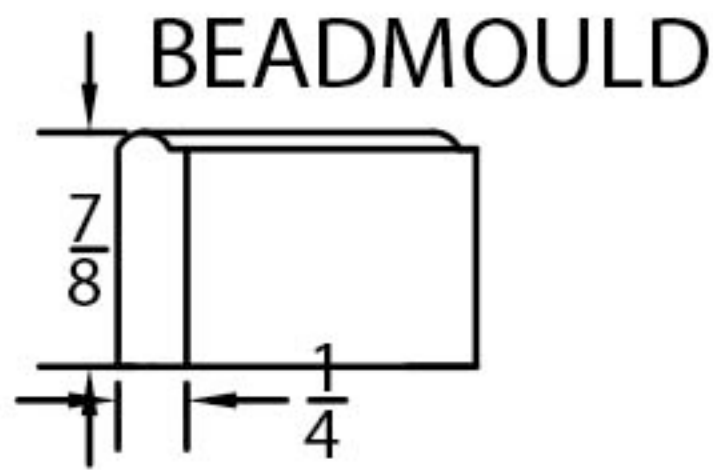

BEADMould

EGG & DART

