


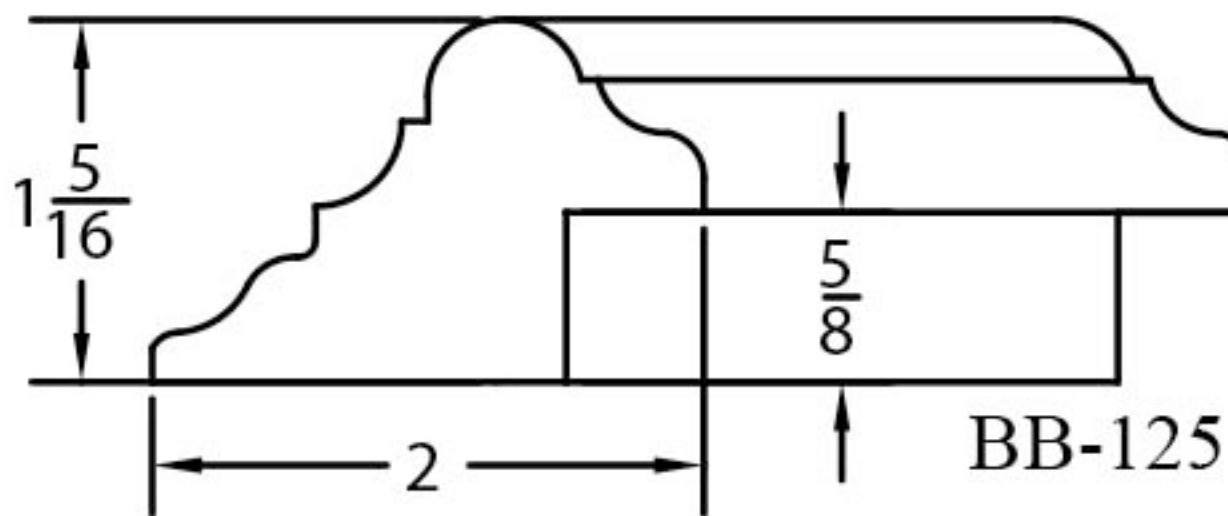
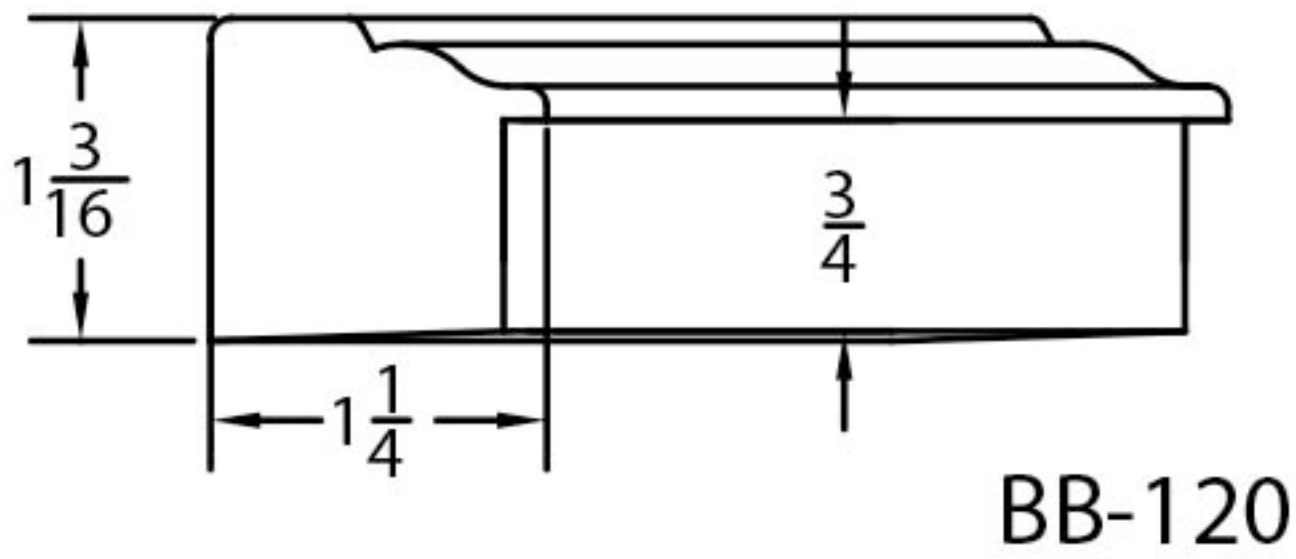


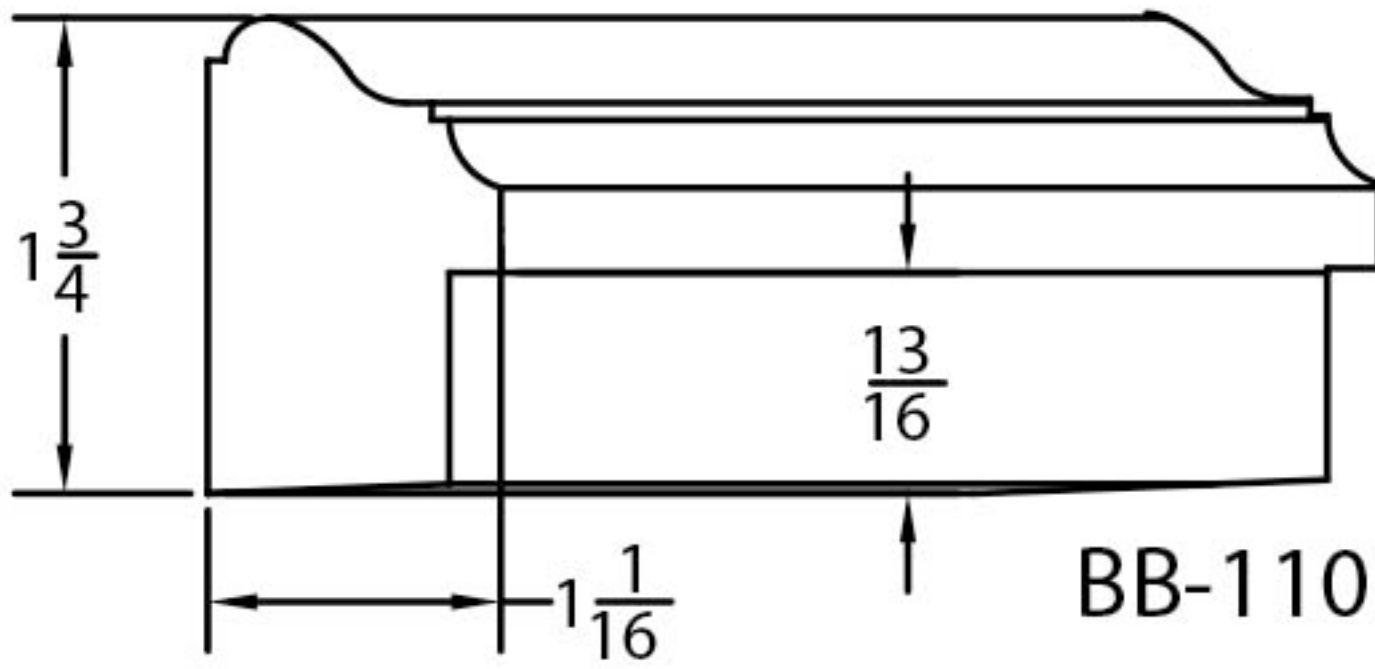


BACK BAND MOULDINGS


For a complete set of Moulding profiles, please visit our website
www.alpinewoodproducts.com

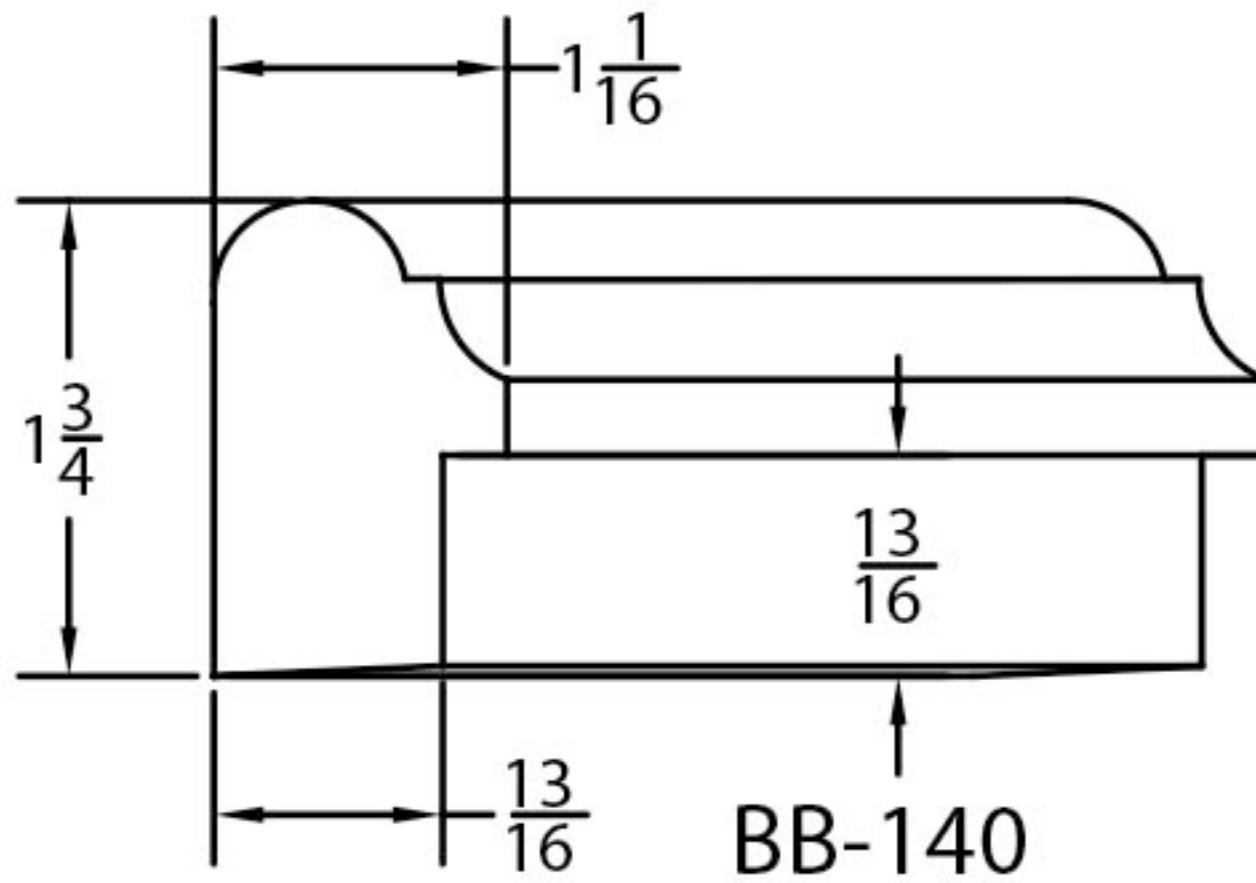

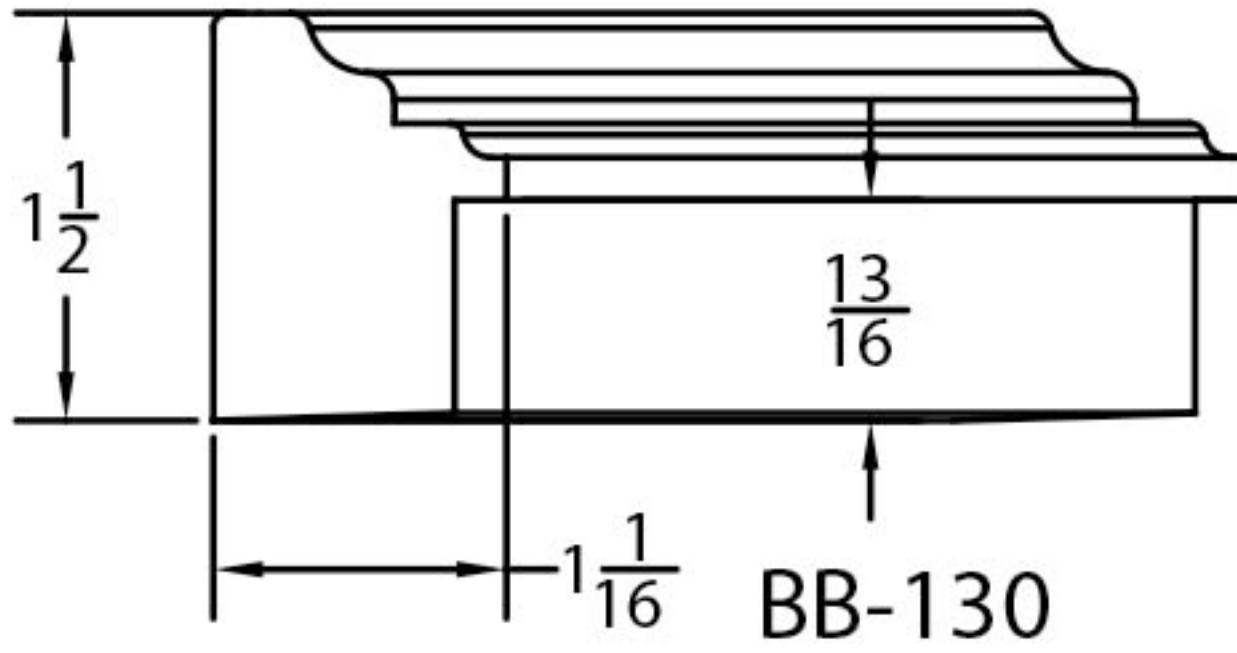


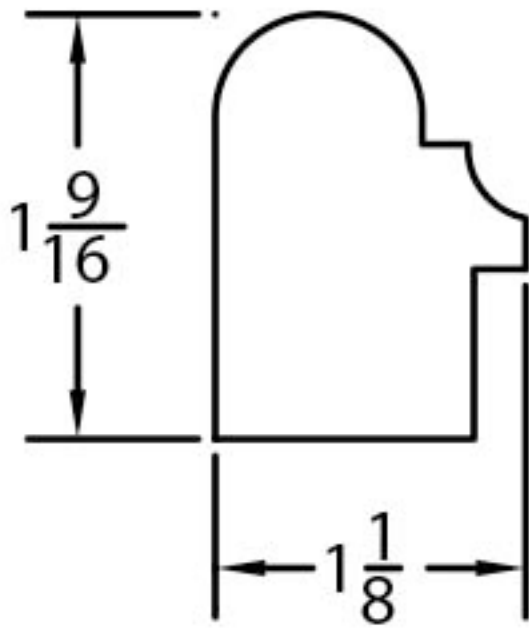


BB-1000

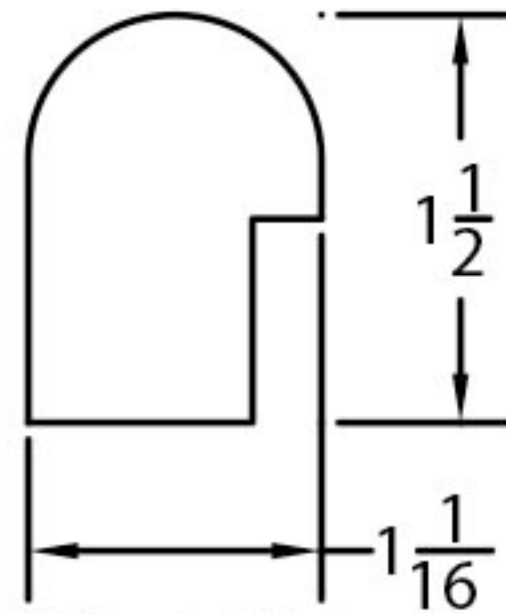


BB-1001

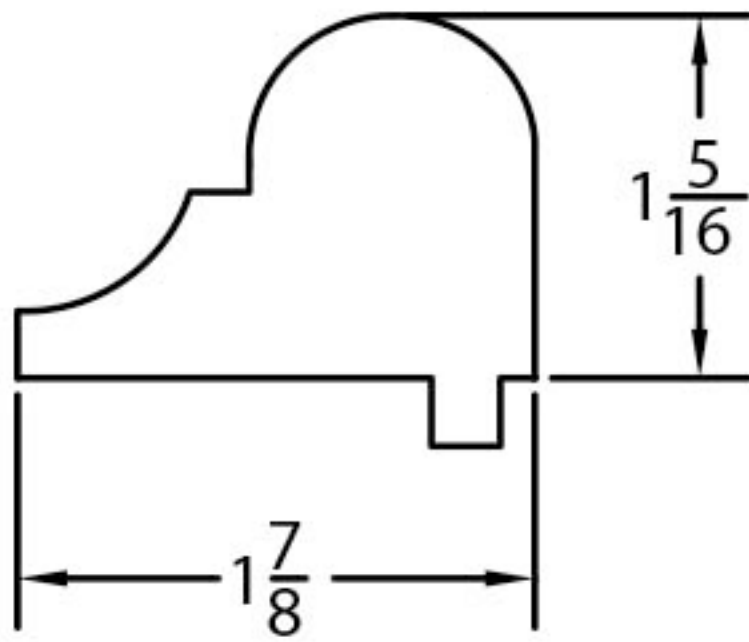


BB-1002

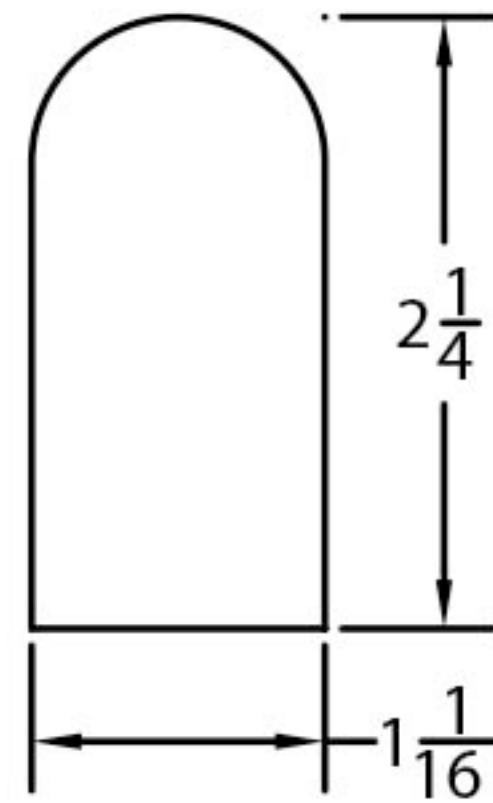


BB-1003

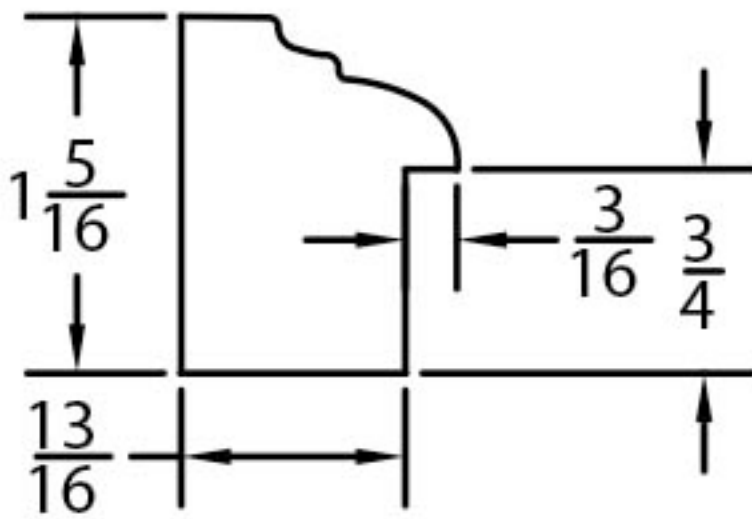


BB-1004

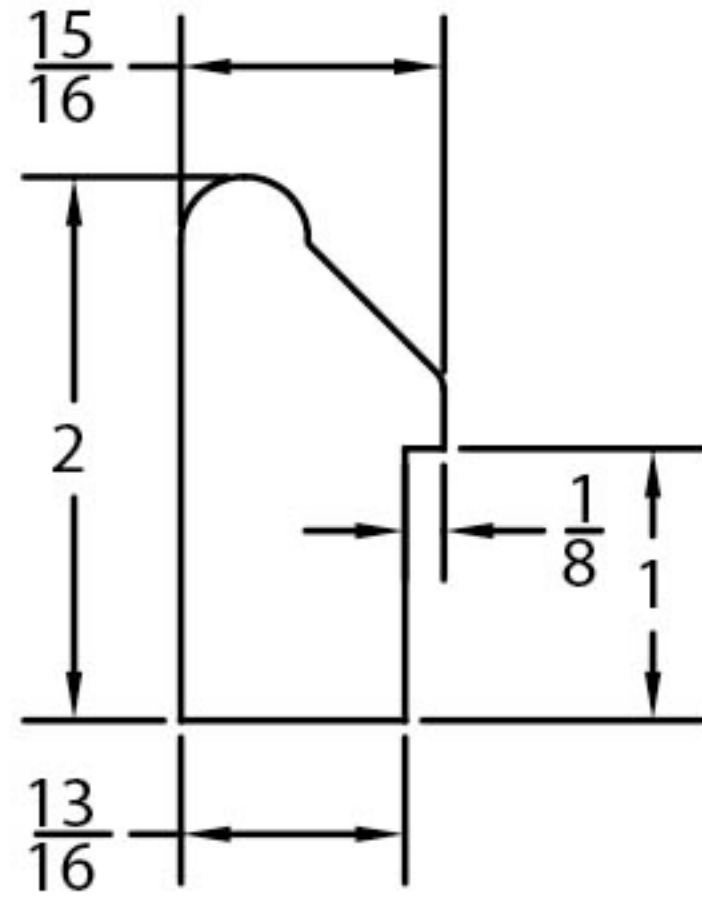


BB-1005

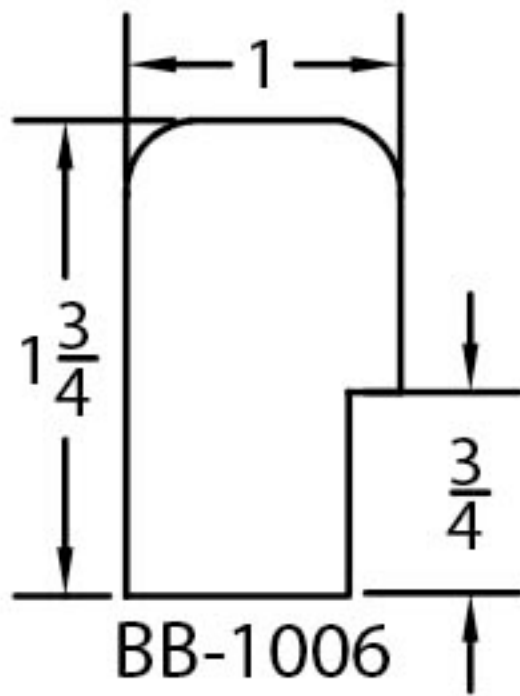


BB-1006

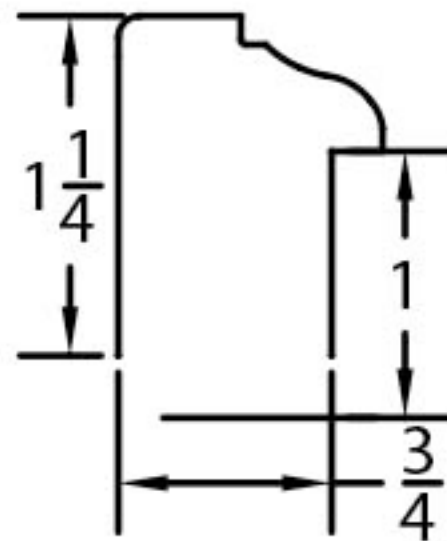


BB-1007

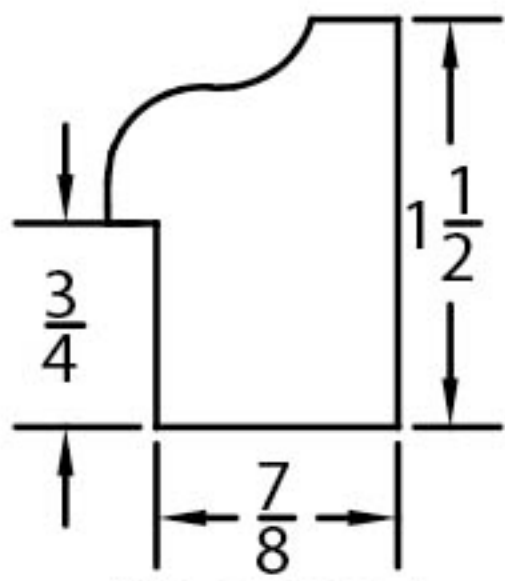


BB-1008A

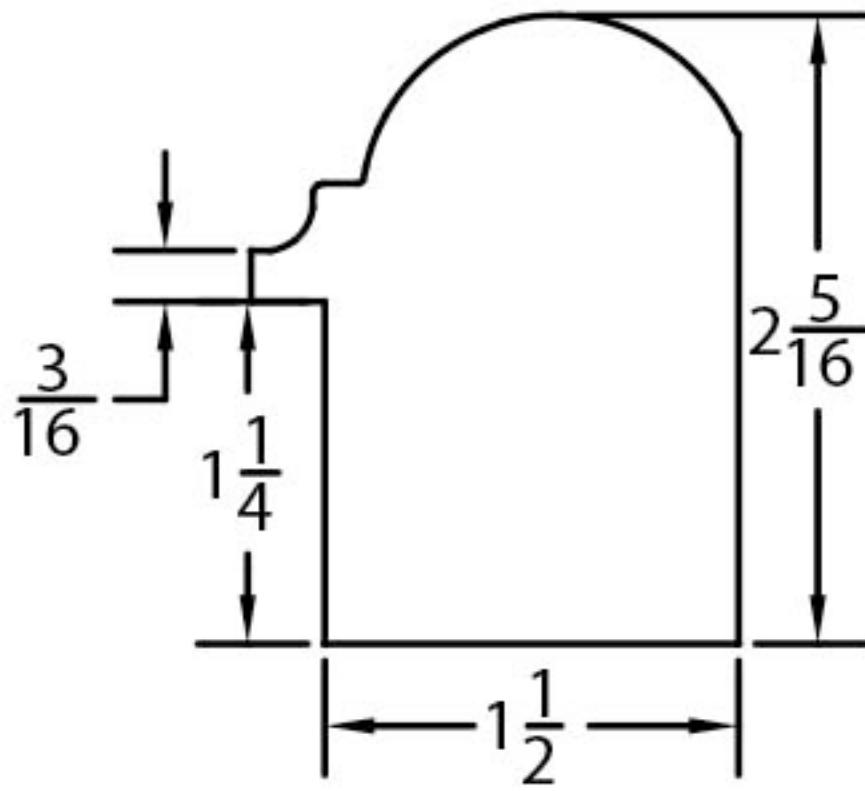


BB-1009

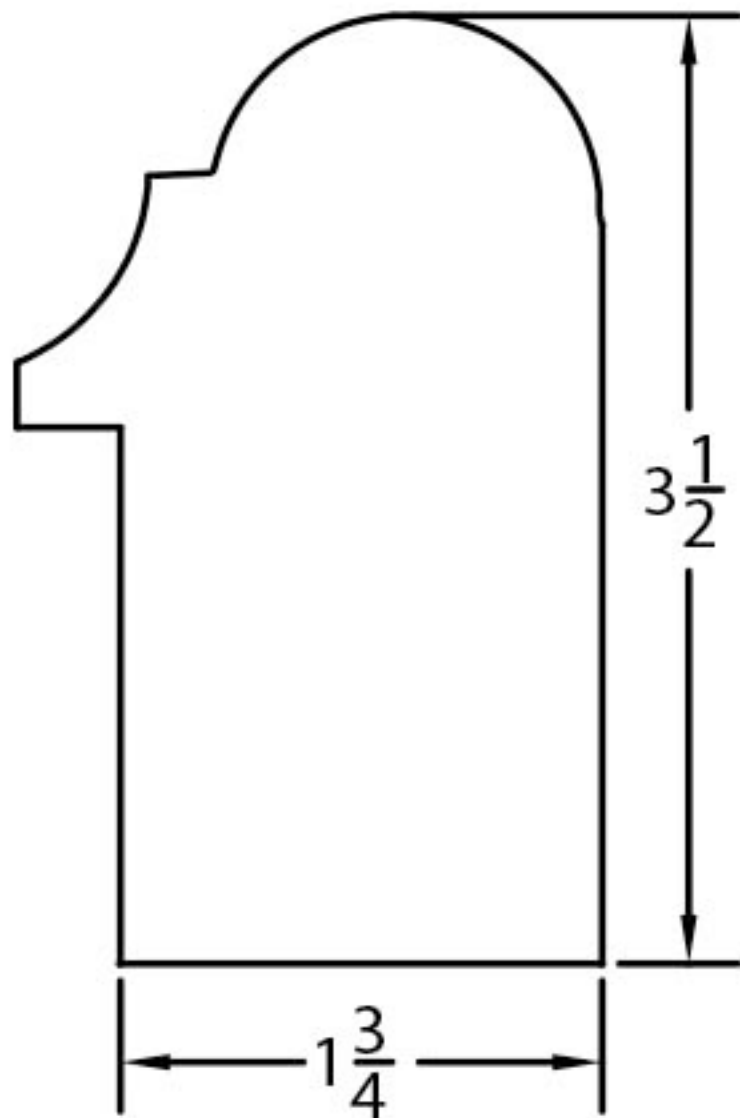

BB 1010

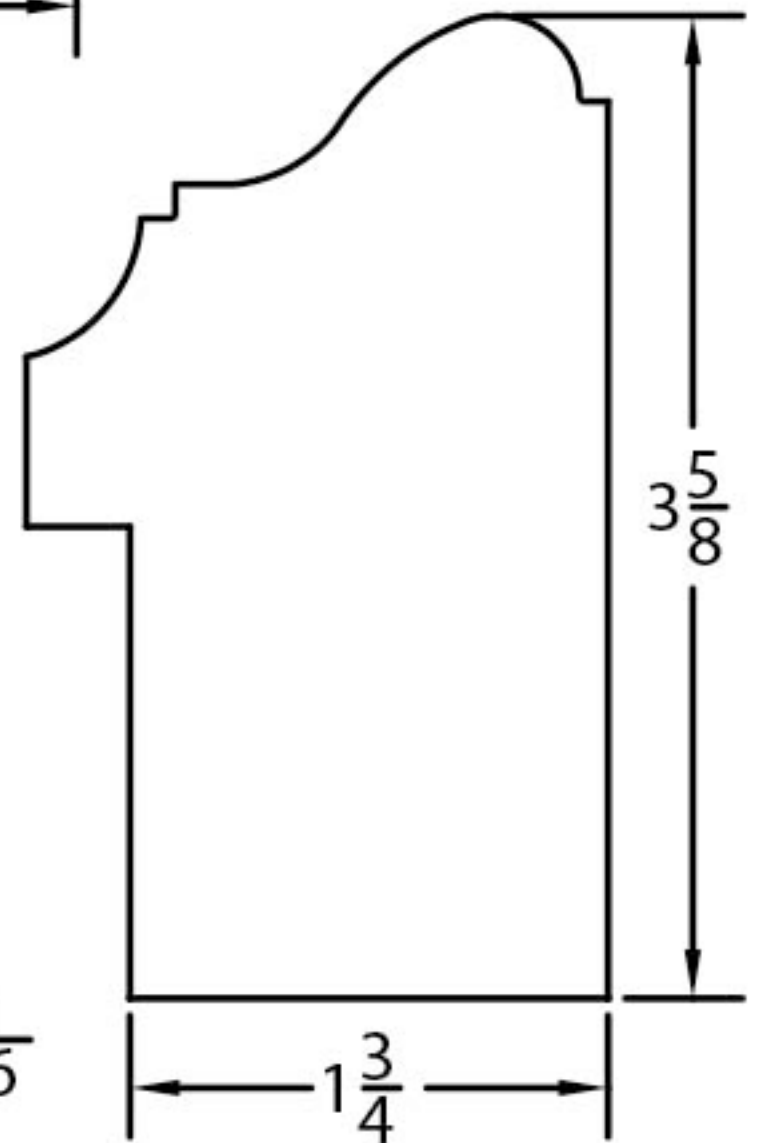

BB 1011

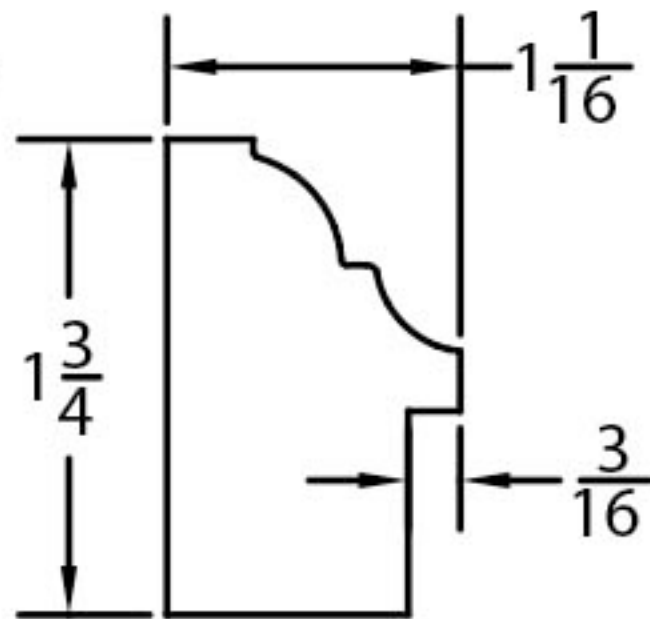

BB-1012